


## CONDENSER REMOVAL/INSTALLATION

id092000803000

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
  - (1) Trunk board (See TRUNK BOARD REMOVAL/INSTALLATION.)
  - (2) Trunk end trim (LH) (See TRUNK END TRIM REMOVAL/INSTALLATION.)
  - (3) Rear scuff plate (LH) (See REAR SCUFF PLATE REMOVAL/INSTALLATION.)
  - (4) Trunk side trim (LH) (See TRUNK SIDE TRIM REMOVAL/INSTALLATION.)
  - (5) D-pillar trim (LH) (See D-PILLAR TRIM REMOVAL/INSTALLATION.)
3. Disconnect the connector.

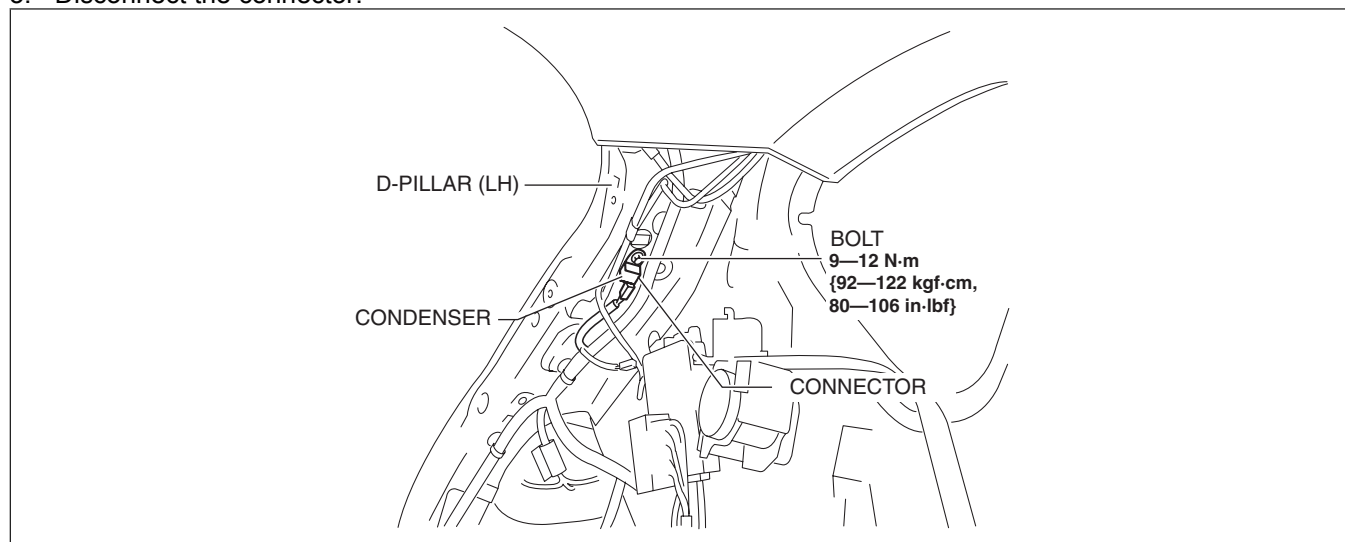


ac5jjw00000172

4. Remove the bolts.
5. Remove the condenser.
6. Install in the reverse order of removal. (See Condenser Installation Note.)

### Condenser Installation Note

- Align with the D-pillar position and install the condenser.

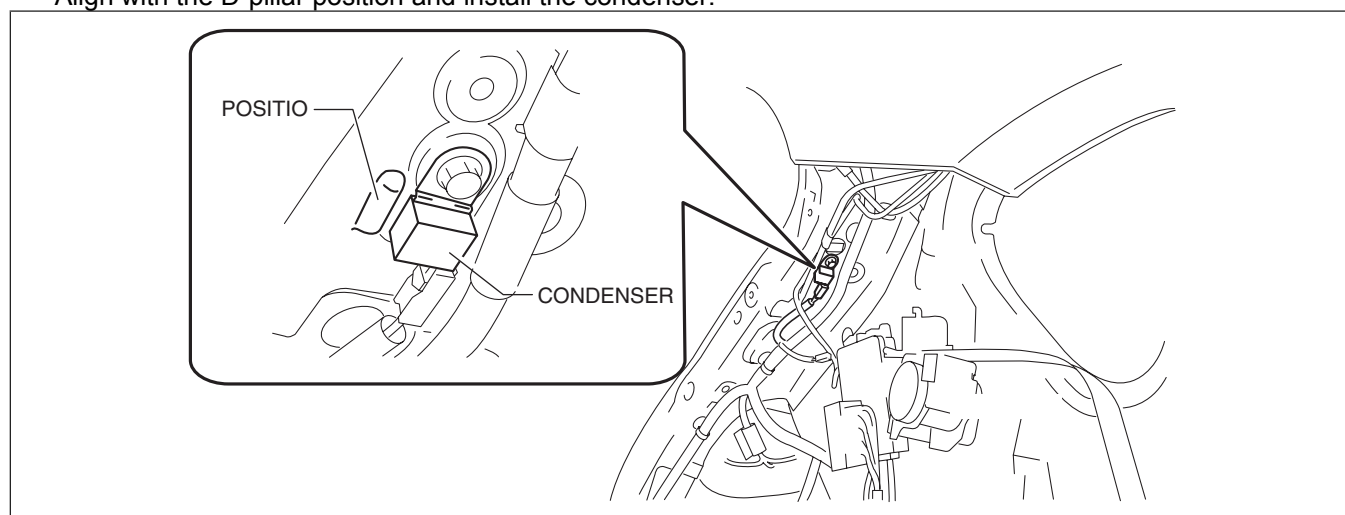

ac5wzw000005157