


OIL PUMP DISASSEMBLY

id051700660800

Structural View

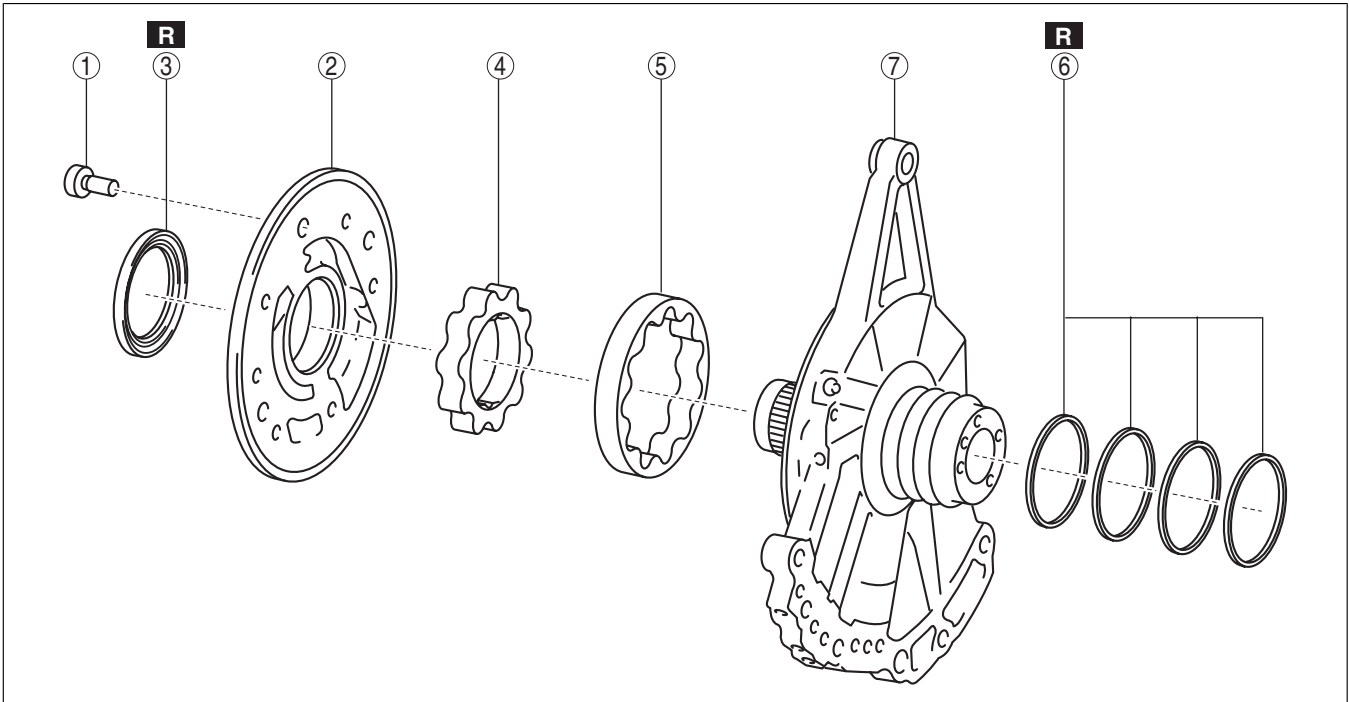

azzjjw00001431


1	7 bolts
2	Oil pump cover
3	Oil seal
4	Inner rotor

5	Outer rotor
6	Seal ring
7	Oil pump housing


Disassembly Procedure

1. Remove the oil pump cover using the following procedure:

(1) Remove the bolts shown in the figure.

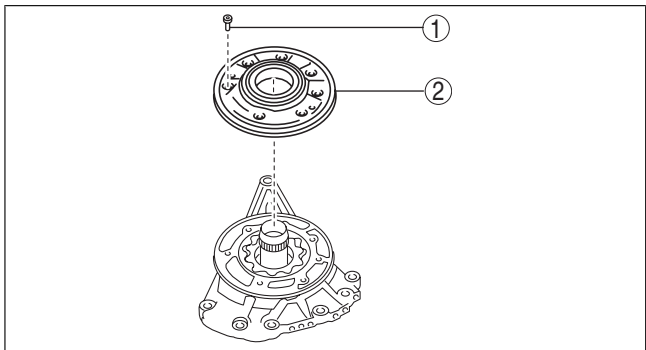


azzjjw00000833

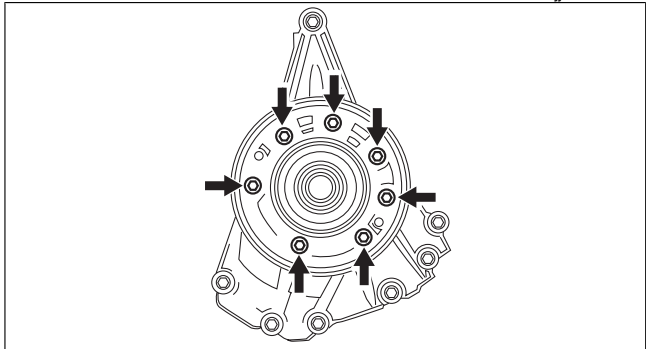

azzjjw00000834


(2) Remove the oil pump cover.

1	7 bolts
2	Oil pump cover

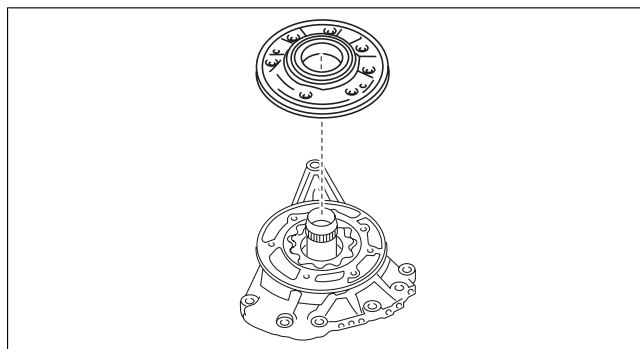


azzjiw00000835

2. Remove the oil seal.

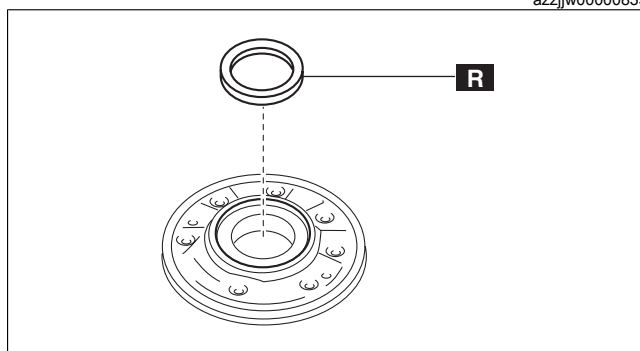


azzjiw00000836

3. Remove the inner rotor.

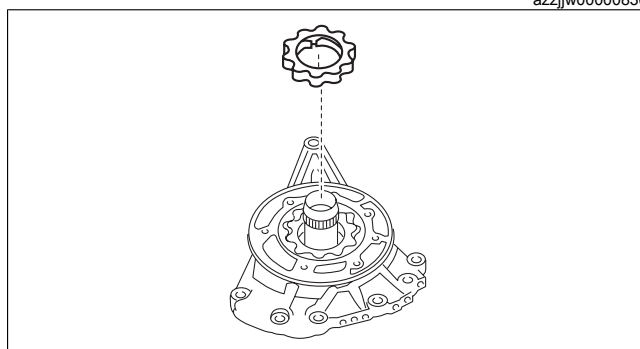


azzjiw00000837

4. Remove the outer rotor.

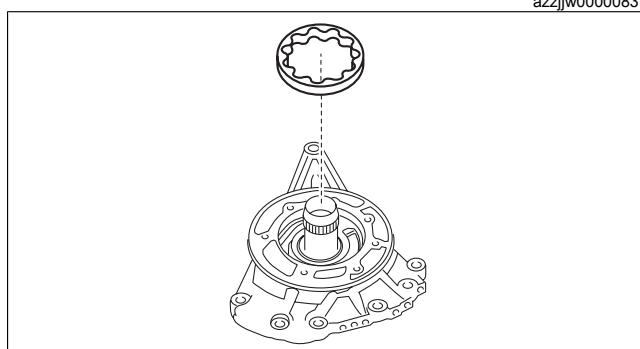

azzjiw00000838

5. Remove the seal rings.
6. Clean the disassembled parts. (See AUTOMATIC TRANSAXLE CLEANING.)
7. Perform the following inspection and replace a malfunctioning part with a new one.
 - Visual inspection of parts (See VISUAL INSPECTION OF PARTS [FW6A-EL])(See VISUAL INSPECTION OF PARTS [FW6AX-EL])
 - Oil pump inspection (See OIL PUMP INSPECTION)

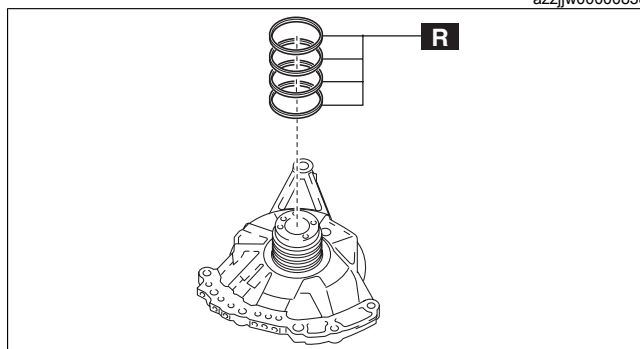

azzjiw00000839