

FUEL PRESSURE SENSOR INSPECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5]

id0140g2801300


Voltage Inspection

Note

- The fuel pressure sensor cannot be removed as a single unit. When replacing the fuel pressure sensor, replace it together with the fuel distributor as a single unit.

1. Connect the M-MDS to the DLC-2.
2. Switch the ignition ON (engine off).
3. Verify that the fuel pressure sensor output voltage (PID: FUEL_PRES) is within the specification. (See ON-BOARD DIAGNOSTIC TEST [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See PCM INSPECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
 - If not within the specification, replace the fuel distributor. (See FUEL INJECTOR REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)

Specification

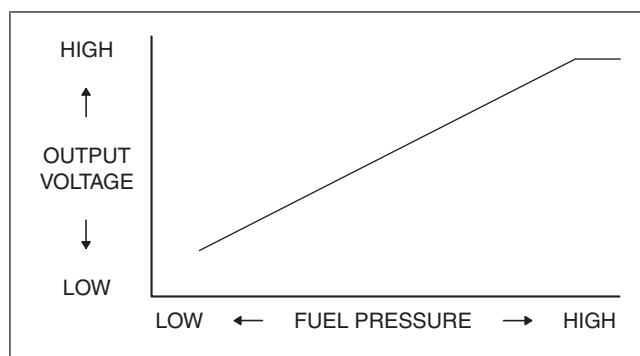

ac5wzw00006328