


NO.1 BLOWN FUSES [SKYACTIV-G 2.0]

id0103e6507100

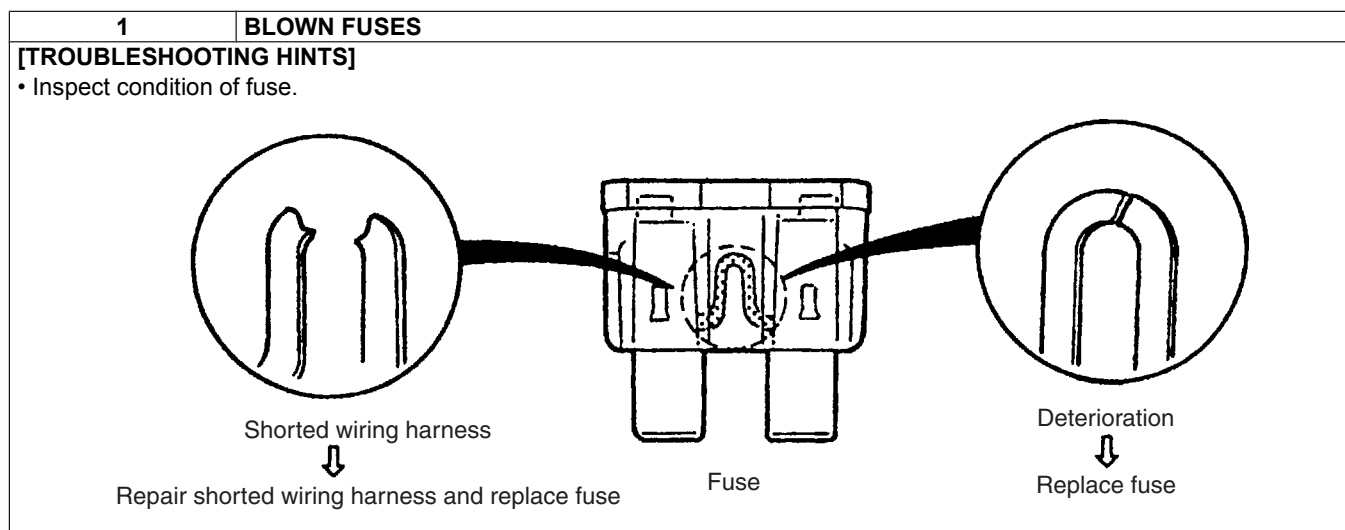

Damaged fuse	Related wiring harness
MAIN	<ul style="list-style-type: none"> FAN GE fuse ADD FAN GE fuse FUEL PUMP fuse IG2 fuse ENG.+B fuse ENG.MAIN fuse INJECTOR fuse EVVT fuse
FAN GE	<ul style="list-style-type: none"> Cooling fan relay No.1
ADD FAN GE	<ul style="list-style-type: none"> Cooling fan relay No.3
ENGINE.IG1	<ul style="list-style-type: none"> Fuel pump relay PCM
FUEL PUMP	<ul style="list-style-type: none"> Fuel pump relay
STARTER	<ul style="list-style-type: none"> Generator Starter
DCDC	<ul style="list-style-type: none"> DC-DC converter
AUDIO2	<ul style="list-style-type: none"> Ignition relay (ACC_STAB)
METER2	<ul style="list-style-type: none"> Ignition relay (IG1_STAB)
C/U IG1	<ul style="list-style-type: none"> DC-DC converter Ignition relay (IG1_STAB)
IG2	<ul style="list-style-type: none"> ACC relay Starter relay
ENG.+B	<ul style="list-style-type: none"> Current sensor PCM
ENG.MAIN	<ul style="list-style-type: none"> Main relay
INJECTOR	<ul style="list-style-type: none"> Fuel injector relay
EVVT	<ul style="list-style-type: none"> Electric variable valve timing relay
ENGINE1	<ul style="list-style-type: none"> Electric variable valve timing relay A/F sensor HO2S MAF sensor/IAT sensor No.1 Intake CMP sensor
ENGINE2	<ul style="list-style-type: none"> Fuel injector relay Purge solenoid valve OCV PCM Engine oil solenoid valve Exhaust CMP sensor Ignition coil/ion sensor No.1 Ignition coil/ion sensor No.2 Ignition coil/ion sensor No.3 Ignition coil/ion sensor No.4

Damaged fuse	Related wiring harness
ENGINE3	<ul style="list-style-type: none">• Cooling fan relay No.1• Cooling fan relay No.2• Cooling fan relay No.3