


REAR WIPER MOTOR INSPECTION

id091900801500


1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Open the liftgate.
3. Remove the following parts:
 - (1) Rear wiper arm and blade (See REAR WIPER ARM AND BLADE REMOVAL/INSTALLATION.)
 - (2) Liftgate upper trim (See LIFTGATE UPPER TRIM REMOVAL/INSTALLATION.)
 - (3) Liftgate side trim (See LIFTGATE SIDE TRIM REMOVAL/INSTALLATION.)
 - (4) Liftgate recess (See LIFTGATE RECESS REMOVAL/INSTALLATION.)
 - (5) Liftgate lower trim (See LIFTGATE LOWER TRIM REMOVAL/INSTALLATION.)
4. Remove the rear wiper motor connector.

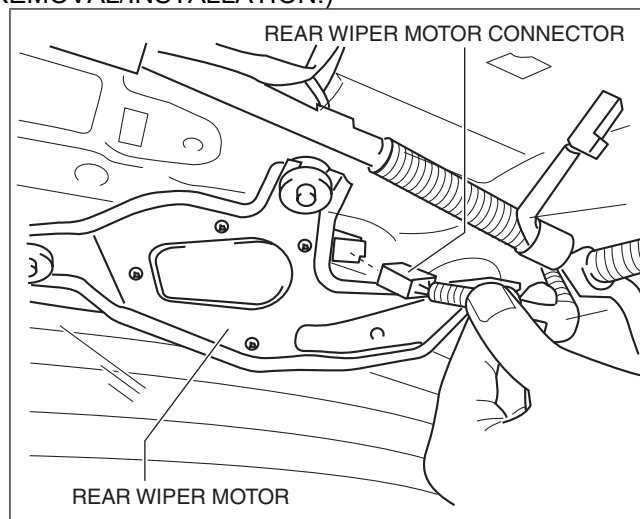

ac5uuw00000809

Rear Wiper Motor Operation Inspection


1. Apply battery positive voltage to rear wiper motor connector terminal B, and connect terminal A to the ground.
2. Verify that the rear wiper motor operates normally.
 - If there is any malfunction, replace the rear wiper motor. (See REAR WIPER MOTOR REMOVAL/INSTALLATION.)

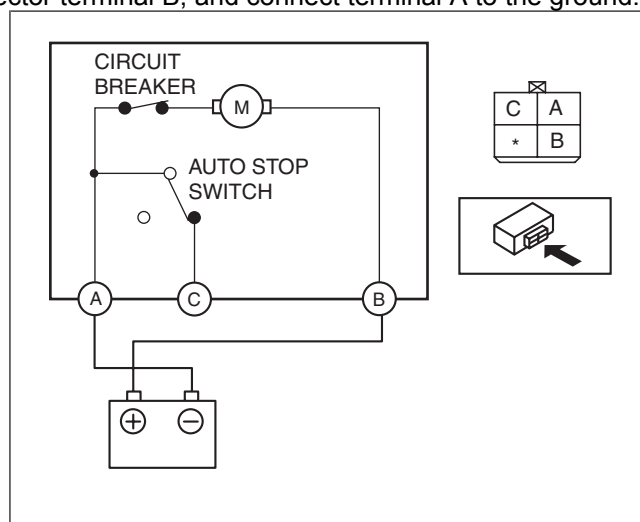

ac5wzw00002974


Auto-stop Operation Inspection

1. Apply battery positive voltage to rear wiper motor connector terminal B, and connect terminals A and C to the ground.
2. Disconnect the ground from rear wiper motor connector terminal A while the rear wiper is operating.

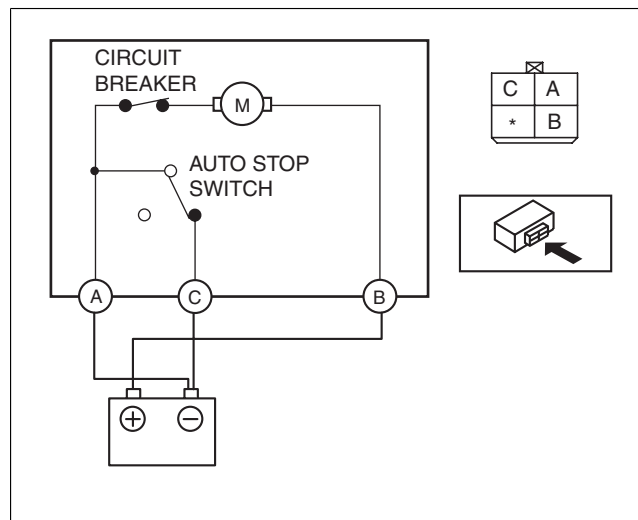

ac5wzw00002975

3. After the windshield wiper motor auto-stop operation, verify that it stops at the park position.
 - If there is any malfunction, replace the rear wiper motor. (See REAR WIPER MOTOR REMOVAL/INSTALLATION.)

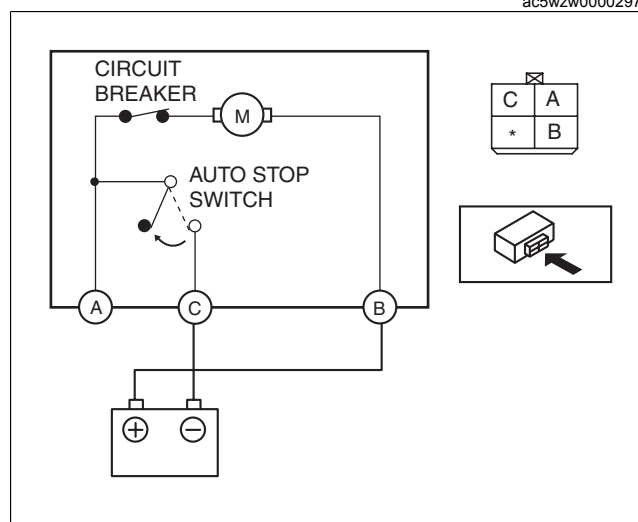

ac5wzw00002976