

NEUTRAL SWITCH [SKYACTIV-G 2.0, SKYACTIV-G 2.5]


id0140g2008100

Purpose/Function

- Detects the neutral position of the shift lever.

Construction


- Installed to the manual transaxle.
- An ON/OFF type switch has been adopted.

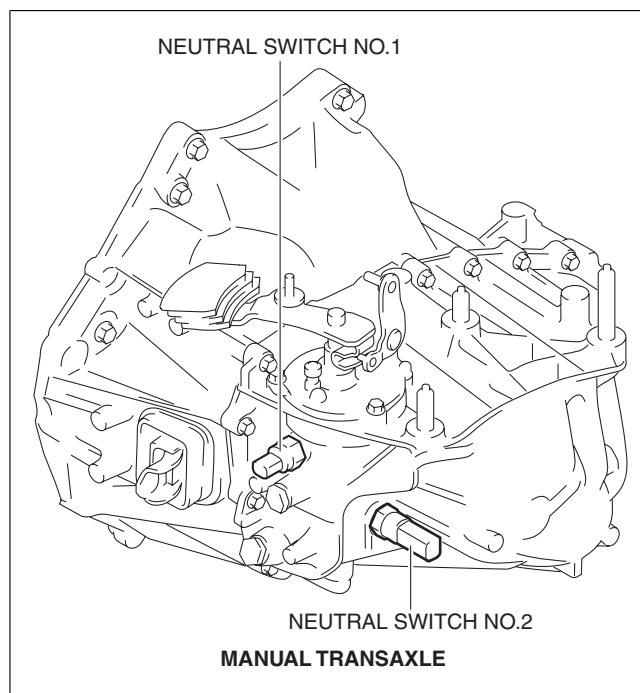

ac5wzn00001574


Operation

- Sends the neutral switch on/off signal to the PCM.

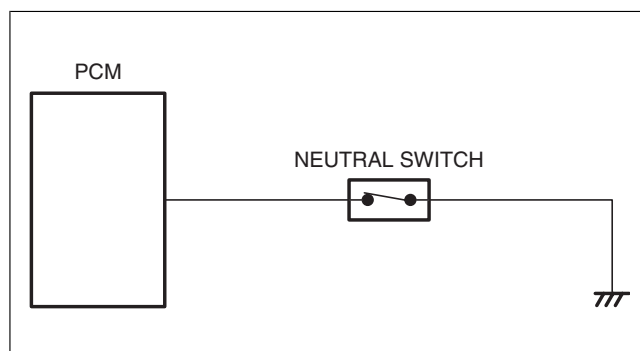


ac5wzn00002417

- The contact point is on when in neutral to output voltage and off when not in neutral.

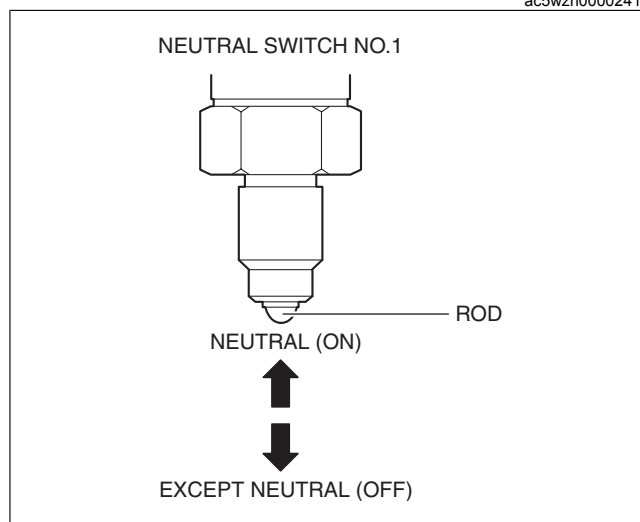

ac5wzn00002418

NEUTRAL SWITCH NO.2

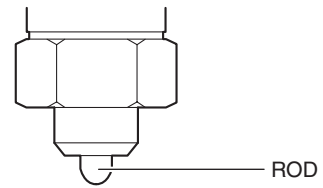

NEUTRAL (ON)



EXCEPT NEUTRAL (OFF)

ac5wzn00002419

Fail-safe

- Function not equipped.