


## GLOW PLUG CONTROL MODULE REMOVAL/INSTALLATION [SKYACTIV-D 2.2]

id0113z7705400

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the battery and the battery tray. (See BATTERY REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)
3. Remove in the order shown in the figure.

|   |                               |
|---|-------------------------------|
| 1 | Glow control module connector |
| 2 | Glow control module           |

4. Install in the reverse order of removal.

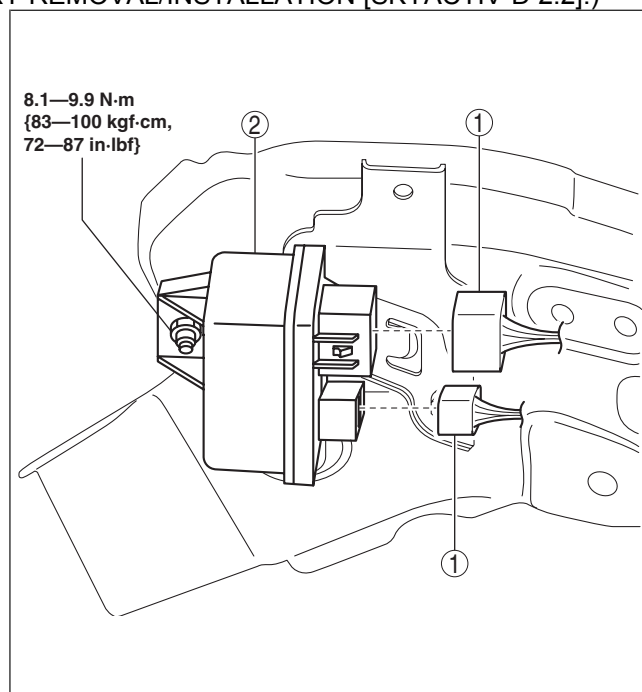

ac5wzw00004705