


## BUMPER SLIDER REMOVAL/INSTALLATION

id091000822500

### Front Bumper Slider

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the seal board upper. (See SEAL BOARD UPPER REMOVAL/INSTALLATION.)
3. Remove the front bumper. (See FRONT BUMPER REMOVAL/INSTALLATION.)
4. Remove bolts A.

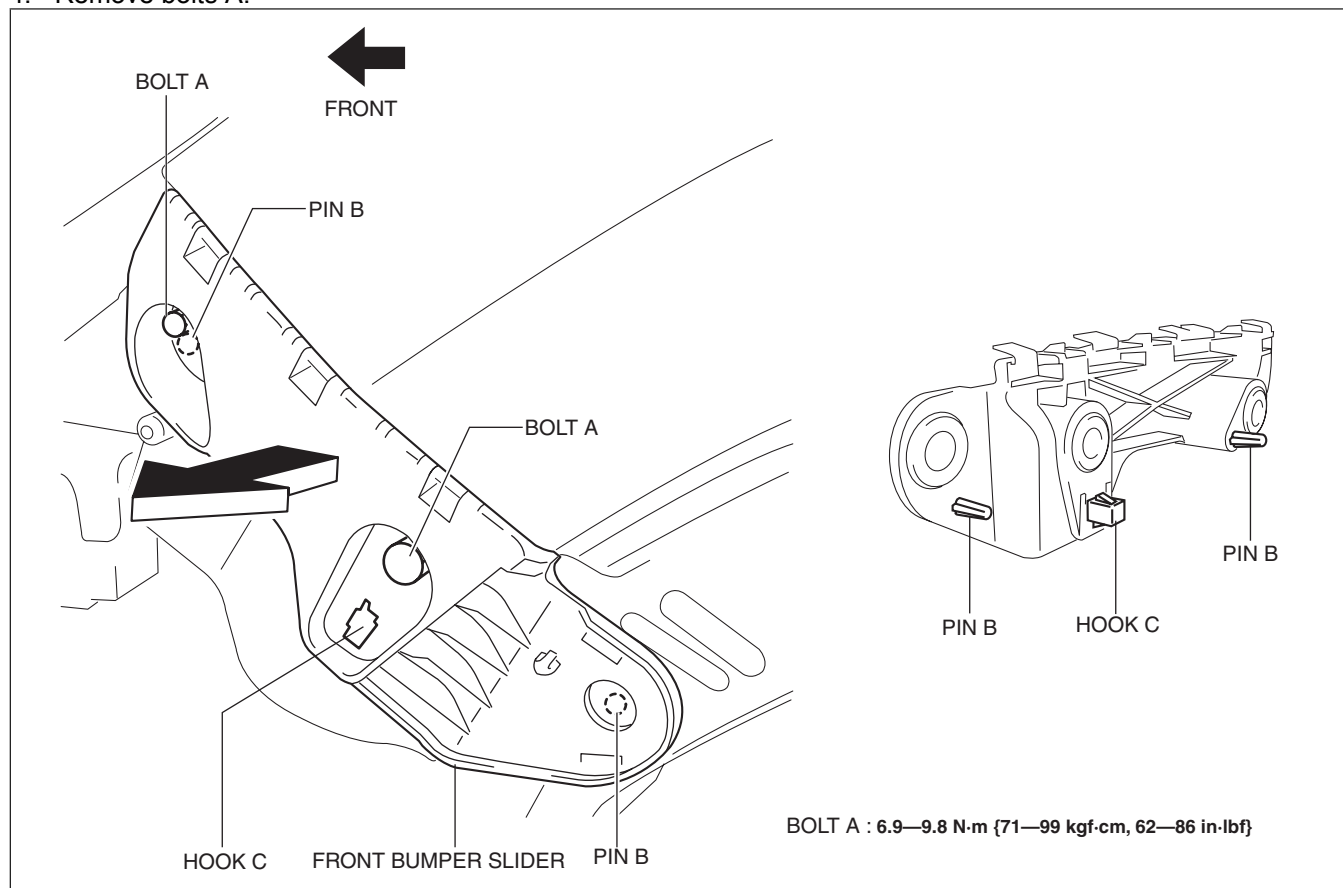


5. Pull the front bumper slider in the direction of the arrow while detaching pins B and hook C.
6. Install in the reverse order of removal.
7. Adjust the headlight aiming. (See HEADLIGHT AIMING.)
8. Adjust the front fog light aiming. (with front fog lights) (See FRONT FOG LIGHT AIMING.)

### Rear Bumper Slider

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the rear combination light. (See REAR COMBINATION LIGHT REMOVAL/INSTALLATION.)
3. Remove the rear splash shield. (See SPLASH SHIELD REMOVAL/INSTALLATION.)
4. Remove the rear bumper. (See REAR BUMPER REMOVAL/INSTALLATION.)
5. Remove screw A.

ac5wzw00003098

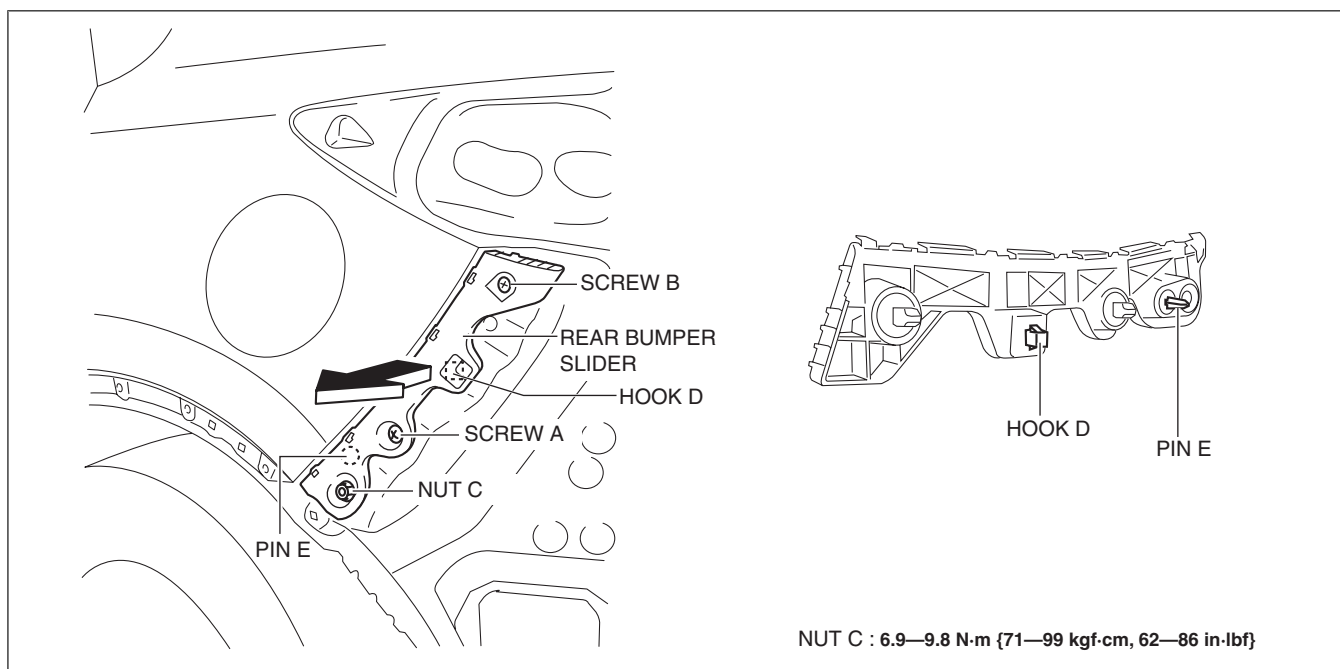

ac5wzw00003099

6. Remove screw B.
7. Remove nut C.
8. Pull the rear bumper slider in the direction of the arrow while detaching hook D and pin E.
9. Install in the reverse order of removal.