

---

## AIR FILTER


id071100105500

### Purpose

- The air filter removes pollen and dust in the intake air and purifies air flowing into the cabin.

### Function

- The air filter removes pollen and dust using a dust collecting filter.

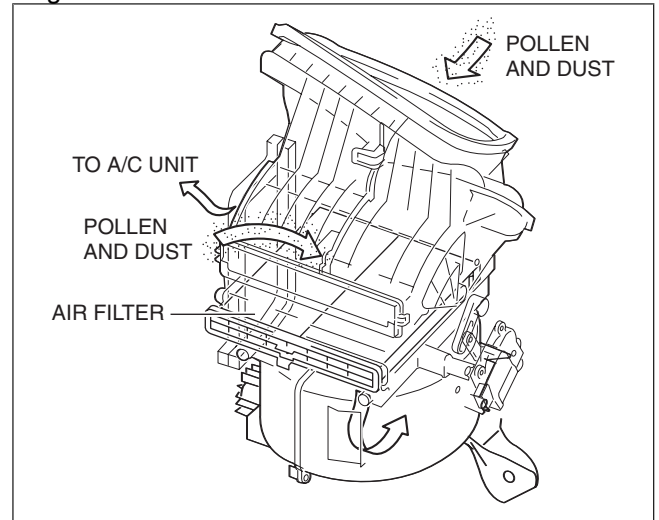

ac5wzn00000760

### Construction

- The air filter is installed to the blower unit.
- It is necessary to periodically replace the air filter because it cannot be reused by cleaning.

### Fail-safe

- Function not equipped.