


LIGHTING SYSTEMS LOCATION INDEX

id091800800100

Exterior

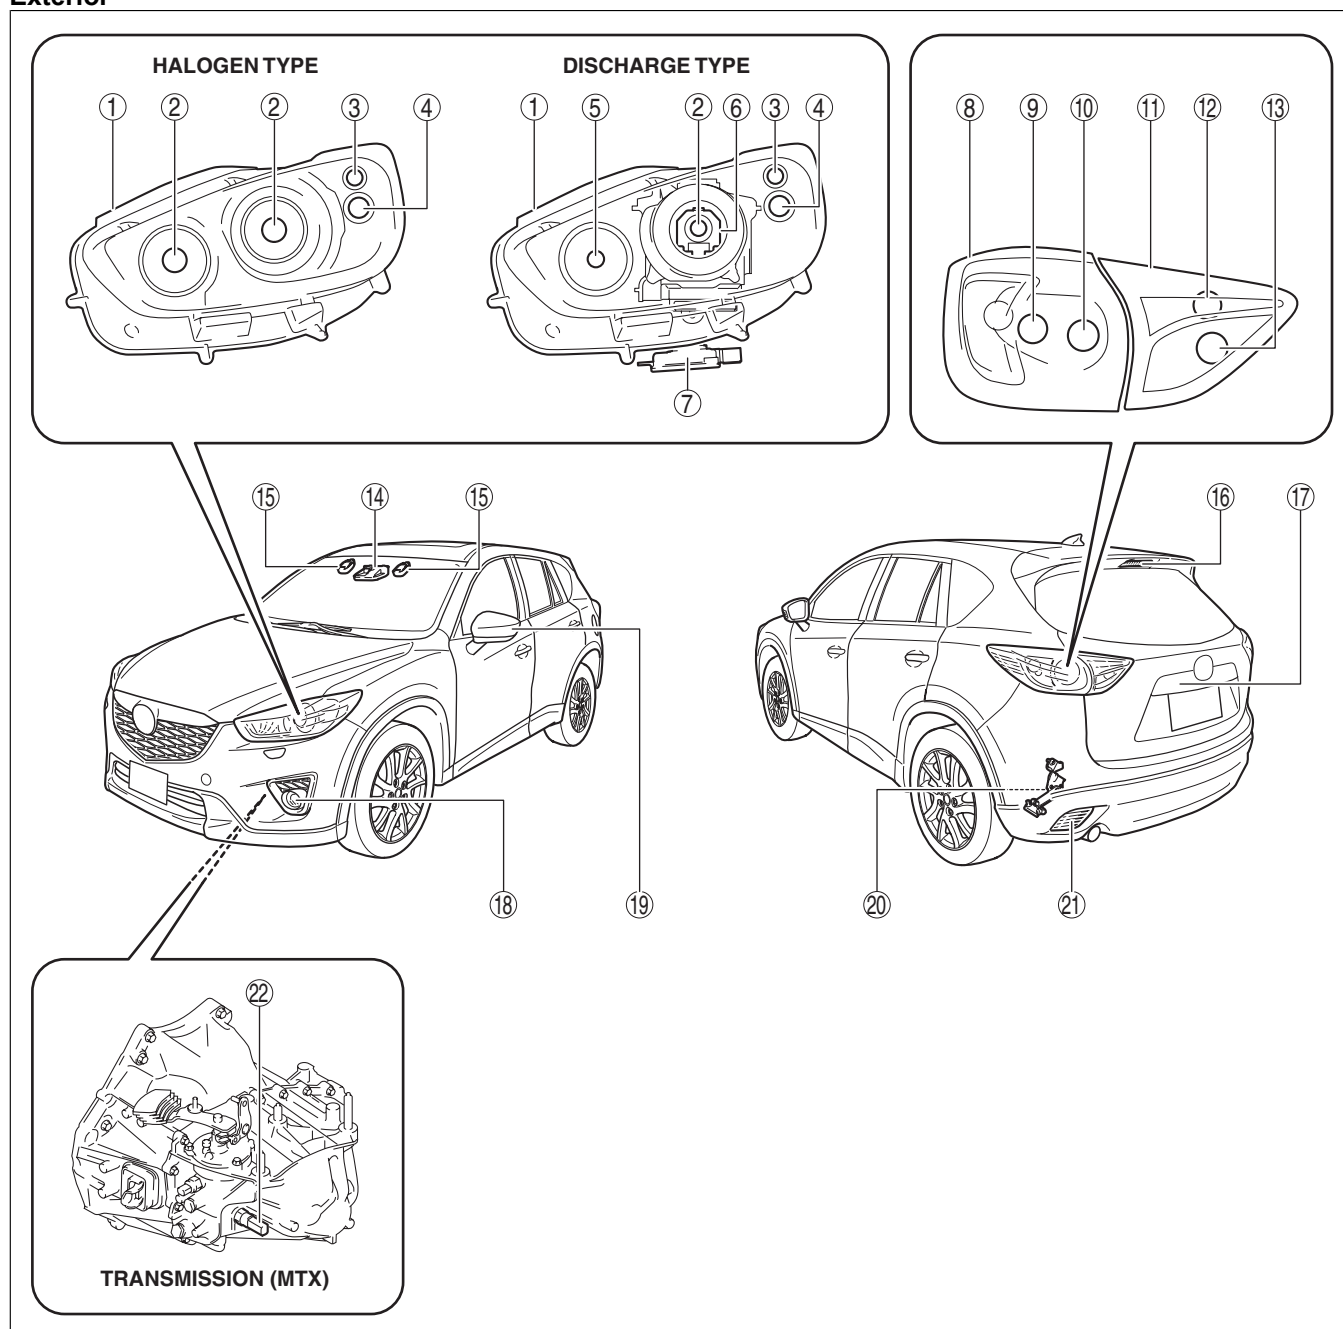

ac5wzw00001186


1	Front combination light (See DISCHARGE HEADLIGHT SERVICE WARNINGS.) (See FRONT COMBINATION LIGHT REMOVAL/INSTALLATION.) (See FRONT COMBINATION LIGHT DISASSEMBLY/ASSEMBLY.)
2	Headlight (See HEADLIGHT BULB REMOVAL/INSTALLATION.) (See HEADLIGHT AIMING.) (See DISCHARGE HEADLIGHT SYSTEM INSPECTION.) (See HEADLIGHT LEVELING ACTUATOR INSPECTION.)

3	Parking light (See PARKING LIGHT BULB REMOVAL/INSTALLATION.)
4	Front turn light (See FRONT TURN LIGHT BULB REMOVAL/INSTALLATION.)
5	Running light (Vehicles with discharge headlight system) (See RUNNING LIGHT BULB REMOVAL/INSTALLATION.)
6	Igniter (Vehicles with discharge headlight system) (See IGNITER REMOVAL/INSTALLATION.)

7	Discharge headlight control module (Vehicles with discharge headlight system) (See DISCHARGE HEADLIGHT CONTROL MODULE REMOVAL/INSTALLATION.) (See DISCHARGE HEADLIGHT SYSTEM INSPECTION.)
8	Rear combination light (See REAR COMBINATION LIGHT REMOVAL/INSTALLATION.)
9	Rear turn light (See REAR TURN LIGHT BULB REMOVAL/INSTALLATION.)
10	Brake/Taillight (See BRAKE/TAILLIGHT BULB REMOVAL/INSTALLATION.)
11	Liftgate light (See LIFTGATE LIGHT REMOVAL/INSTALLATION.)
12	Taillight (See TAILLIGHT BULB REMOVAL/INSTALLATION.)
13	Back-up light (See BACK-UP LIGHT BULB REMOVAL/INSTALLATION.)
14	Forward sensing camera (FSC) (Vehicles with forward sensing camera (FSC)) (See FORWARD SENSING CAMERA (FSC) REMOVAL/INSTALLATION.) (See FORWARD SENSING CAMERA (FSC) CLIP REMOVAL/INSTALLATION.) (See FORWARD SENSING CAMERA (FSC) COVER REMOVAL/INSTALLATION.) (See FORWARD SENSING CAMERA (FSC) AIMING.) (See FORWARD SENSING CAMERA (FSC) CONFIGURATION (USING READ/WRITE FUNCTION).) (See FORWARD SENSING CAMERA (FSC) CONFIGURATION (USING AS-BUILT DATA).) (See FORWARD SENSING CAMERA (FSC) PERSONALIZATION FEATURES SETTING PROCEDURE.)

15	Auto light sensor (Vehicles with auto light system) (See LIGHTING SYSTEM PERSONALIZATION FEATURES SETTING PROCEDURE.) (See AUTO LIGHT SENSOR REMOVAL/INSTALLATION.)
16	High-mount brake light (See HIGH-MOUNT BRAKE LIGHT REMOVAL/INSTALLATION.)
17	License plate light (See LICENSE PLATE LIGHT REMOVAL/INSTALLATION.) (See LICENSE PLATE LIGHT BULB REMOVAL/INSTALLATION.)
18	Front fog light (Vehicles with front fog light) (See FRONT FOG LIGHT REMOVAL/INSTALLATION.) (See FRONT FOG LIGHT BULB REMOVAL/INSTALLATION.) (See FRONT FOG LIGHT AIMING.)
19	Side turn light (See SIDE TURN LIGHT REMOVAL/INSTALLATION.) (See SIDE TURN LIGHT INSPECTION.)
20	Auto leveling sensor (Vehicles with headlight auto leveling system/AFS) (See AUTO LEVELING SENSOR INSPECTION.) (See AUTO LEVELING SENSOR REMOVAL/INSTALLATION.)
21	Rear fog light (See REAR FOG LIGHT REMOVAL/INSTALLATION.) (See REAR FOG LIGHT BULB REMOVAL/INSTALLATION.)
22	Back-up light switch (MTX) (See BACK-UP LIGHT SWITCH INSPECTION.)

Interior

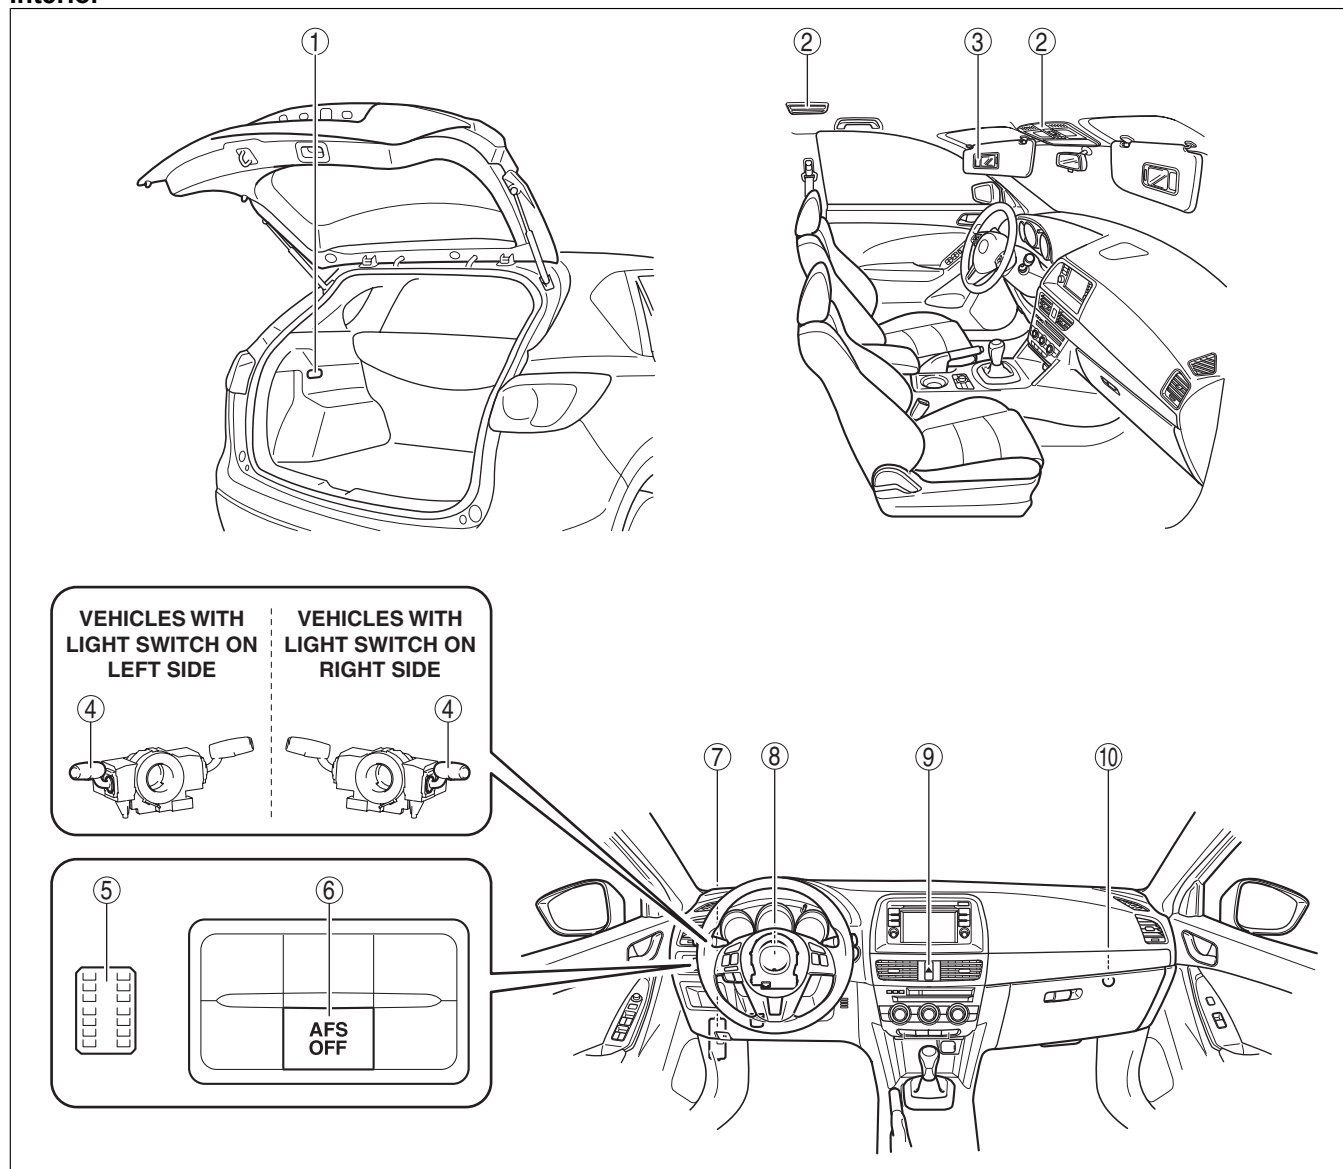

ac5wzw00002079

1	Cargo compartment light (See CARGO COMPARTMENT LIGHT REMOVAL/INSTALLATION.) (See CARGO COMPARTMENT LIGHT BULB REMOVAL/INSTALLATION.) (See CARGO COMPARTMENT LIGHT INSPECTION.)
2	Map light (See MAP LIGHT REMOVAL/INSTALLATION.) (See MAP LIGHT BULB REMOVAL/INSTALLATION.) (See MAP LIGHT INSPECTION.)
3	Vanity mirror illumination (Vehicles with vanity mirror illumination) (See VANITY MIRROR ILLUMINATION BULB REMOVAL/INSTALLATION.) (See VANITY MIRROR ILLUMINATION INSPECTION.)

4	Light switch/Front fog light switch (Vehicles with front fog light)/Rear fog light switch (See LIGHT SWITCH REMOVAL/INSTALLATION.) (See LIGHT SWITCH INSPECTION.) (See FRONT FOG LIGHT SWITCH INSPECTION.) (See REAR FOG LIGHT SWITCH INSPECTION.)
5	Headlight leveling switch (Vehicles with headlight manual leveling system) (See HEADLIGHT LEVELING SWITCH REMOVAL/INSTALLATION.) (See HEADLIGHT LEVELING SWITCH INSPECTION.)
6	AFS OFF switch (Vehicles with AFS) (See ADAPTIVE FRONT LIGHTING SYSTEM (AFS) OFF SWITCH REMOVAL/INSTALLATION.) (See ADAPTIVE FRONT LIGHTING SYSTEM (AFS) OFF SWITCH INSPECTION.)
7	AFS control module (Vehicles with AFS) (See ADAPTIVE FRONT LIGHTING SYSTEM (AFS) CONTROL MODULE REMOVAL/INSTALLATION.) (See HEADLIGHT AUTO LEVELING SYSTEM INITIALIZATION.)

8	Steering angle sensor (See STEERING ANGLE SENSOR REMOVAL/ INSTALLATION.) (See STEERING ANGLE SENSOR INSPECTION.)
9	Hazard warning switch (See HAZARD WARNING SWITCH REMOVAL/ INSTALLATION.) (See HAZARD WARNING SWITCH INSPECTION.)

10	Glove compartment light (Vehicles with glove compartment light) (See GLOVE COMPARTMENT LIGHT BULB REMOVAL/INSTALLATION.)
----	---