


## CALIPER (REAR) DISASSEMBLY/ASSEMBLY

id041100800600

1. Disassemble in the order indicated in the table.

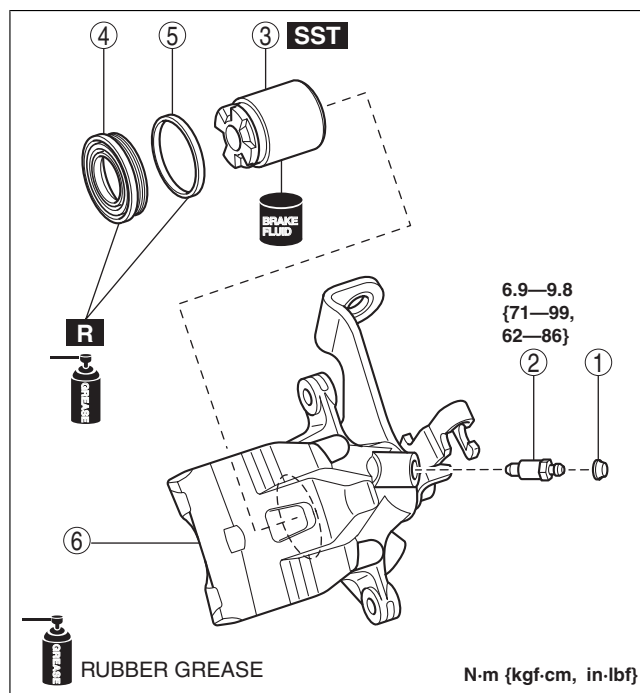


1	Bleeder cap
2	Bleeder screw
3	Piston (See Piston Disassembly Note.) (See Dust Seal, Piston Assembly Note.)

4	Dust seal (See Dust Seal, Piston Assembly Note.)
5	Piston seal
6	Caliper body

2. Assemble in the reverse order of removal.


### Piston Disassembly Note

1. Rotate the piston counter-clockwise using the SST, remove the piston from the caliper body.

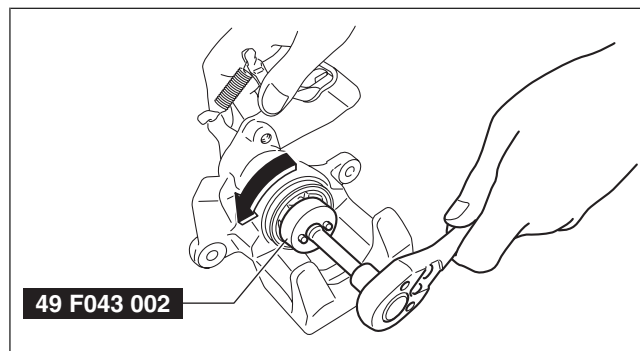


### Dust Seal, Piston Assembly Note

1. Assemble the dust seal to the piston.
2. Assemble the lip of the dust seal to the groove of the caliper body with the dust seal is assembled to the piston as shown in the figure.

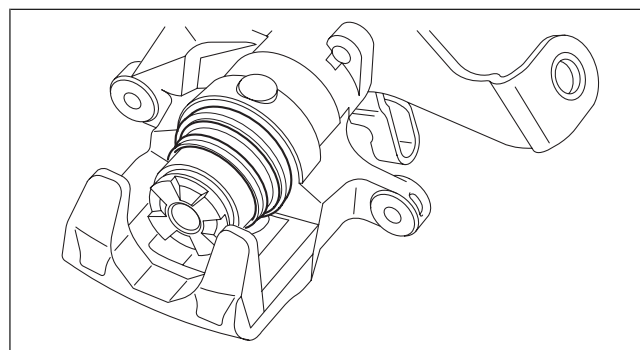

ac5wzw00000193

3. Rotate the piston clockwise using the **SST** slowly and push the piston inwards completely.
4. Verify that the dust seal is installed into the groove of the piston securely.

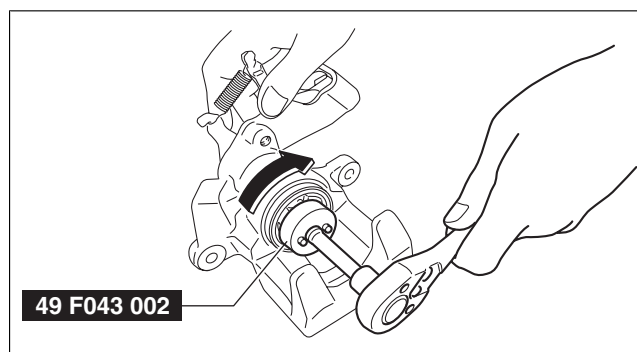

ac5wzw00000194