

## FUEL-FILLER LID ADJUSTMENT

id091000800200


1. Verify that the gap and height difference between the fuel-filler lid and body.
2. Loosen the bolts and adjust the fuel-filler lid.

### Standard clearance

**a:** 1.7—3.7 mm {0.07—0.14 in}

**b:** -0.5—1.5 mm {-0.01—0.05 in}

3. Tighten the bolts. (See FUEL-FILLER LID REMOVAL/INSTALLATION.)

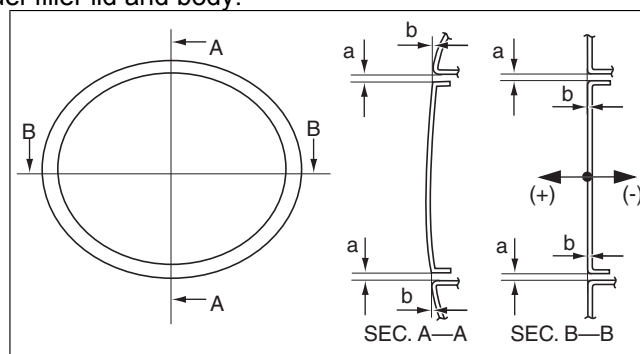

ac5wzw00004622