

REMOTE TRANSMITTER BATTERY VOLTAGE INSPECTION

id091400111800


Note

- Because the remote transmitter battery power cannot be determined using the battery itself, determine by the remote transmitter battery low warning operation conditions.

Operation procedure for remote transmitter battery low warning

- Place the remote transmitter inside the vehicle and close all of the doors.
- Switch the ignition ON (engine off) and wait approx. 30 s.
- With the brake pedal not depressed, switch the ignition off (LOCK).
- Verify that the KEY indicator light (green) (without TFT LCD) in the instrument cluster flashes or the warning does not display in the TFT LCD (with TFT LCD).

- KEY indicator light (green) (without TFT LCD) flashes for approx. 30 s, or warning displays in the TFT LCD (with TFT LCD):
Replace the remote transmitter battery because the remote transmitter battery power is depleted. (See REMOTE TRANSMITTER DISASSEMBLY/ASSEMBLY.)

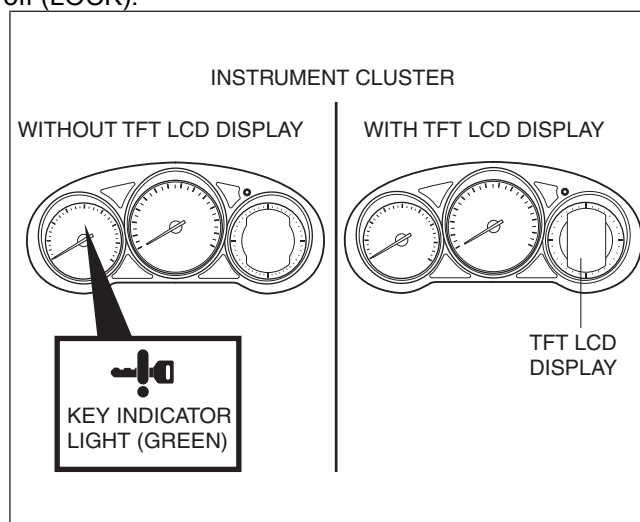

ac5jjw00002859