


CYLINDER HEAD DISASSEMBLY (II)

id011000500500

1. Disassemble in the order indicated in the table.

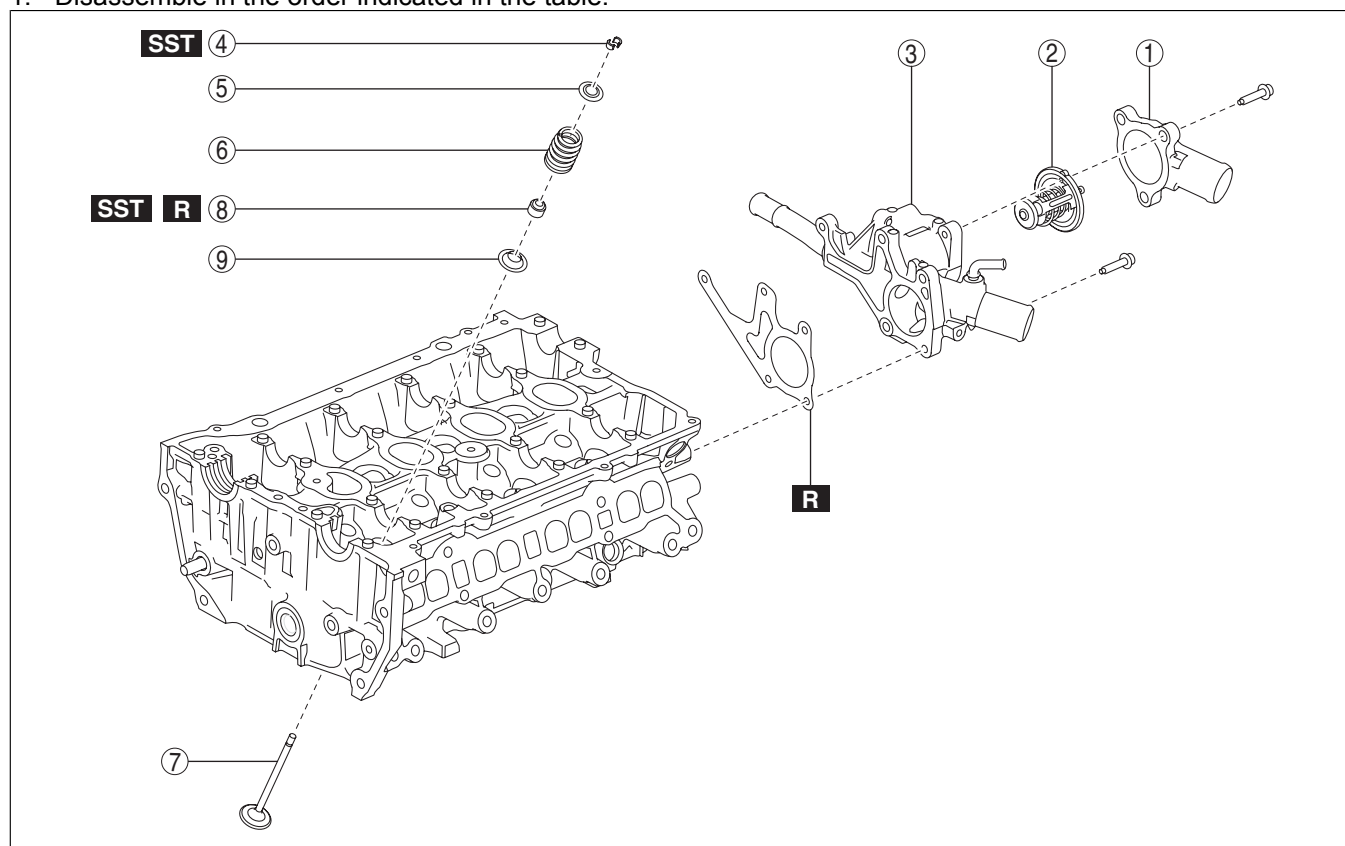

bpe1ze00000013


1	Thermostat cover
2	Thermostat
3	Water outlet
4	Valve keeper (See Valve Keeper Disassembly Note.)
5	Upper valve spring seat

6	Valve spring
7	Valve
8	Valve seal (See Valve Seal Disassembly Note.)
9	Lower valve spring seat

Valve Keeper Disassembly Note


1. Remove the valve keeper using the SSTs.

When using the SSTs (49 0636 100B, 49 B012 0A2)

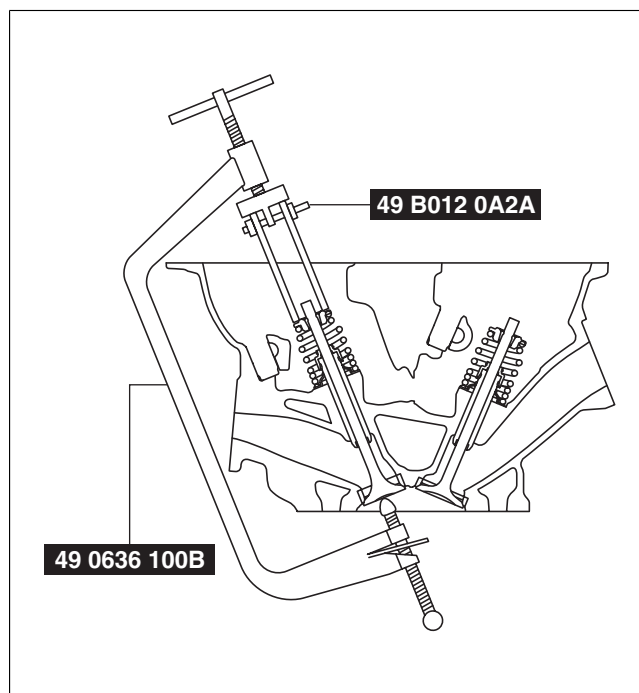

bpe1ze00000014


When using the SST (49 JE02 0A2) (Europe only)

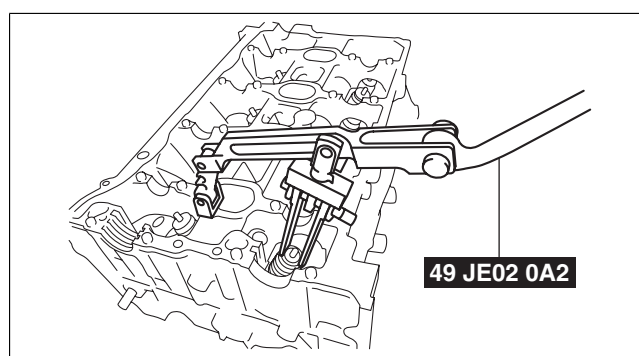


bpe1ze00000035

Valve Seal Disassembly Note

1. Remove the valve seal using the **SST** or pliers, etc.

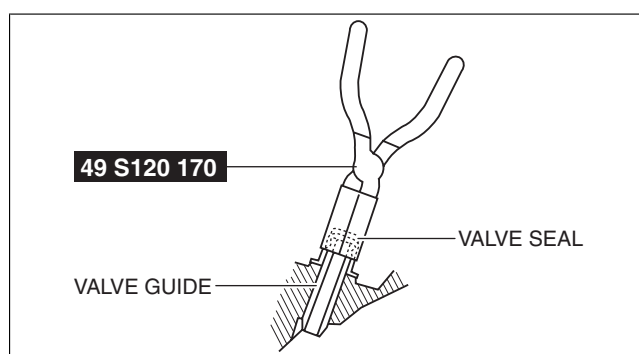

bpe1ze00000015

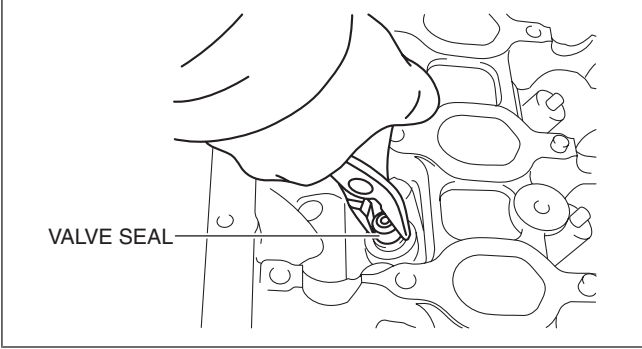

bpe1ze00000016