


REAR MOUNT CAMERA REMOVAL/INSTALLATION

id092000814900

Caution

- The audio unit communicates with the rear mount camera and records the presence/non-presence of the rear mount camera when the ignition is switched to ACC or ON (engine off or on) after connecting the negative battery cable.
- If the commander switch is installed with the negative battery cable connected when the audio unit records that there is no rear mount camera, the rear mount camera does not operate.
- For the rear mount camera installation/removal, disconnect the negative battery cable, switch the ignition to ACC or ON (engine off or on) after the servicing is completed, and the audio unit records the presence/non-presence of the rear mount camera.

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
 - (1) Liftgate upper trim (See LIFTGATE UPPER TRIM REMOVAL/INSTALLATION.)
 - (2) Liftgate side trim (See LIFTGATE SIDE TRIM REMOVAL/INSTALLATION.)
 - (3) Liftgate lower trim (See LIFTGATE LOWER TRIM REMOVAL/INSTALLATION.)
 - (4) Liftgate garnish (See LIFTGATE GARNISH REMOVAL/INSTALLATION.)
3. Press the rear mount camera tabs in the direction of the arrows (1) shown in the figure, pull the rear mount camera in the direction of the arrow (2) shown in the figure, and disengage the rear mount camera tabs from the liftgate garnish.
4. Remove the rear mount camera.
5. Install in the reverse order of removal.
6. Perform the parking assist system initialization setting (calibration). (with European (L.H.D. U.K.) specs.)(See PARKING ASSIST SYSTEM INITIALIZATION SETTING (CALIBRATION).)

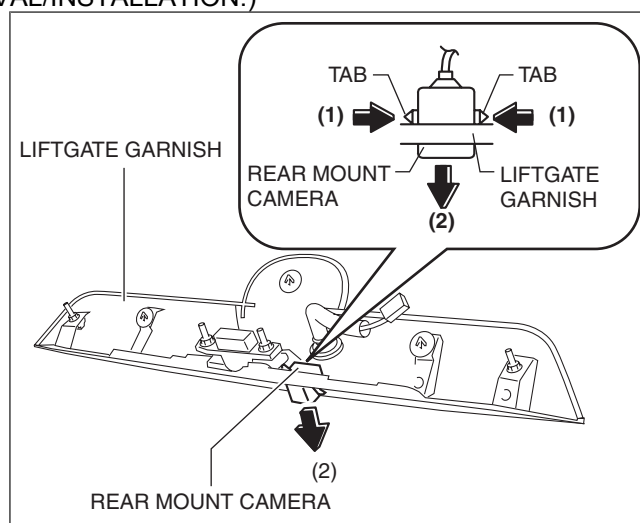

ac5jjw00001090