

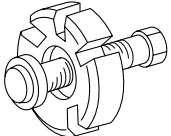
## TRANSMISSION/TRANSAXLE SST

id056000804200


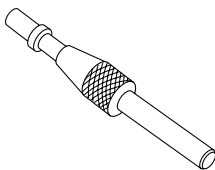

1: Mazda SST number

2: Global SST number


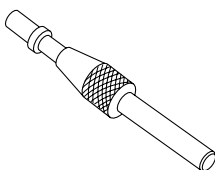
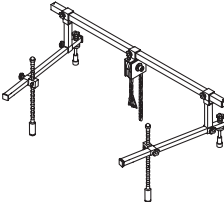
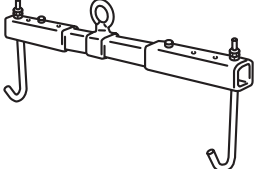


### Example

1:49 UN30 3009 2:303-009 Crankshaft damper remover	
--	---

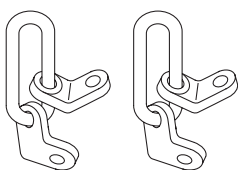
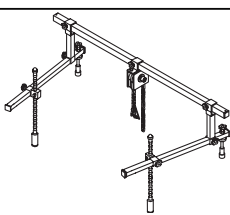
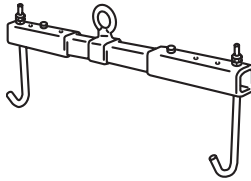
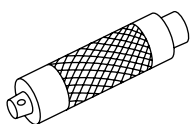
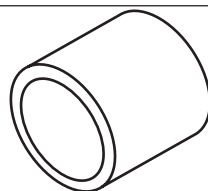
### Clutch [C66M-R, C66MX-R]

1:49 E011 1A0 2: – Ring gear brake set		1:49 SE01 310A 2: – Clutch disc center tool		1:49 1285 071 2: – Bearing puller	
---	---	--	--	---	---

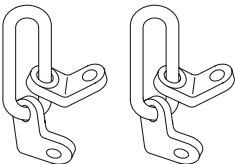
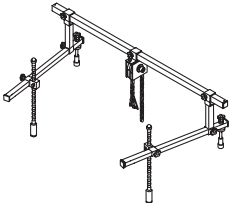
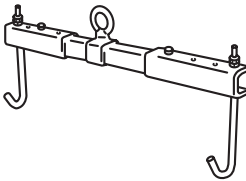
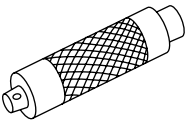
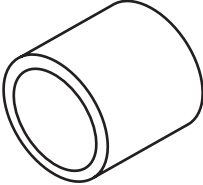
### Clutch [D66M-R, D66MX-R]

1:49 E011 1A0 2: – Ring gear brake set		1:49 SE01 310A 2: – Clutch disc center tool		1:49 C017 5A0 2: – Engine support set	
1:49 L017 5A0 2: – Support hanger		1:49 S120 710 2: – Coupling flange holder		1:49 G033 102 2: – Handle	




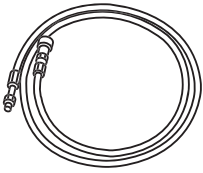
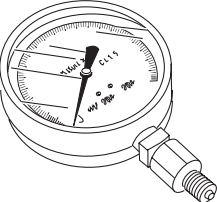
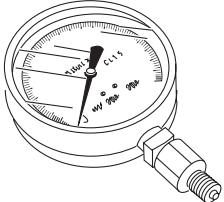
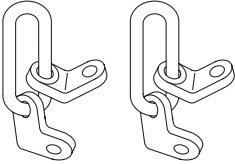
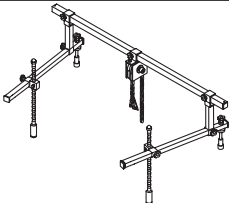
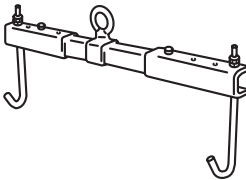


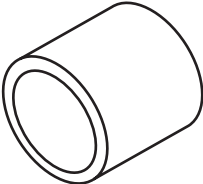


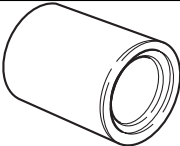
### Manual Transaxle [C66M-R, C66MX-R]

1:49 UN30 3050 2: 303-050 Engine lifting brackets		1:49 C017 5A0 2: – Engine support set		1:49 L017 5A0 2: – Support hanger	
1:49 G030 797 2: – Handle (Part of 49 G030 795)		1:49 U027 003 2: – Oil Seal Installer		–	–




### Manual Transaxle [D66M-R, D66MX-R]

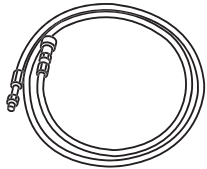
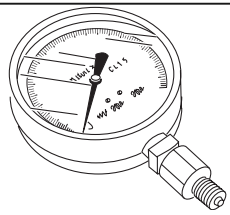
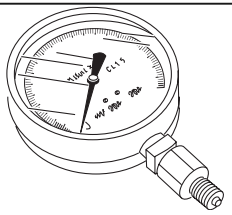
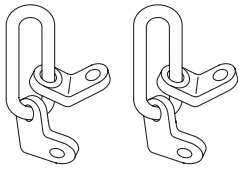
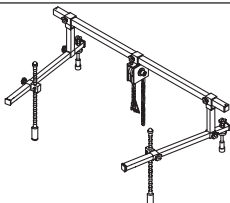
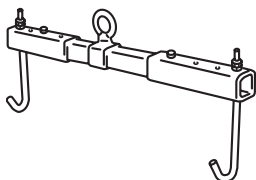


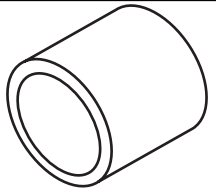


1:49 UN30 3050 2: 303-050 Engine lifting brackets 	1:49 C017 5A0 2: – Engine support set 	1:49 L017 5A0 2: – Support hanger 
1:49 G030 797 2: – Handle (Part of 49 G030 795) 	1:49 U027 003 2: – Oil Seal Installer 	–

### Automatic Transaxle [FW6A-EL, FW6AX-EL]

1:49 D019 910 2: – Adapter (Part of 49 D019 9A2) 	1:49 D019 911 2: – Adapter (Part of 49 D019 9A2) 	1:49 D019 913 2: – Adapter (Part of 49 D019 9A2) 
1:49 D019 909 2: – Hose (Part of 49 D019 9A2) 	1:49 D019 908 2: – Gauge (Part of 49 D019 9A2) 	1:49 D019 907 2: – Oil pressure gauge (Part of 49 D019 9A2) 
1:49 UN30 3050 2: 303-050 Engine lifting brackets 	1:49 C017 5A0 2: – Engine support set 	1:49 L017 5A0 2: – Support hanger 
1:49 E011 1A0 2: – Ring gear brake set 	1:49 G030 797 2: – Handle (Part of 49 G030 795) 	1:49 U027 003 2: – Oil Seal Installer 
1:49 G030 796 2: – Body (Part of 49 G030 795) 	1:49 F027 003 2: – Handle 	1:49 U034 204 2: – Dust boot installer 

### Automatic Transaxle [GW6A-EL, GW6AX-EL]

1:49 D019 910 2: – Adapter (Part of 49 D019 9A2) 	1:49 D019 911 2: – Adapter (Part of 49 D019 9A2) 	1:49 D019 913 2: – Adapter (Part of 49 D019 9A2) 
--	--	--

<p>1:49 D019 909 2: – Hose (Part of 49 D019 9A2)</p> 	<p>1:49 D019 908 2: – Gauge (Part of 49 D019 9A2)</p> 	<p>1:49 D019 907 2: – Oil pressure gauge (Part of 49 D019 9A2)</p> 
<p>1:49 UN30 3050 2: 303-050 Engine lifting brackets</p> 	<p>1:49 C017 5A0 2: – Engine support set</p> 	<p>1:49 L017 5A0 2: – Support hanger</p> 
<p>1:49 E011 1A0 2: – Ring gear brake set</p> 	<p>1:49 G030 797 2: – Handle (Part of 49 G030 795)</p> 	<p>1:49 U027 003 2: – Oil Seal Installer</p> 
<p>1:49 G030 796 2: – Body (Part of 49 G030 795)</p> 	<p>1:49 F027 003 2: – Handle</p> 	<p>1:49 U034 204 2: – Dust boot installer</p> 