

EGR VALVE INSPECTION [SKYACTIV-D 2.2]


id0116e1801100

Resistance inspection

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the engine cover. (See ENGINE COVER REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)
3. Disconnect the EGR valve connector.
4. Inspect the resistance between EGR valve terminals A and E.

EGR valve resistance (specification) 0.3—100 ohms [20 °C {68 °F}]

- If not within the specification, replace the EGR valve. (See EGR VALVE REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)

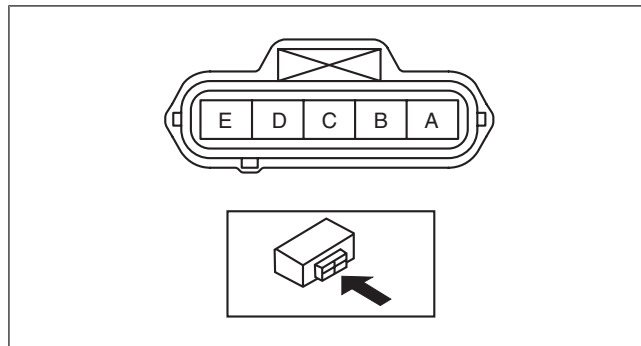

ac5wzw00004755