


## REAR SEAT BACK TRIM REMOVAL/INSTALLATION

id091300989400

### 6:4 Split Type

1. Remove the trunk board. (See TRUNK BOARD REMOVAL/INSTALLATION.)
2. Remove the rear seat back. (See REAR SEAT BACK REMOVAL/INSTALLATION.)
3. Remove the headrest.
4. Remove the rear seat back frame. (See REAR SEAT BACK FRAME REMOVAL/INSTALLATION.)
5. Remove the C rings in the order of (1), (2), (3), and (4) shown in the figure, and remove the rear seat back trim from the rear seat back pad.

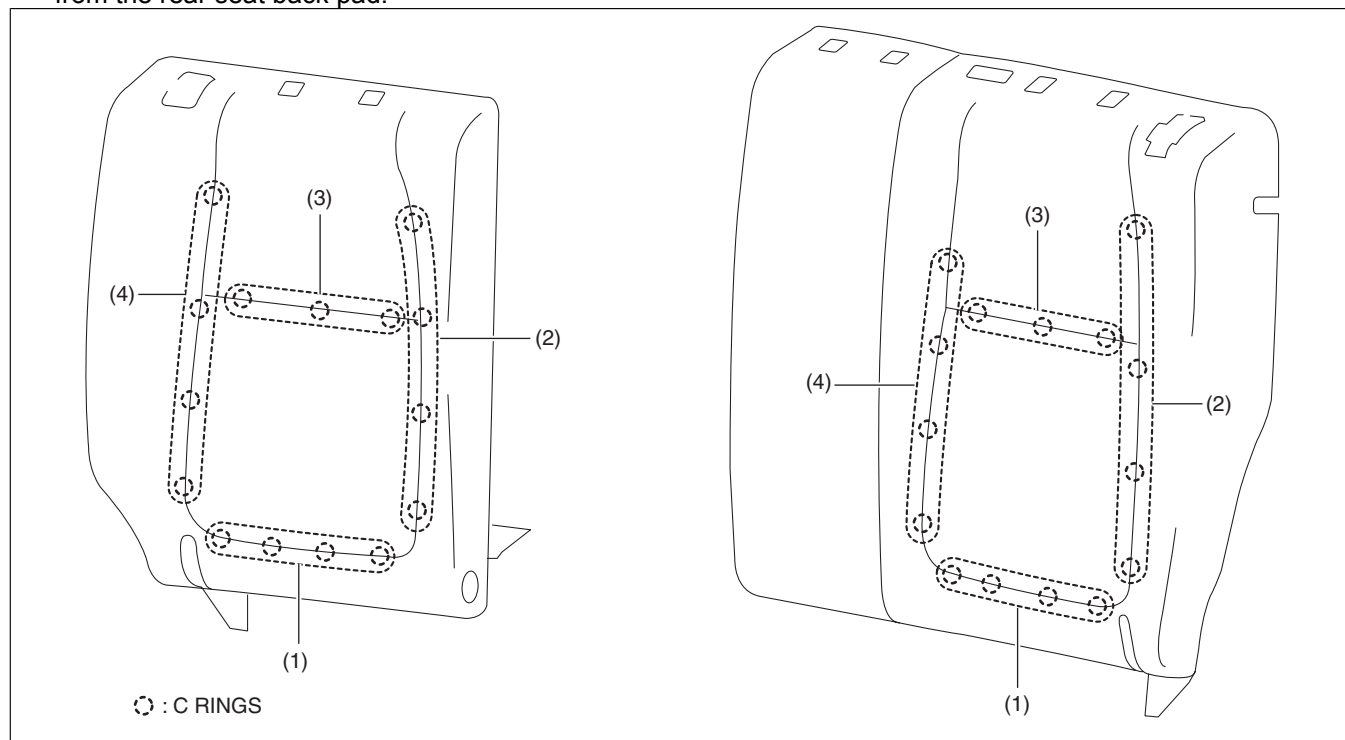


### Caution

- If a damaged C rings are reused, it may not be possible to install the rear seat back trim and rear seat back pad correctly. When removing and installing C rings, be careful not to damage them.
- If a C rings are damaged, replace it with a new one.

6. Install in the reverse order of removal.

### 4:2:4 Split Type

1. Remove the trunk board. (See TRUNK BOARD REMOVAL/INSTALLATION.)
2. Remove the rear seat. (See REAR SEAT REMOVAL/INSTALLATION.)
3. Remove the rear seat back. (See REAR SEAT BACK REMOVAL/INSTALLATION.)
4. Remove the headrest.
5. Remove the rear seat back frame. (See REAR SEAT BACK FRAME REMOVAL/INSTALLATION.)
6. Partially peel back the rear seat back trim from the rear seat back pad, remove C rings in the order of (1), (2), (3), (4), (5), (6) shown in the figure. (LH/RH)

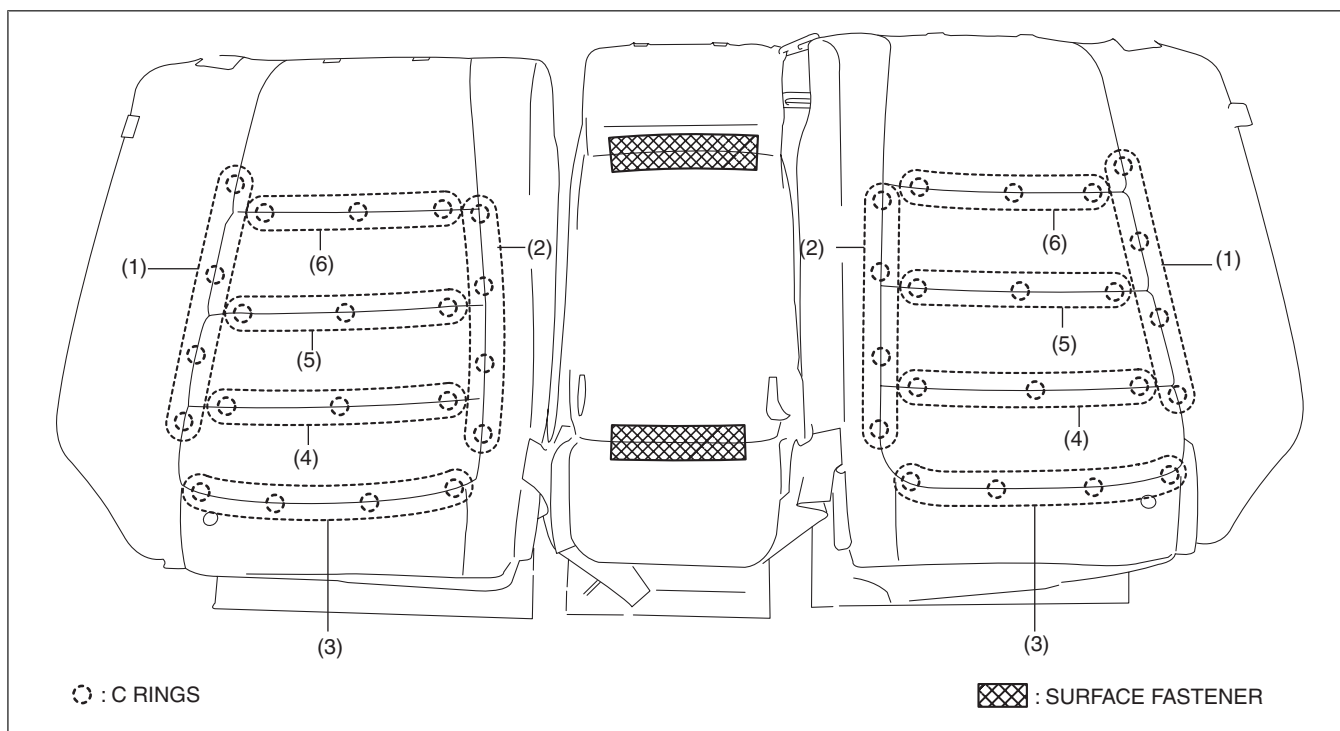

ac5uuw00001959

#### Caution

- If a damaged C rings are reused, it may not be possible to install the rear seat back trim and rear seat back pad correctly. When removing and installing C rings, be careful not to damage them.
- If a C rings are damaged, replace it with a new one.

7. Remove the surface fasteners while peeling back the rear seat back trim, and remove the rear seat back trim from the rear seat back pad.
8. Install in the reverse order of removal.