

WRENCH INDICATOR LIGHT [SKYACTIV-D 2.2]

id0140z7265500

Purpose, Function

Vehicles with TFT LCD


- If the accumulated water level in the sedimentor exceeds a certain level, the wrench indicator light and a message in the TFT LCD are displayed simultaneously to inform the driver that draining of the sedimentor is required.

Vehicles without TFT LCD

- If the accumulated water level in the sedimentor exceeds a certain level, the wrench indicator light illuminates to inform the driver that draining of the sedimentor is required.

Construction

- The wrench indicator light is built into the instrument cluster.

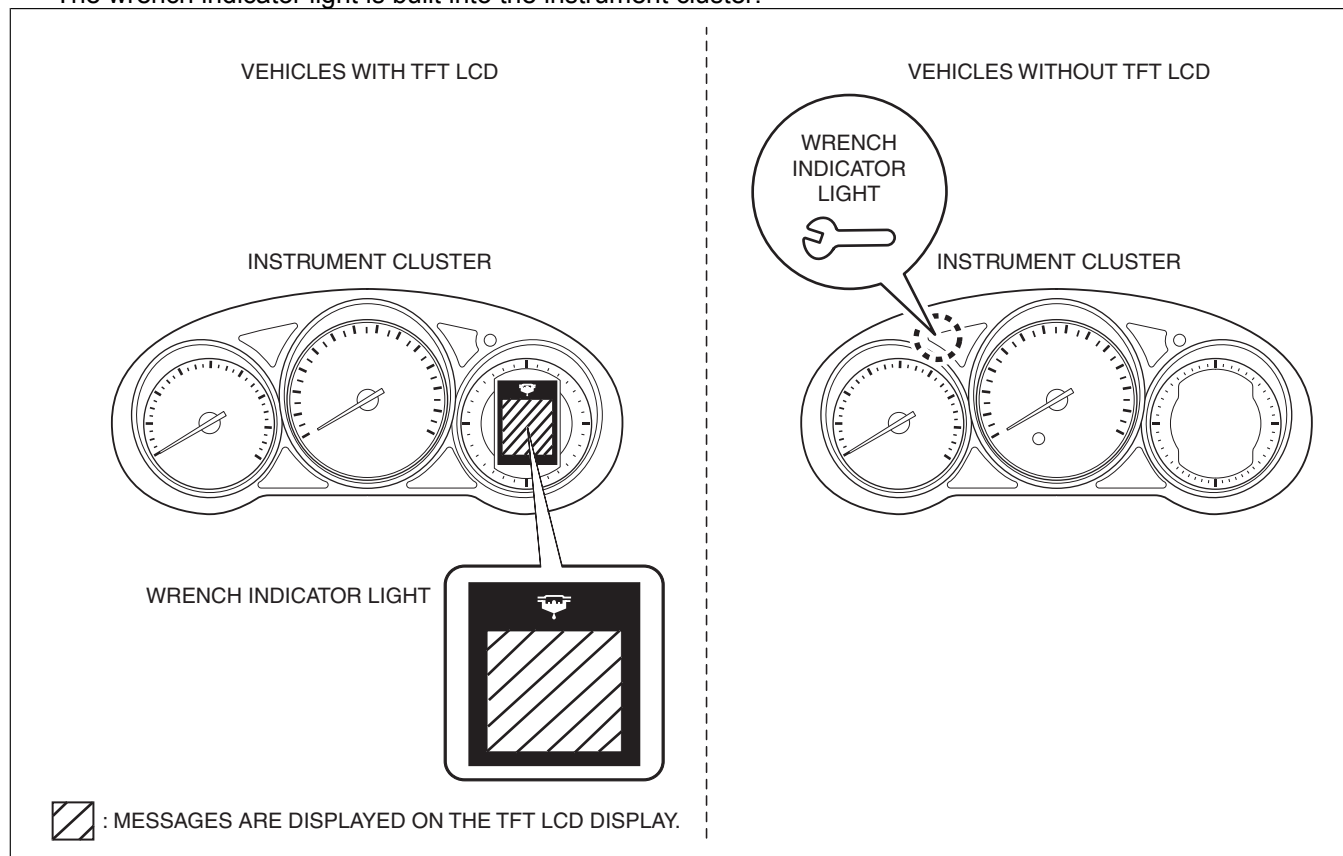

ac5wzn00002275

Operation

Vehicles with TFT LCD

- The message display conditions related to the wrench indicator light are as follows:
 - “Drain Water from Fuel Filter” display condition**
 - Water level in sedimentor is certain level or more
- The PCM sends a message indication request to the instrument cluster via CAN communication.

Vehicles without TFT LCD

- The wrench indicator light illumination conditions are as follows:
 - Wrench indicator light illumination conditions**
 - Ignition switch ON (turns off after several second)
 - Water level in sedimentor is certain level or more
- The PCM sends a wrench indicator light illumination request to the instrument cluster via CAN communication.