

SECONDARY GEAR [FW6A-EL, FW6AX-EL]


id0517h2352000

Purpose/Function

- The secondary gear transmits the drive force from the primary gear to the output gear.

Construction

- The secondary gear is engaged with the output gear and rotates as a single unit.

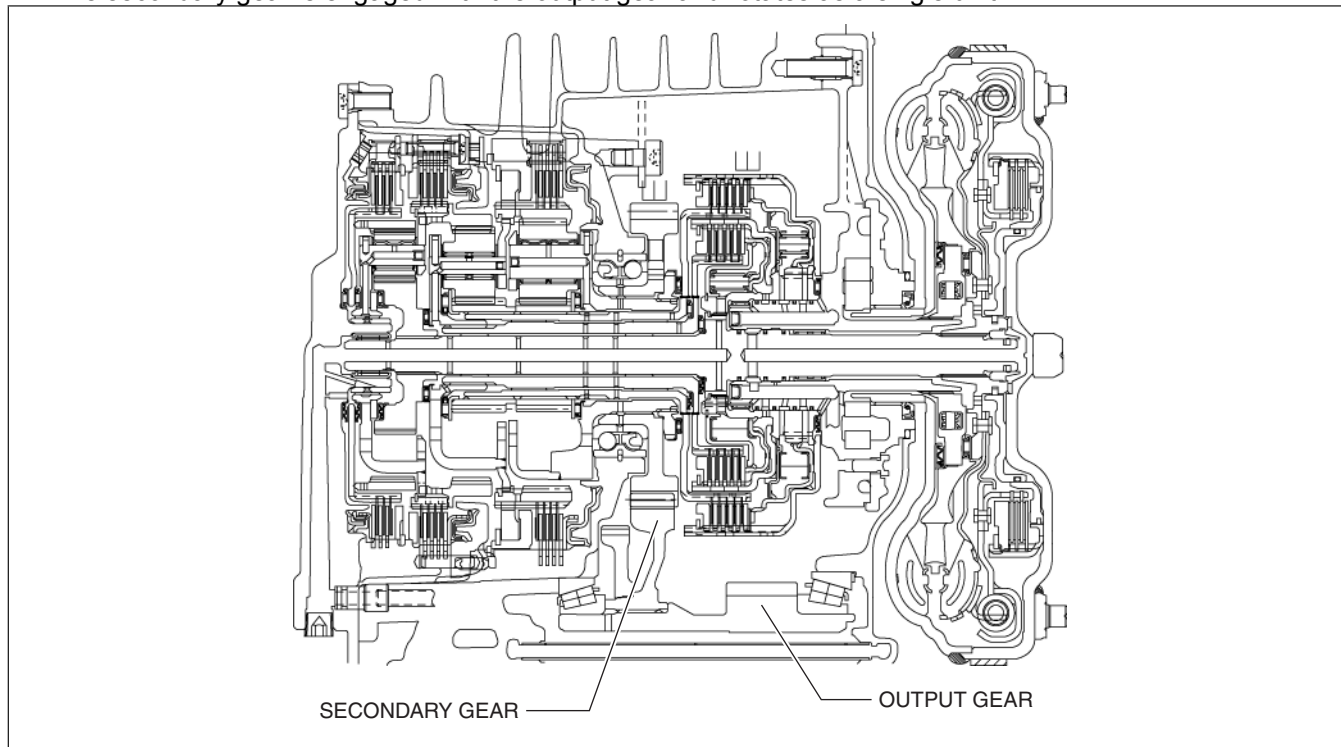

am3uun00002452