


STARTER INTERLOCK SWITCH REMOVAL/INSTALLATION [C66M-R, C66MX-R]


id0510mc160100

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].)
2. Disconnect the starter interlock switch connector.
3. Remove the starter interlock switch using the following procedure:


- (1) Detach hook A in the direction of the arrow shown in the figure.

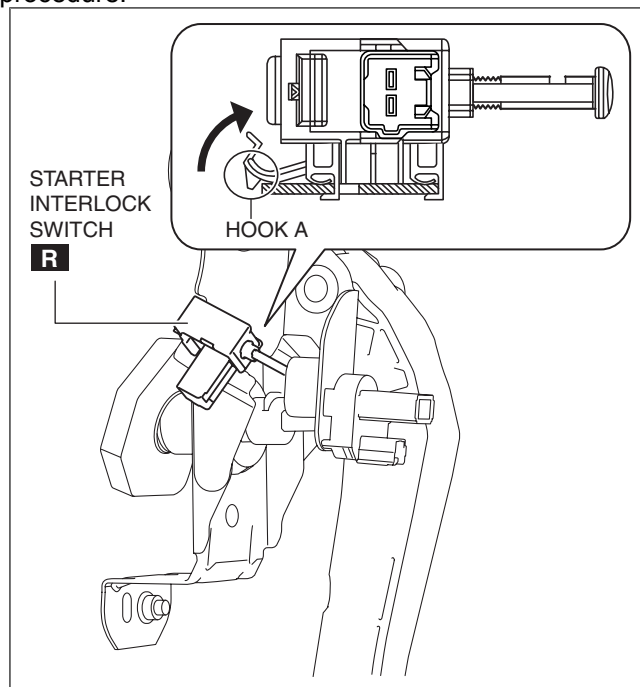

- (2) Slide the starter interlock switch in the direction of the arrow shown in the figure.

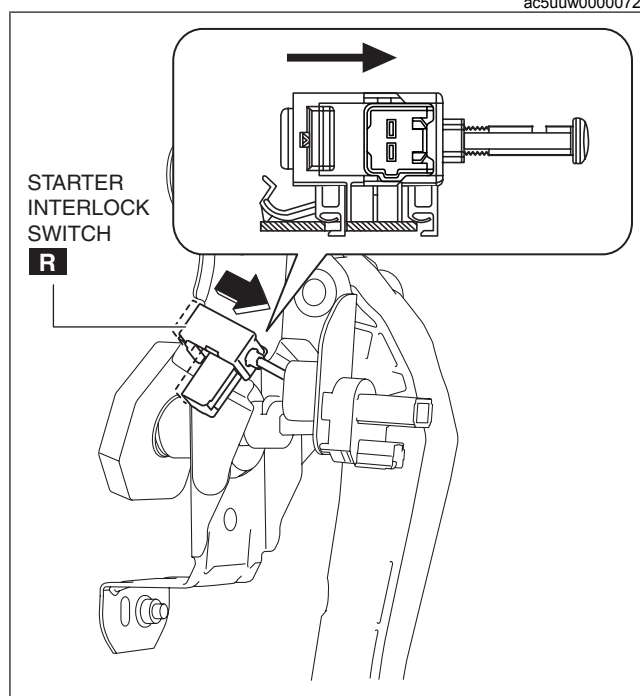


- (3) Remove the starter interlock switch from the clutch pedal.

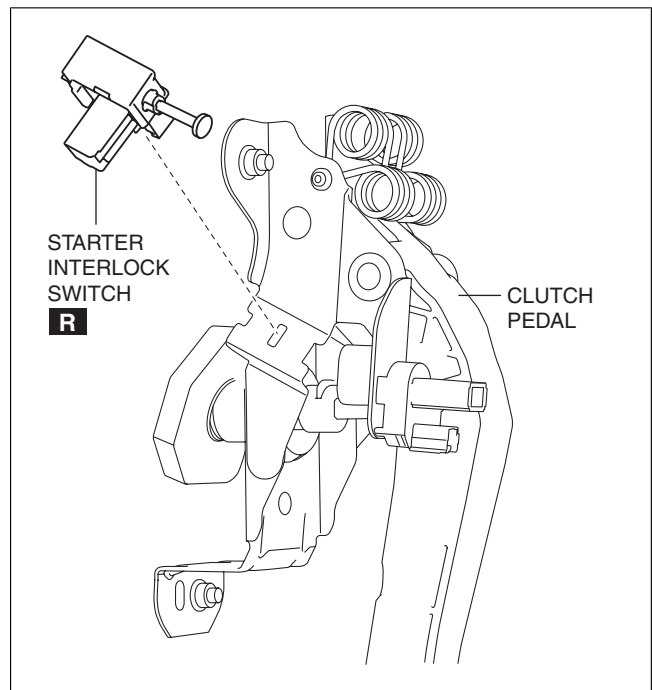

ac5wzw00003311


4. Install the starter interlock switch using the following procedure:

- (1) Insert hook B of a new starter interlock switch into the clutch pedal hole.

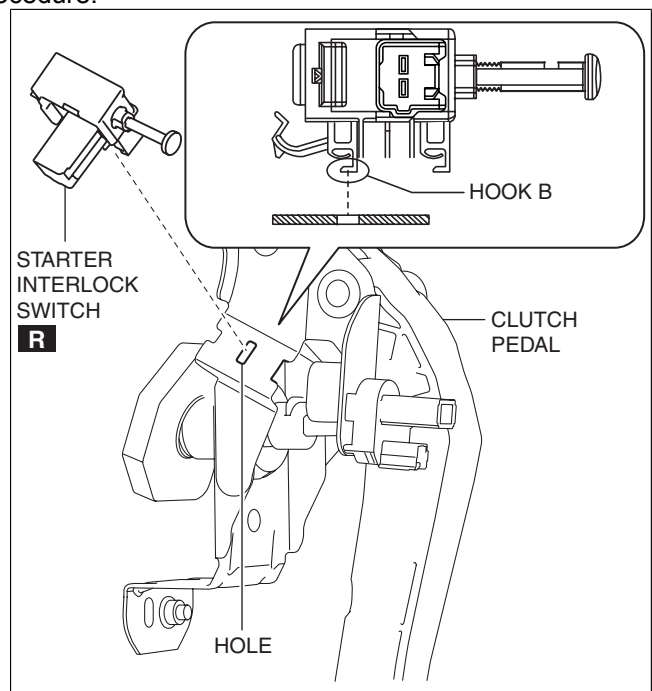


ac5uuw00000728

- (2) While pressing the starter interlock switch against the clutch pedal, slide the starter interlock switch until hook A is locked in the direction of the arrow shown in the figure.

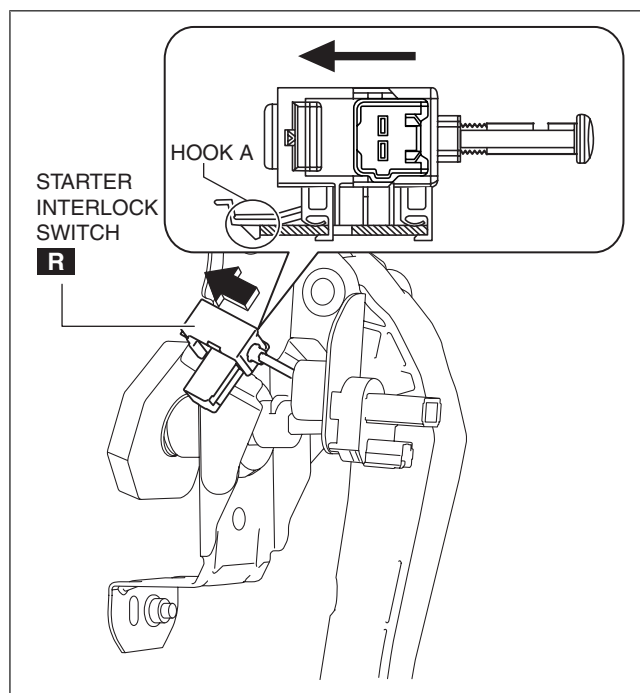

ac5uuw00000729

5. Fully depress the clutch pedal in the direction of arrow, and verify that a click sound from the starter interlock switch is heard.
6. Connect the starter interlock switch connector.
7. Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].)
8. Fully depress the clutch pedal, and verify that the engine starts.

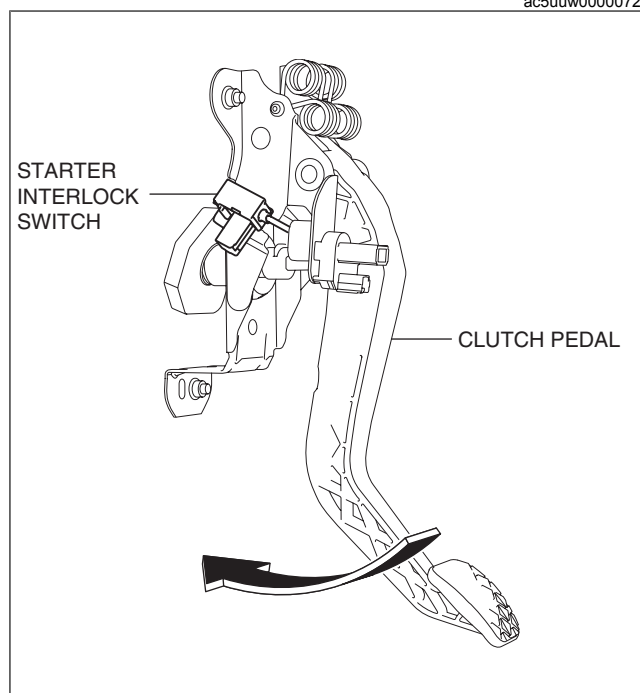

ac5uuw00000730