


SHROUD UPPER MEMBER REMOVAL/INSTALLATION

id091000889800

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the seal board upper. (See SEAL BOARD UPPER REMOVAL/INSTALLATION.)
3. Remove the front bumper. (See FRONT BUMPER REMOVAL/INSTALLATION.)
4. Remove the front combination light (See FRONT COMBINATION LIGHT REMOVAL/INSTALLATION.)
5. Remove bolts.

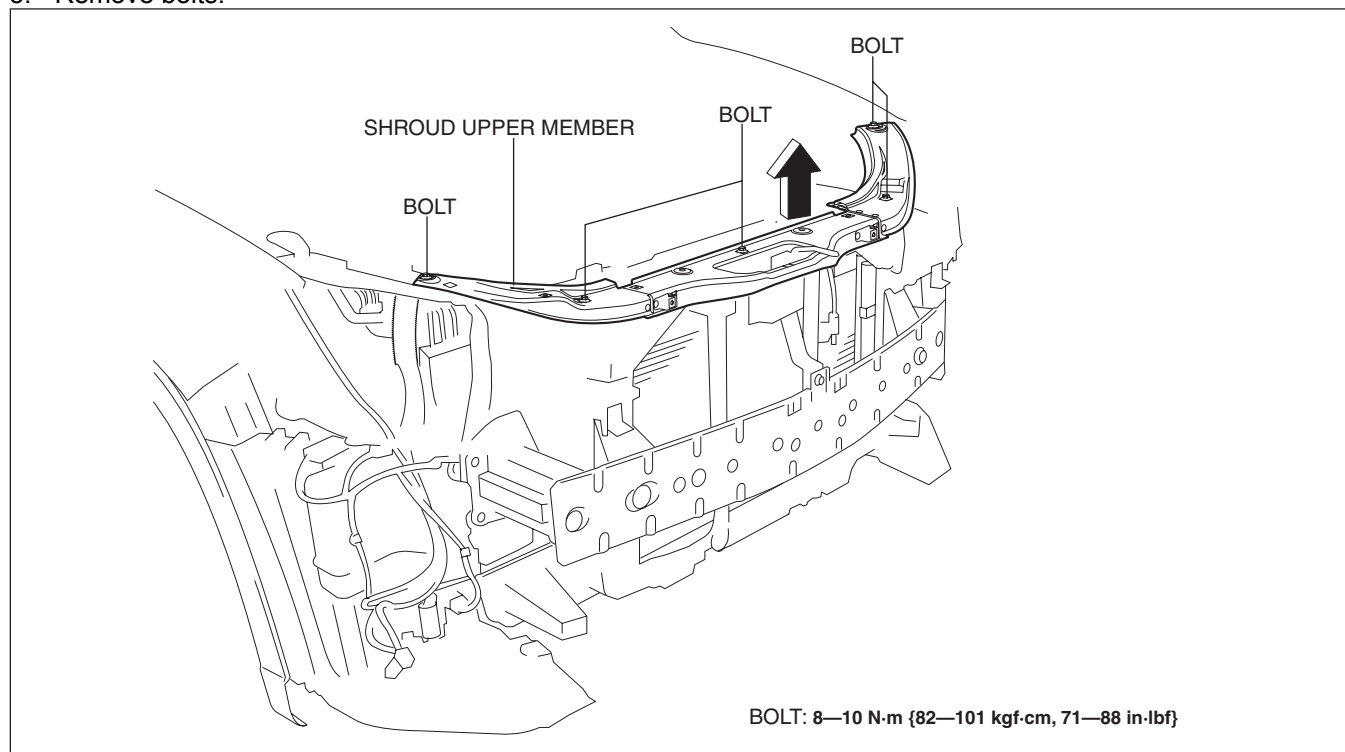

ac5uuw00001822

6. Remove the shroud upper member in the direction of the arrow shown in the figure.
7. Install in the reverse order of removal.
8. Adjust the headlight aiming. (See HEADLIGHT AIMING.)
9. Adjust the front fog light aiming. (with front fog lights) (See FRONT FOG LIGHT AIMING.)