




Important: Power Up Setting

Version	Difference	Baud Rate
1.0	<ul style="list-style-type: none">✓ Delivered Before March✓ GREEN PCB(controller board)	256000
1.1	<ul style="list-style-type: none">✓ Delivered after March✓ BLACK PCB (controller board)	9600

Please follow instructions below to select right **Baud Rate** for your controller. Refer to the document([Instruction for upgrade firmware 1.0 to 1.1](#)) to upgrade from 1.0 to 1.1.

Dobot Application v1.1

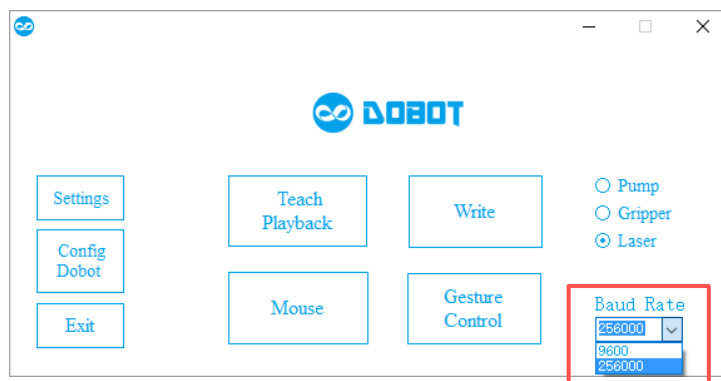

Dobot Tools

In the tray area, right click Dobot Server, and click **options** to choose the correct **Baud Rate**. Restart the DobotClient again after setting the new baud rate.

