

OpenCV

# Command Line Application User Manual



Version 1.0

e-con Systems

4/6/2018



**e-con Systems**

Your Product Development Partner

### **Disclaimer**

The specifications of OpenCV command line application and instructions on how to run this with our e-con Systems camera are provided as reference only and e-con Systems reserves the right to edit/modify this document without any prior intimation of whatsoever.

# Contents

<b>INTRODUCTION TO SAMPLE APPLICATION</b>	<b>3</b>
<b>PREREQUISITES</b>	<b>3</b>
<b>SUPPORTED OPENCV VERSION</b>	<b>3</b>
<b>DESCRIPTION</b>	<b>3</b>
<b>LAUNCHING THE APPLICATION</b>	<b>4</b>
<b>LAUNCHING WINDOWS SAMPLE APPLICATION</b>	<b>4</b>
<b>LAUNCHING LINUX SAMPLE APPLICATION</b>	<b>4</b>
<b>USING SAMPLE APPLICATION</b>	<b>6</b>
<b>SELECTING THE CAMERA DEVICES</b>	<b>6</b>
<b>CONFIGURING CAMERA FORMATS OR RESOLUTIONS</b>	<b>6</b>
<b>SETTING PREVIEW FORMAT</b>	<b>7</b>
<b>CONFIGURING UVC SETTINGS</b>	<b>8</b>
<b>CAPTURING STILL IMAGE</b>	<b>10</b>
<b>GETTING FIRMWARE VERSION NUMBER</b>	<b>10</b>
<b>EXITING THE APPLICATION</b>	<b>11</b>
<b>TROUBLESHOOTING</b>	<b>12</b>
<b>SUPPORT</b>	<b>13</b>

# Introduction to Sample Application

---

e-con Systems provides a sample console application for OpenCV to demonstrate some of the features of e-con Systems cameras.

This document explains in detail about how to execute the OpenCV sample console application from command prompt on Windows and terminal on Linux platform.

## Prerequisites

You must install OpenCV on a PC. Please refer to the [Installation Manual](https://github.com/econsystems/opencv/tree/master/documents) (<https://github.com/econsystems/opencv/tree/master/documents>) for more detailed installation steps and images.

## Supported OpenCV version

Sample application supports for both OpenCV version 3.3.1 and 3.4.1

## Description

Using OpenCV application, you can perform the features as follows:

- Selecting the camera devices.
- Configuring camera formats or resolutions.
- Setting preview formats.
- Configuring UVC settings.
- Capturing still images.
- Getting the firmware version number.

# Launching the Application

This section describes how to launch and use the sample console application.

## Launching Windows Sample Application

To launch the Windows sample application, you must **run** the **<application>.exe** file. Select the application.exe file from the application root folder as shown below.









Name	Date modified	Type	Size
 opencv_core331d.dll	09-04-2018 11:41	Application extens...	12,021 KB
 opencv_highgui331d.dll	09-04-2018 11:43	Application extens...	392 KB
 opencv_imgcodecs331d.dll	09-04-2018 11:42	Application extens...	4,802 KB
 opencv_imgproc331d.dll	09-04-2018 11:42	Application extens...	26,853 KB
 opencv_videoio331d.dll	09-04-2018 11:42	Application extens...	610 KB
 OpenCVCam.exe	09-04-2018 11:54	Application	133 KB
 OpenCVCam.ilc	09-04-2018 11:54	Incremental Linke...	675 KB
 OpenCVCam.pdb	09-04-2018 11:54	Program Debug D...	1,707 KB

Figure 1: Windows Application Launch

## Launching Linux Sample Application

Run the following command from the sample application folder using terminal.

1. Keep the libopencv\_world.so, libopencv\_world.so.<OpenCV\_Version 3.3 or 3.4>, libopencv\_world.so.3. <OpenCV\_Version 3.3.1 or 3.4.1> in the root directory with the executable file and run this command.

```
$ sudo LD_LIBRARY_PATH=. ./OpenCVCam
```

The screen appears as shown below.

```
root@:/opt/OpenCV/source/opencv-3.3.1/sources/samples/cpp/tutorial_code/OpenCVCam# sudo ./OpenCVCam
e-con's Sample OpenCV Application to Custom Formats
Demonstrates the working of e-con's Custom Format cameras with the modified libraries of OpenCV
Number of Camera Devices Connected to the Port : 1
Camera Devices Connected to the PC Port :
    0 - Exit
    1 . See3CAM_30
Pick a Camera Device to Explore : █
```

Figure 2: Linux Application Launch

This version of OpenCV sample is used to communicate with certain functionality of e-con Systems cameras such as camera video formats, resolution, UVC controls,

capturing still images and reading firmware version number. Initially, it will list the number of cameras connected to the pc.

# Using Sample Application

This section describes the features supported in OpenCV application.

## Selecting the Camera Devices

Initially, the command line application displays the number of cameras connected to the PC. The Camera Names, Vendor ID, Product ID and Device Path will also be displayed.

You must select the Camera Device to explore their features using this command line application and the preview will be displayed parallelly as shown below.

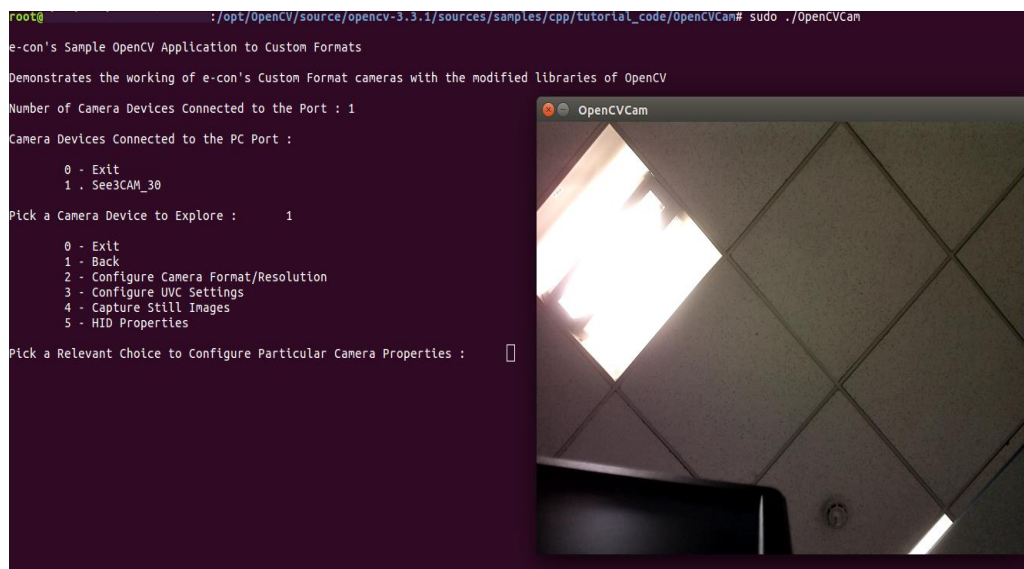


Figure 3: Camera Device Configuration

## Configuring Camera Formats or Resolutions

The steps to explore camera format or resolution are as follows:

1. Enter **2** in **Pick a Relevant Choice to Configure Particular Camera Properties** to configure camera format or resolution. The format or resolution supported by the camera will be listed as shown below.

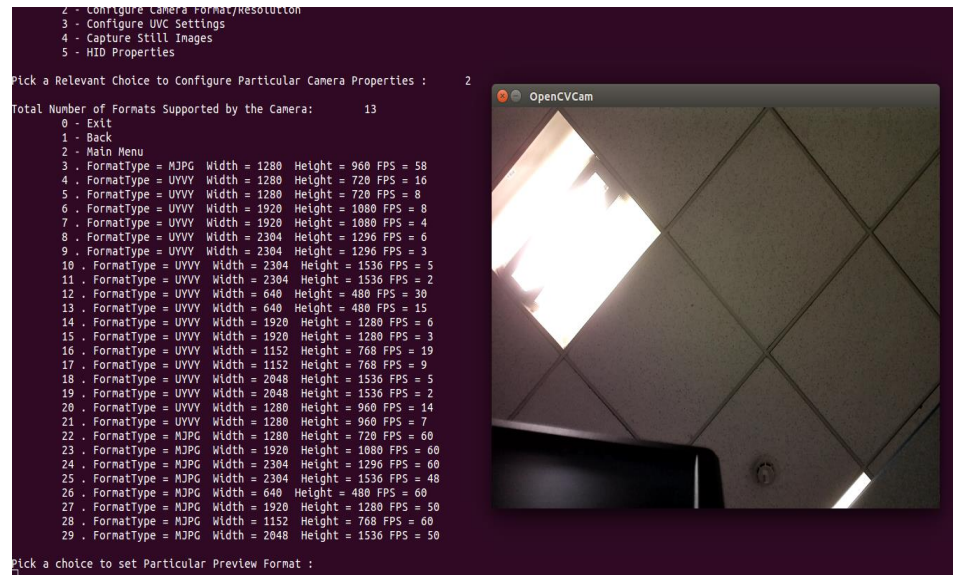


Figure 4: Camera Formats or Resolution

2. Select the format or resolution type and the preview will be changed as shown below.

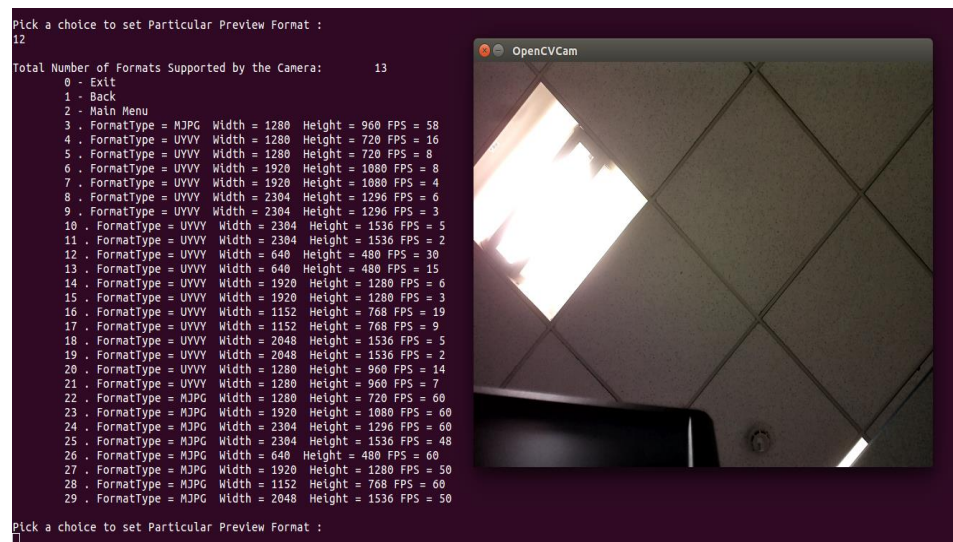


Figure 5: Formats or Resolution Configuration

## Setting Preview Format

You can set the preview format using the following options:

- Option **0** to exit from the application.
- Option **1** to go back to the previous menu.
- Option **2** to configure camera format or resolution.
- Option **3** to configure UVC settings.
- Option **4** to capture still images.
- Option **5** to go to HID properties.



Enter **1** in **Pick a choice to set Particular Preview Format** to set preview format as shown below.

```
Pick a choice to set Particular Preview Format :
1

0 - Exit
1 - Back
2 - Configure Camera Format/Resolution
3 - Configure UVC Settings
4 - Capture Still Images
5 - HID Properties
```

Figure 6: Setting Preview Format

## Configuring UVC Settings

The steps to configure UVC settings are as follows:

1. Enter **3** in **Pick a Relevant Choice to Configure Particular Camera Properties** to configure UVC Settings. The supported UVC Settings will be displayed as shown below.


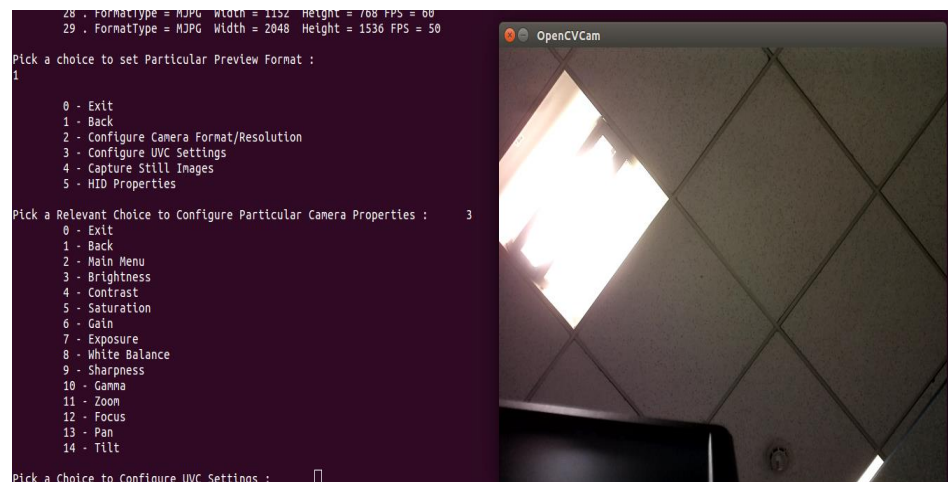


Figure 7: Configuring UVC Settings


2. Select a UVC Settings to modify the camera UVC property. For Brightness, you must enter **3** in **Pick a Choice to Configure UVC Settings**. The modes supported in camera are as follows:
  - If the camera supports manual mode, it will display minimum value, maximum value, stepping delta, current value, default value, current mode as manual and supported mode as manual.
  - If the camera supports Auto mode, it will display supported mode as Auto and current mode as Auto.
  - If the camera supports both auto and manual mode, it will display minimum value, maximum value, current value, default value, stepping delta, current mode and supported mode as Auto or Manual as shown below.

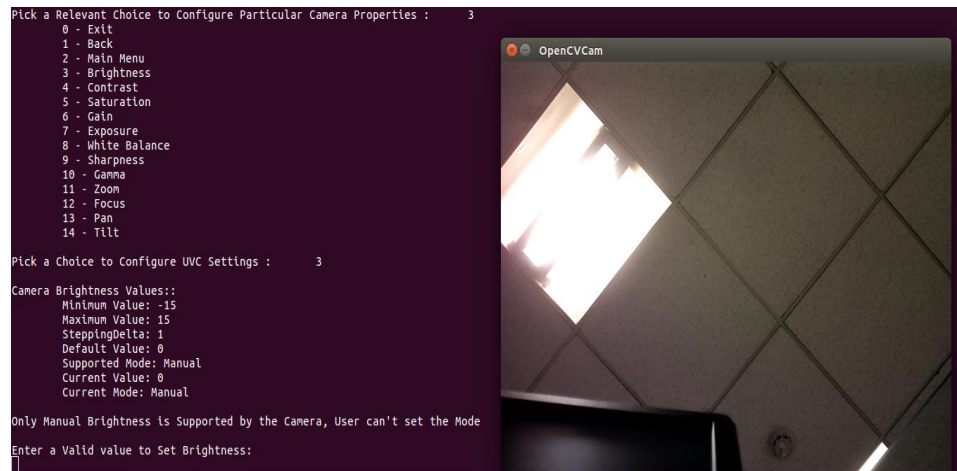

**Figure 8: Setting Camera Brightness Values**

To set Brightness, the value should satisfy the following conditions.

- Value must be greater than or equal to minimum value.
- Value must be lesser than or equal to maximum value.
- Value must be divided by the stepping delta, (i.e) the stepping delta value must be equal to 0.

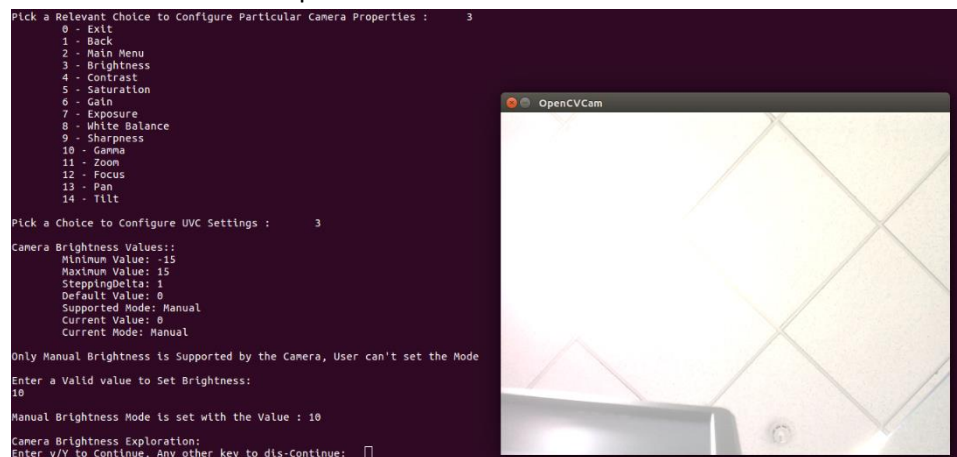

**Figure 9: Brightness Configuration**

3. You can enter **y/Y** to continue with changing the same property or **n** to go back to display the UVC settings supported by the camera and can change other camera UVC Properties as shown below.

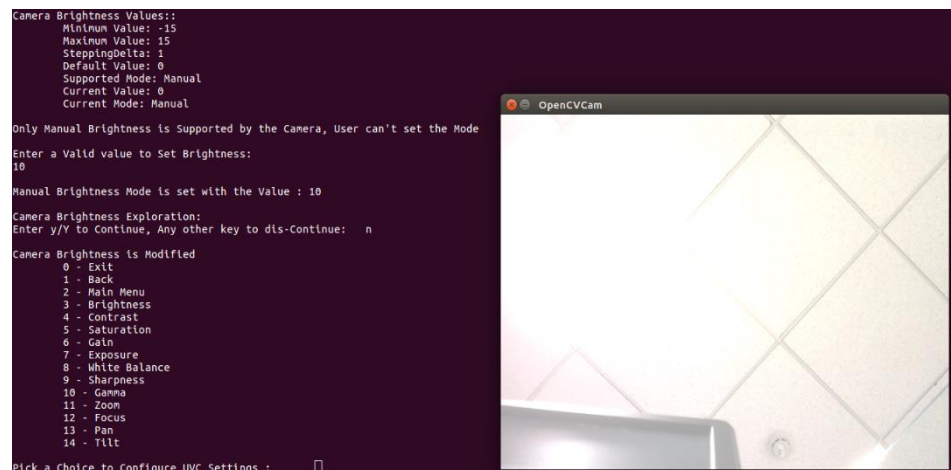


Figure 10: UVC Settings Menu Selection

## Capturing Still Image

To capture the still image, you must enter **4** in **Pick a Relevant Choice to Configure Particular Camera Properties**. The image will be saved in the application root folder with the application name, system current date and time extensions as shown below.



Figure 11: Capturing Still Image

## Getting Firmware Version Number

You must enter **5** in **Pick a Relevant Choice to Configure Particular Camera Properties** to configure camera properties and enter **3** to get the firmware version number. The firmware version number will be displayed as shown below.

```
0 - Exit
1 - Back
2 - Configure Camera Format/Resolution
3 - Configure UVC Settings
4 - Capture Still Images
5 - HID Properties

Pick a Relevant Choice to Configure Particular Camera Properties :      5

0 - Exit
1 - Back
2 - Main Menu
3 - GetFirmware Version Number

Pick a Relevant Choice to Configure Particular Camera Properties:      3
FirmWareVersion Number = 1.7.131.1127

Extension UVC Settings Configuration is Done

0 - Exit
1 - Back
2 - Main Menu
3 - GetFirmware Version Number

Pick a Relevant Choice to Configure Particular Camera Properties:      █
```

Figure 12: Getting Firmware Version Number

## Exiting the Application

To exit the application, you must enter **0** in **Pick a Relevant Choice to Configure Particular Camera Properties** as shown below.

```
Extension UVC Settings Configuration is Done

0 - Exit
1 - Back
2 - Main Menu
3 - GetFirmware Version Number

Pick a Relevant Choice to Configure Particular Camera Properties:      0
root@:/opt/OpenCV/source/opencv-3.3.1/sources/samples/cpp/tutorial_code/OpenCVCam# █
```

Figure 13: Exiting the Application

# Troubleshooting

---

In this section, you can view the list of commonly occurring issues and their troubleshooting steps.

## Linux Issues

### **Camera device connected, but the application does not displayed.**

It seems like the camera is not properly detected by Linux, so check with the path `cd /sys/class/video4linux/` to detect the device.

### **CMake Error: The source directory does not appear to contain CMakeLists.txt.**

1. Run `cmake-gui` command from the terminal to launch cmake.
2. Provide the source and release path of the OpenCV project.
3. Click configure to make the changes and generate for the solution.

### **Compiling command line application, libudev.so error adding symbols, DSO missing from command line.**

You must include the `-ludev` dependency in the compilation command.

### **Camera device displays in the command line but selecting the index does not end up with the preview.**

Make sure the camera connected to the port starts with `video0`  
`/sys/class/video4linux`.

## Windows Issues

### **Linker issues relating to setupapi\* while building.**

Add `setupapi.lib` in the `modules/opencv_videoio` properties tab under **Linker > input > Additional dependencies**.

### **There is no install folder present in the `opencv<version>/build/`**

Build the CMakeTargets or Install project in both Debug and Release configurations.

## **Contact Us**

If you need any support on OpenCV Sample application, please contact us using the Live Chat option available on our website - <https://www.e-consystems.com/>

## **Creating a Ticket**

If you need to create a ticket for any type of issue, please visit the ticketing page on our website - <https://www.e-consystems.com/create-ticket.asp>

## **RMA**

To know about our Return Material Authorization (RMA) policy, please visit the RMA Policy page on our website - <https://www.e-consystems.com/RMA-Policy.asp>

## **General Product Warranty Terms**

To know about our General Product Warranty Terms, please visit the General Warranty Terms page on our website - <https://www.e-consystems.com/warranty.asp>

## Revision History

Rev	Date	Description	Author
1.0	10-April-2018	Initial Draft	Chandra Sekar V