

### How to power on the Handheld

Hold F2 and F5 and the same time till the screen powers on.




Select the LGV # that you are trying to connect to, it will be highlighted when selected. Then tap connect at the bottom left.



Watch video for Next step

In this step you will tap start parring and watch the yellow light on the LGV to see how many times it flashes. Then confirm the number of flashes on the handheld.

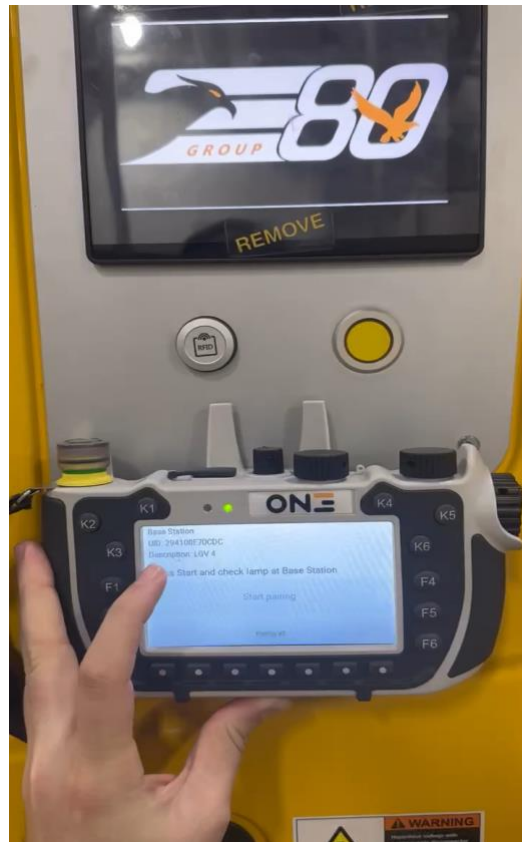

Follow as instructed on the handheld

Emergency  
Stop button



Now tap on the flag icon. Top right of the handheld



Flag icon



Tap on the Home icon



Tap on the box with a check mark icon



1. Tap the yellow box to enter the password (8080)



2. Press F4 to Log in

You will know you are logged in when you see the yellow wrench

How to connect the handheld to operate the LGV

Hold down the Deadman




While holding the Deadman press K4 3 times and hold on the 3<sup>rd</sup> till you hear a click on the LGV and the light on top is green. Now you are connected to operate. ( at anytime you let go of the Deadman you will have to repeat this process)

Now you will need to synro steer by clicking F5. Then steer not synchronized highlighted in red will be highlighted green. (Doing this while continuing to hold the Deadman)



### How to Auto insert the LGV

Fist you will need to insert the LGV into the area shown below (ASRS dock) into the correct direction as the LGVs travel. That is counterclockwise shown by the red dashes.

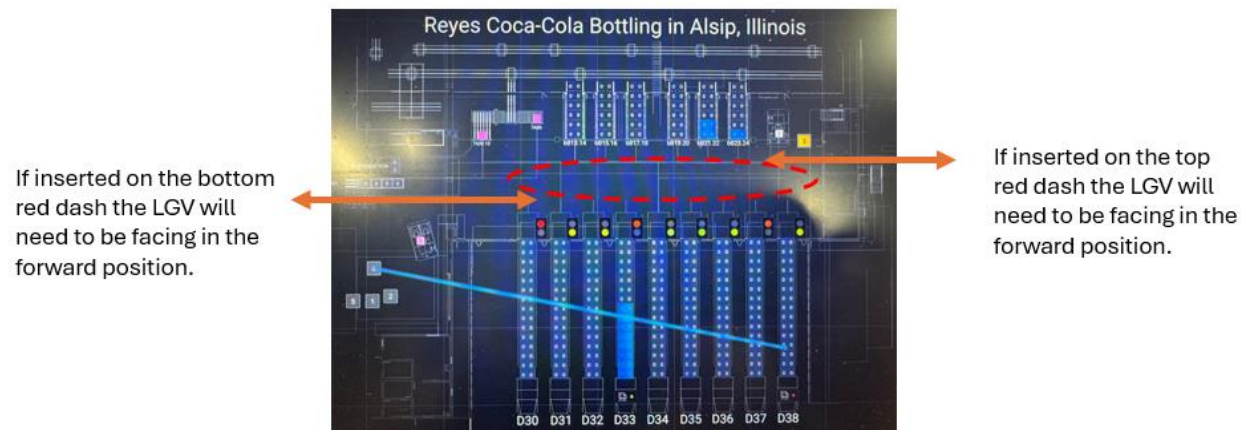

Select the auto insert box at the bottom right as show below.

Next slide for the rest of the steps





1. Search Segment
2. Be sure Segment changes on the screen
3. Always have in forward (FW) direction
4. Enable Autoinsert





To Unpair:

1. Click K1 and K4
2. Click Unpair
3. On the LGV, turn to Auto then Lock and Reset LGV

