









	FESW1	FESW2	FESW3
Tx(GSM900)	H	L	L
Tx(DCS1800/1900)	L	H	L(H)
Rx(GSM900)	L	L	L
Rx(DCS1800)	L	L	L
Rx(PCS1900)	L	L	H

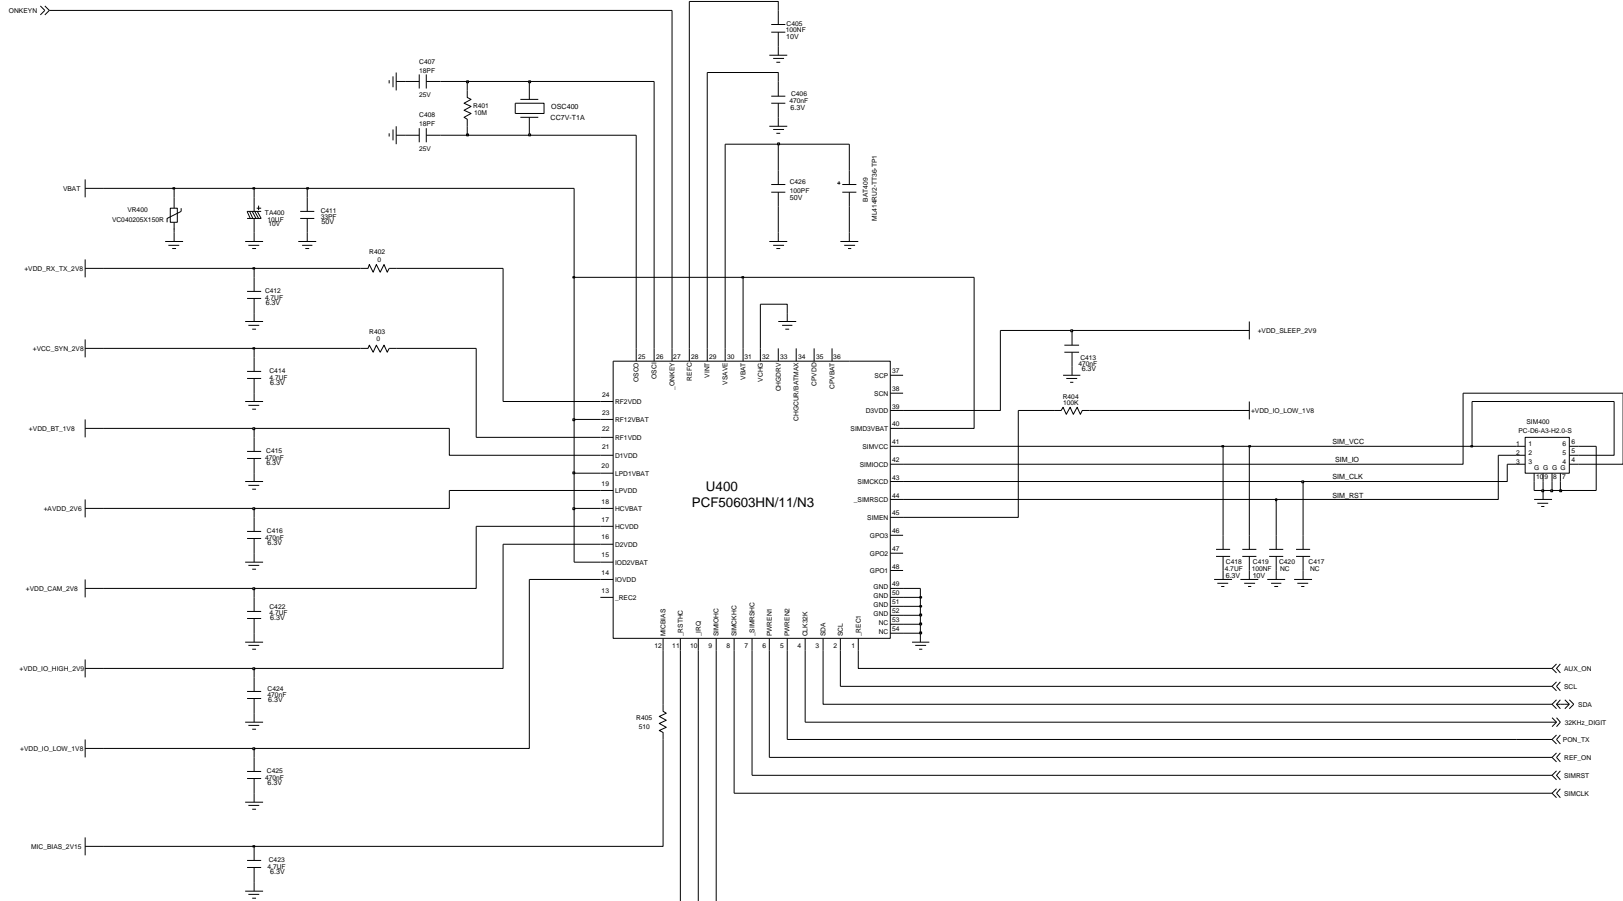

LDO



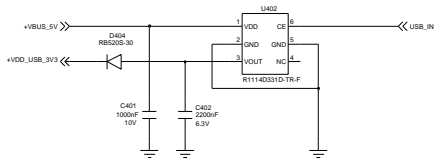


VDD_IO_HIGH	2.8V
VDD_IO_LOW	1.8V
VDD_VIB	2.8V
VDD_IMAGE	1.9V
VDD	2.8V
VDD_HPA	2.8V
VDD_RX_TX	2.8V
VCC_SYN	2.8V
VDD_GSM_CORE	1.8V
VDD_CORE_BT	1.8V
VDD_VIB	3.3V
VDD_4V	4V

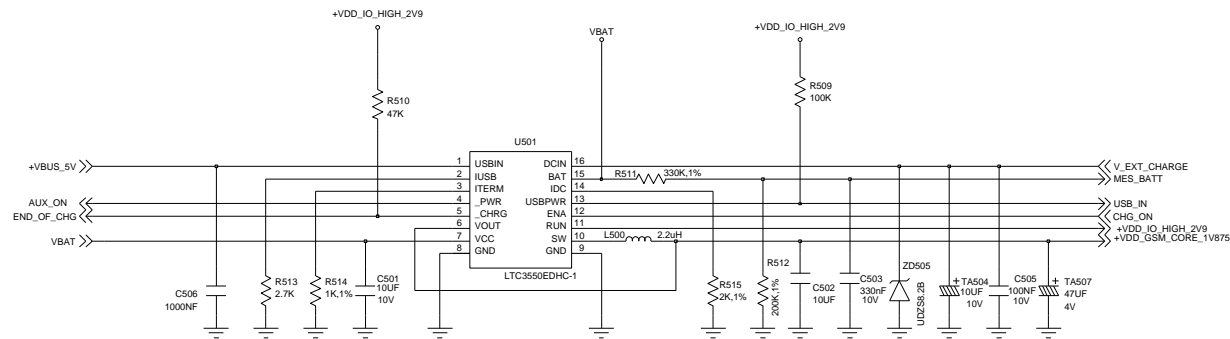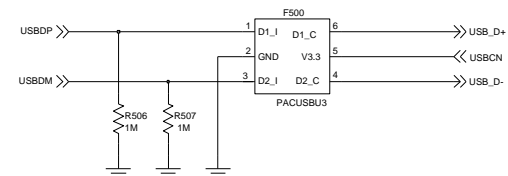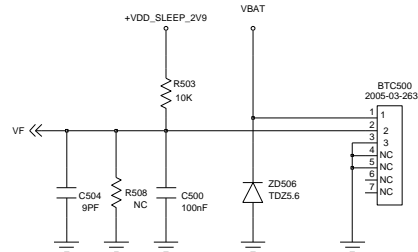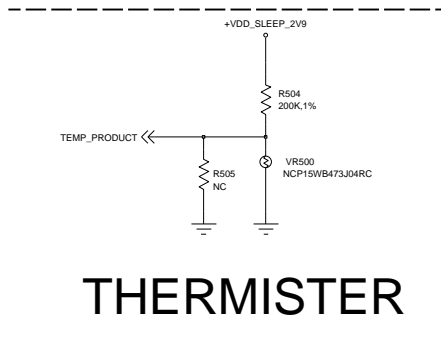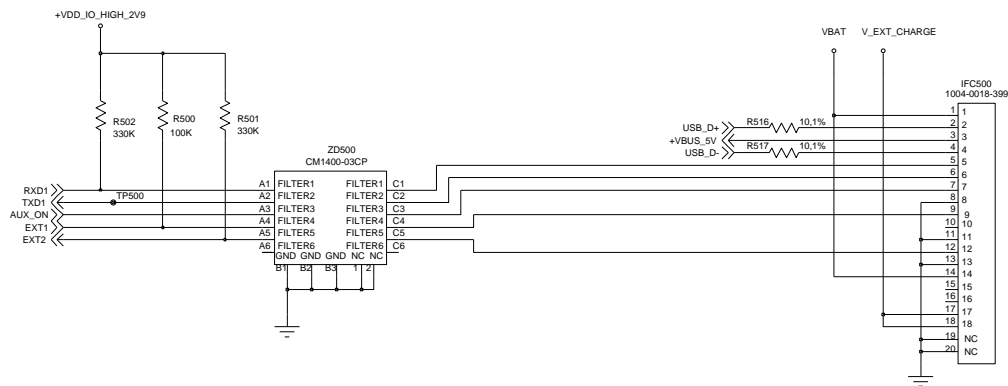


BATTERY CHARGING & DC/DC Down Conveter(1.875Volt)



Title		
IF Connector & Charging Schematic		
Size	A3	
SAMSUNG/SGH-E380/BB		Rev 0.7A
Date:	Sheet 5 of 7	

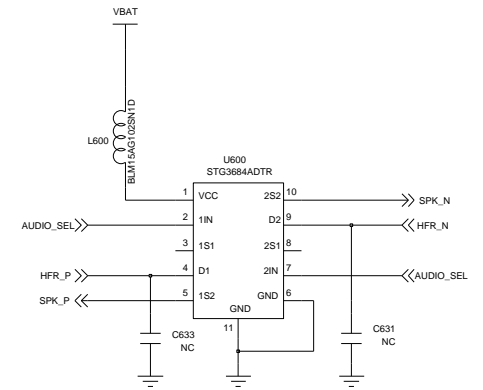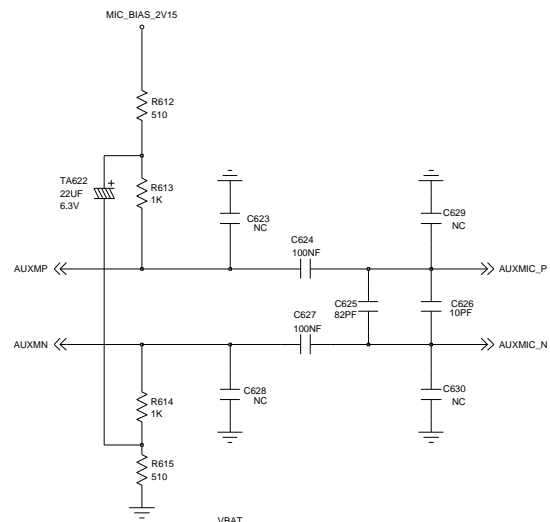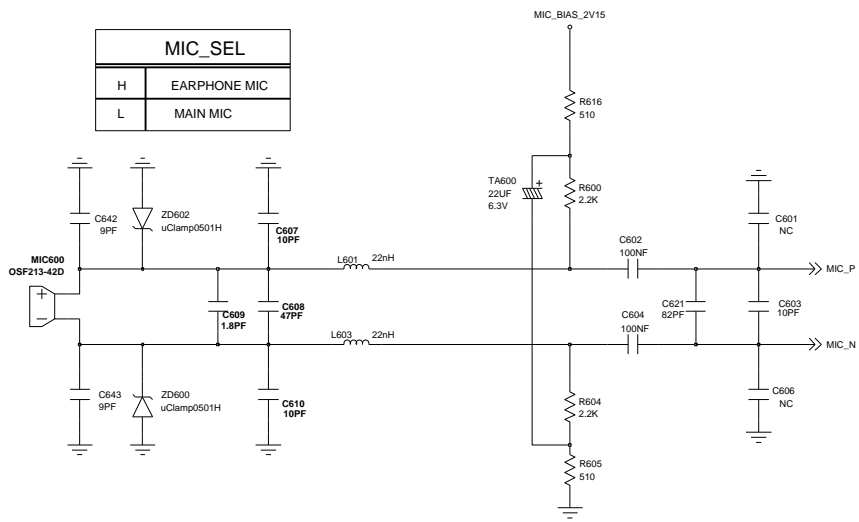


MICROPHONE

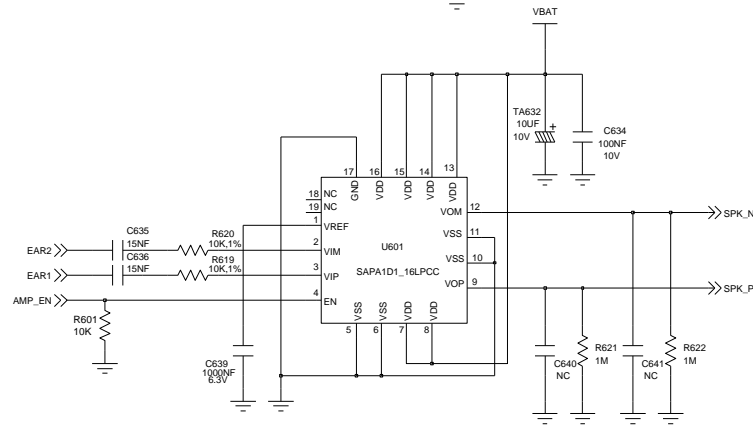


Audio AMP

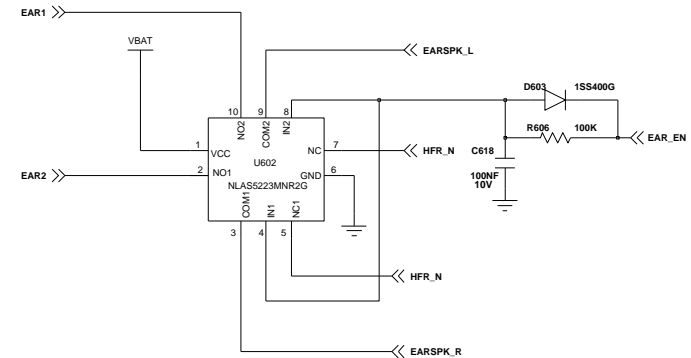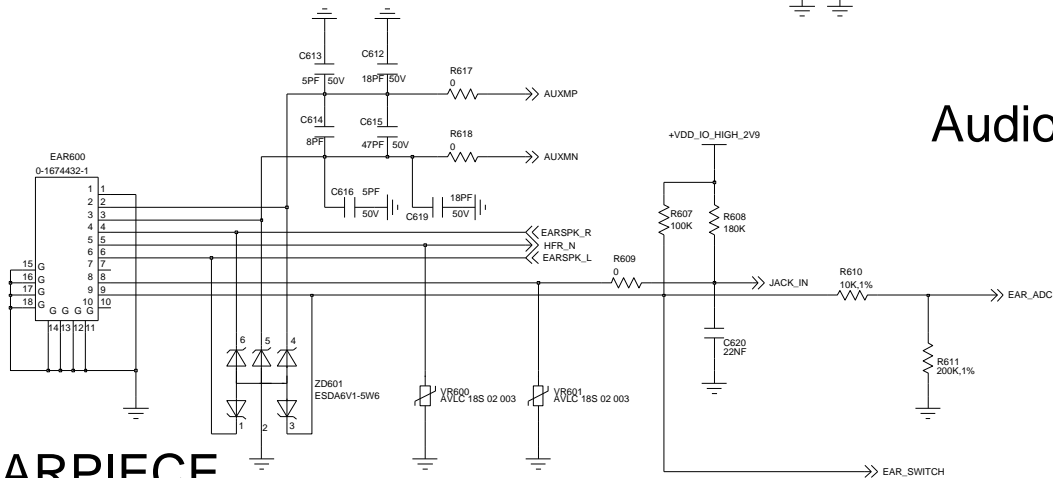


EARPIECE

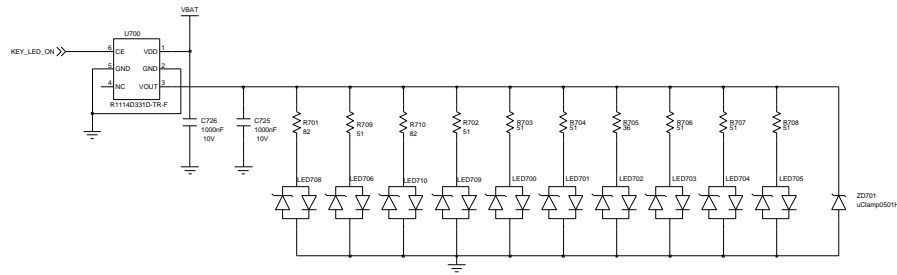


KEY BACKLIGHT




PCB_HOLE

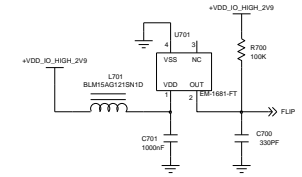


FLIP

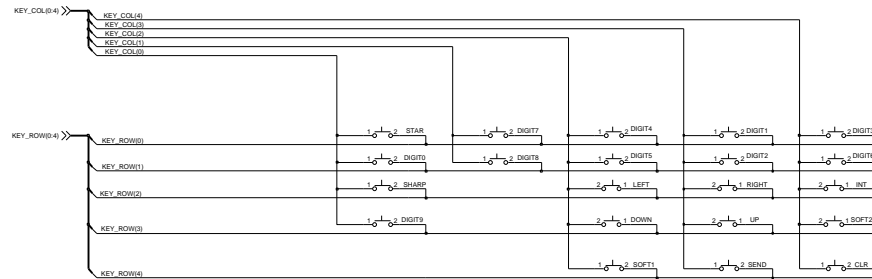


KEY_MAP

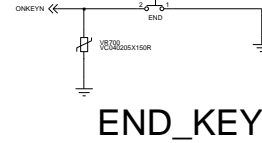


END_KEY

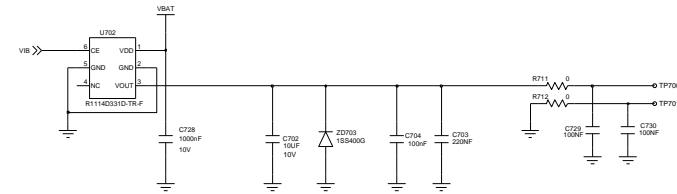

DC-MOTOR

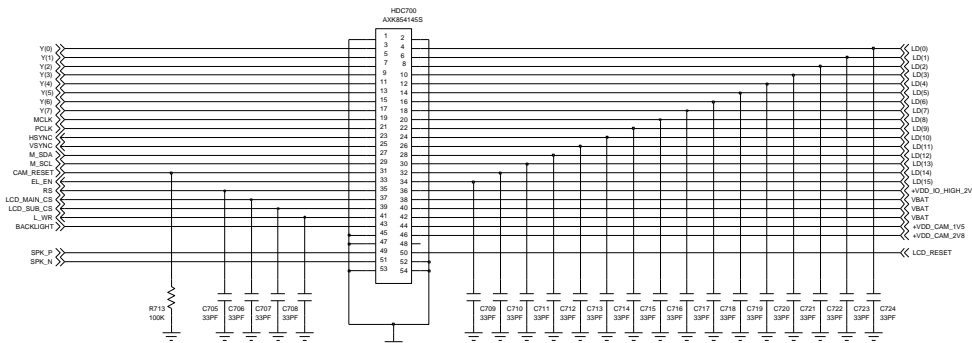

LCD_CONNECTOR

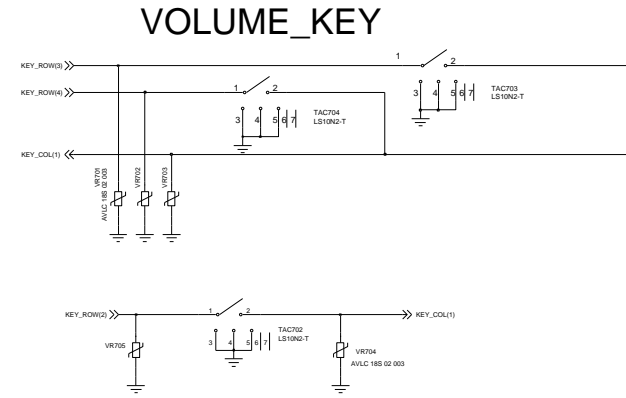

CAMERA_KEY

www.s-manuals.com