

# SAMSUNG SM-G965F Service Manual



**SAMSUNG**

# ***SERVICE*** *Manual*


**Mobile1Tech**

**mobile1tech.com**

**HARDWARE**

## 8. Level 3 Repair


### 8-4-1. Power On

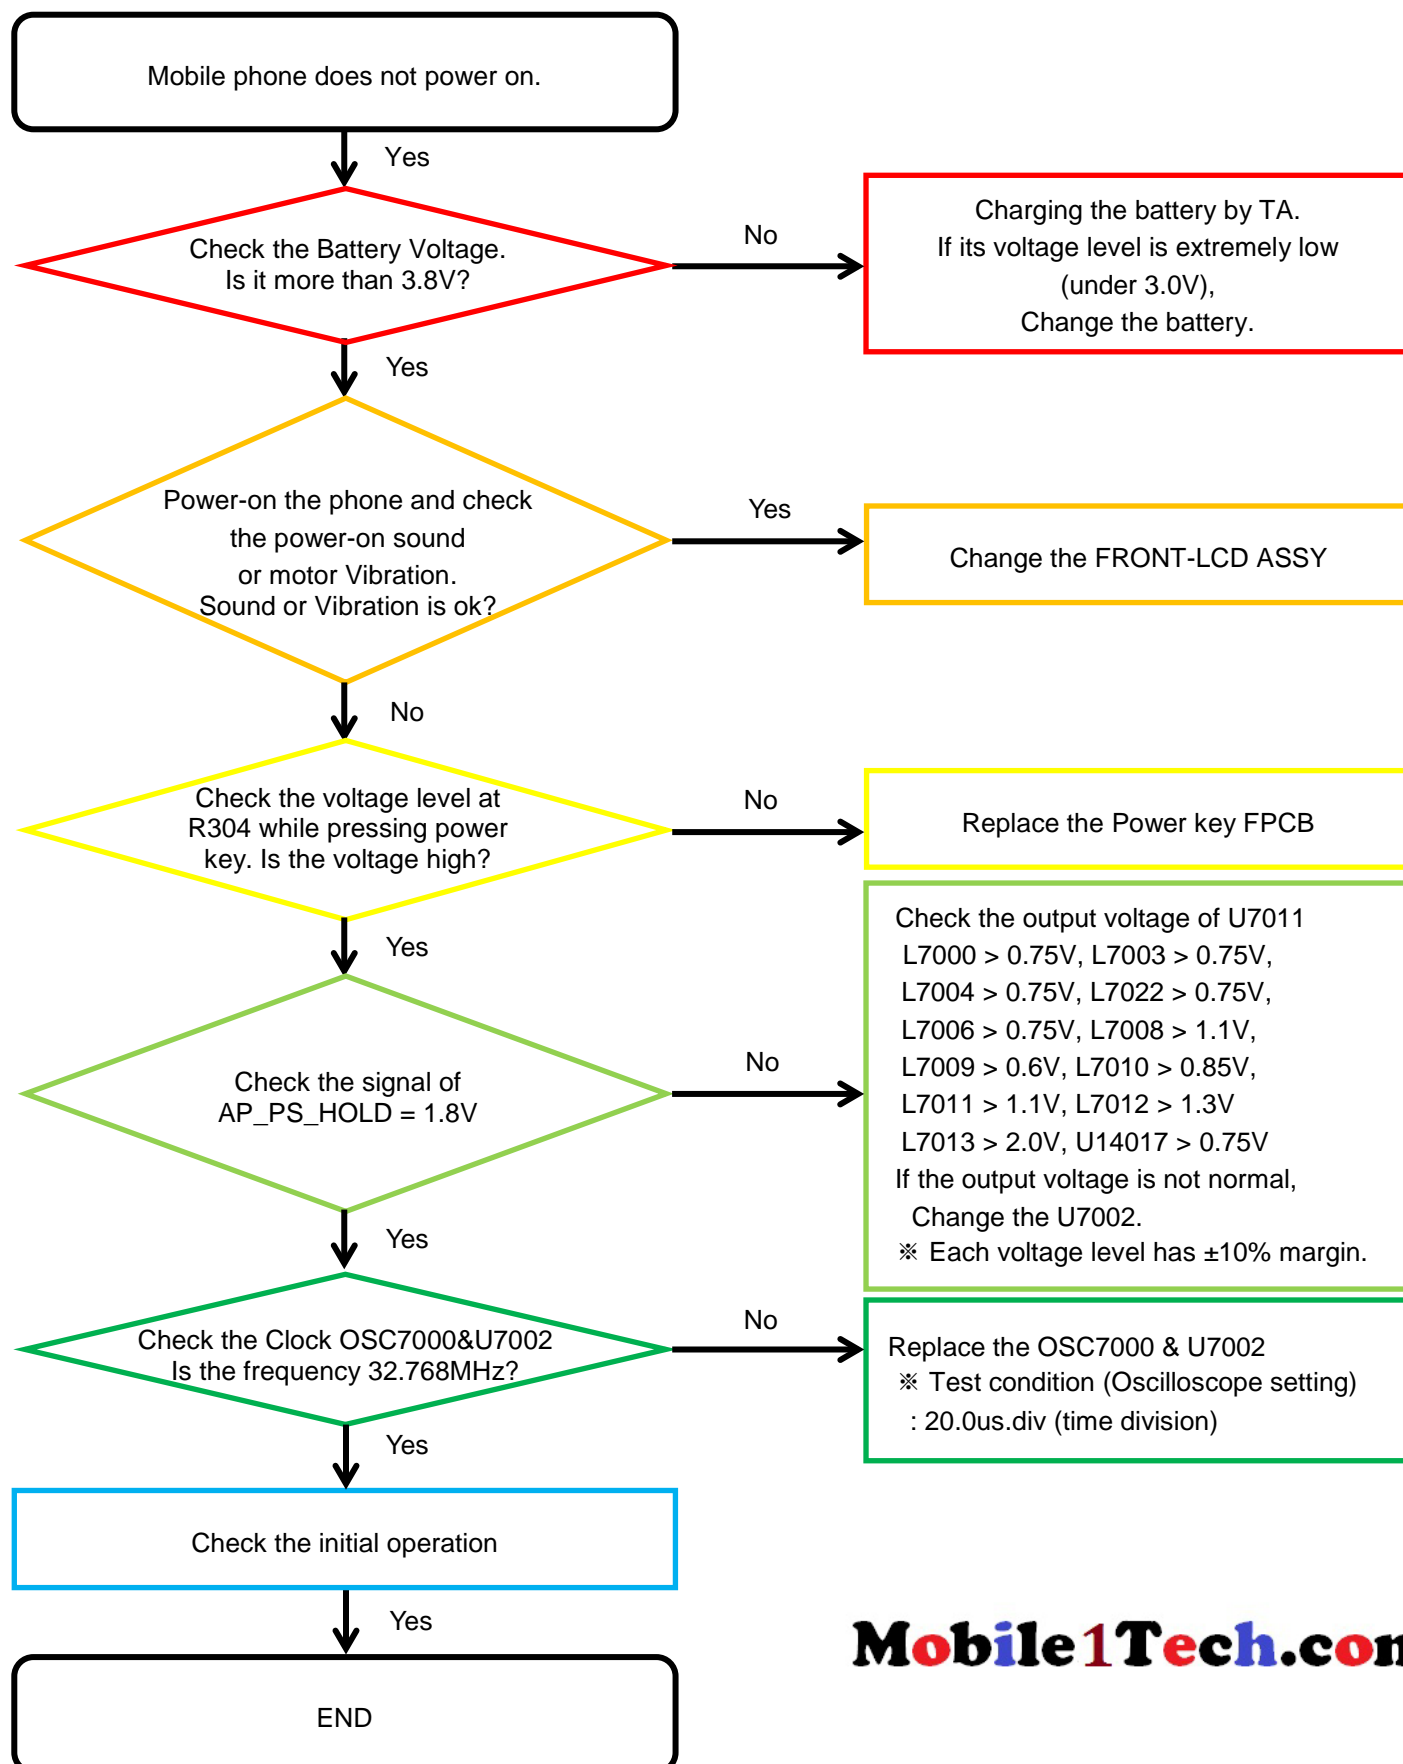

## 8. Level 3 Repair



### 8-4-2. Initial

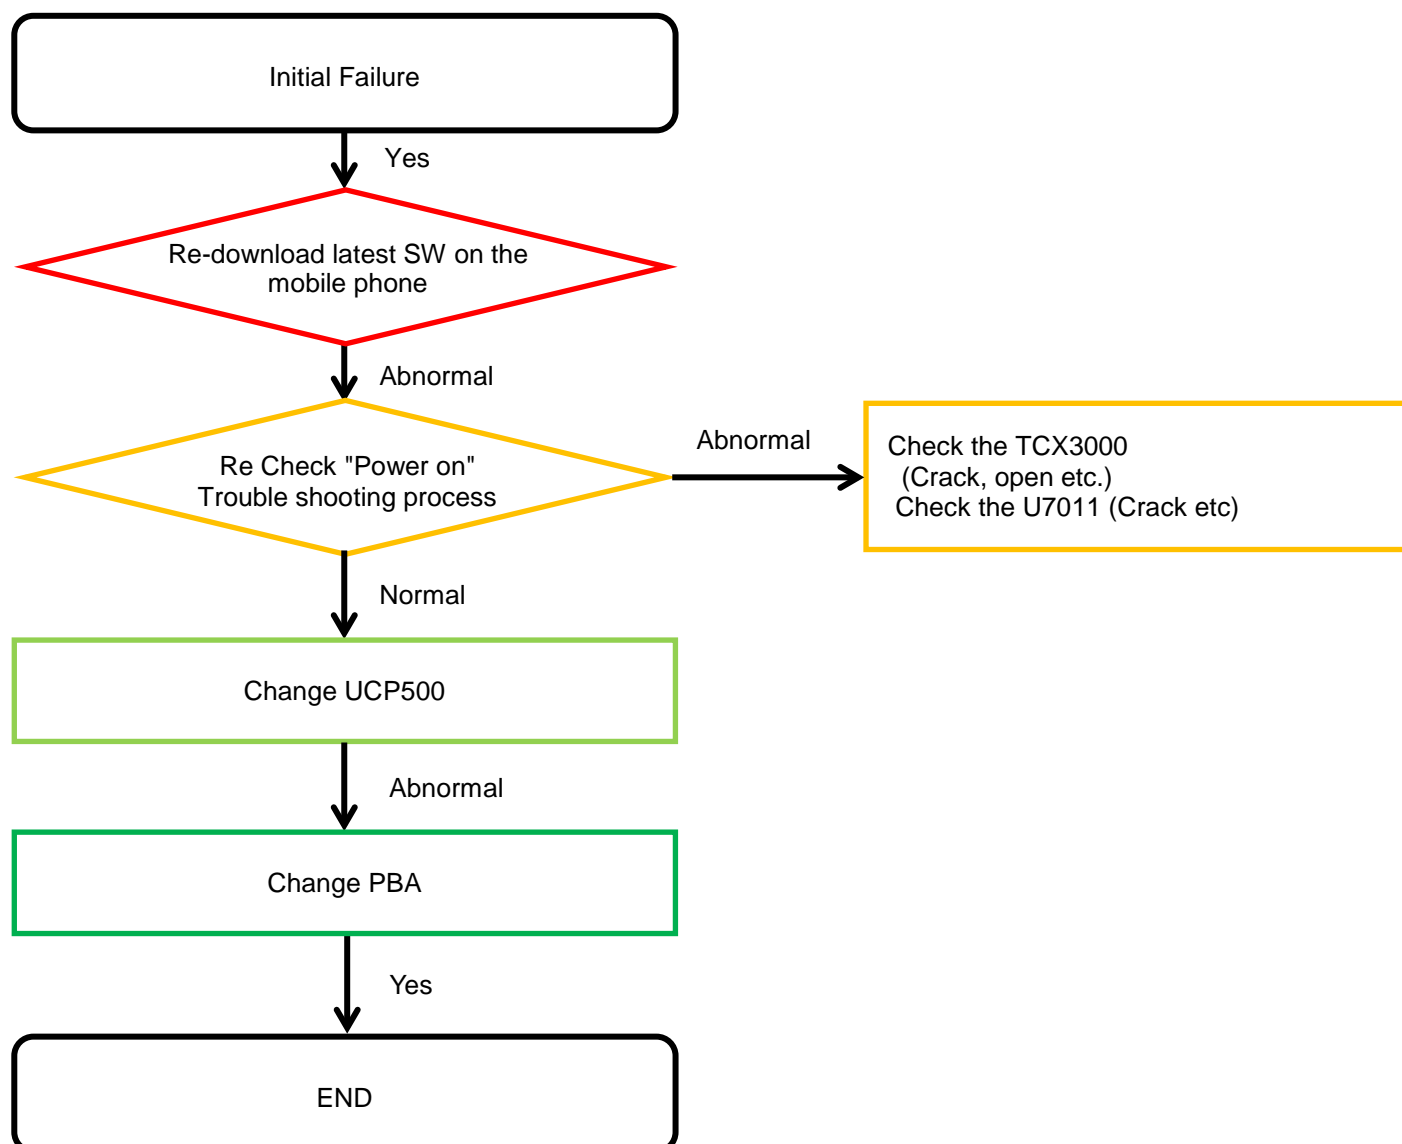


**Mobile1Tech.com**

## 8. Level 3 Repair



### 8-4-3. No Service

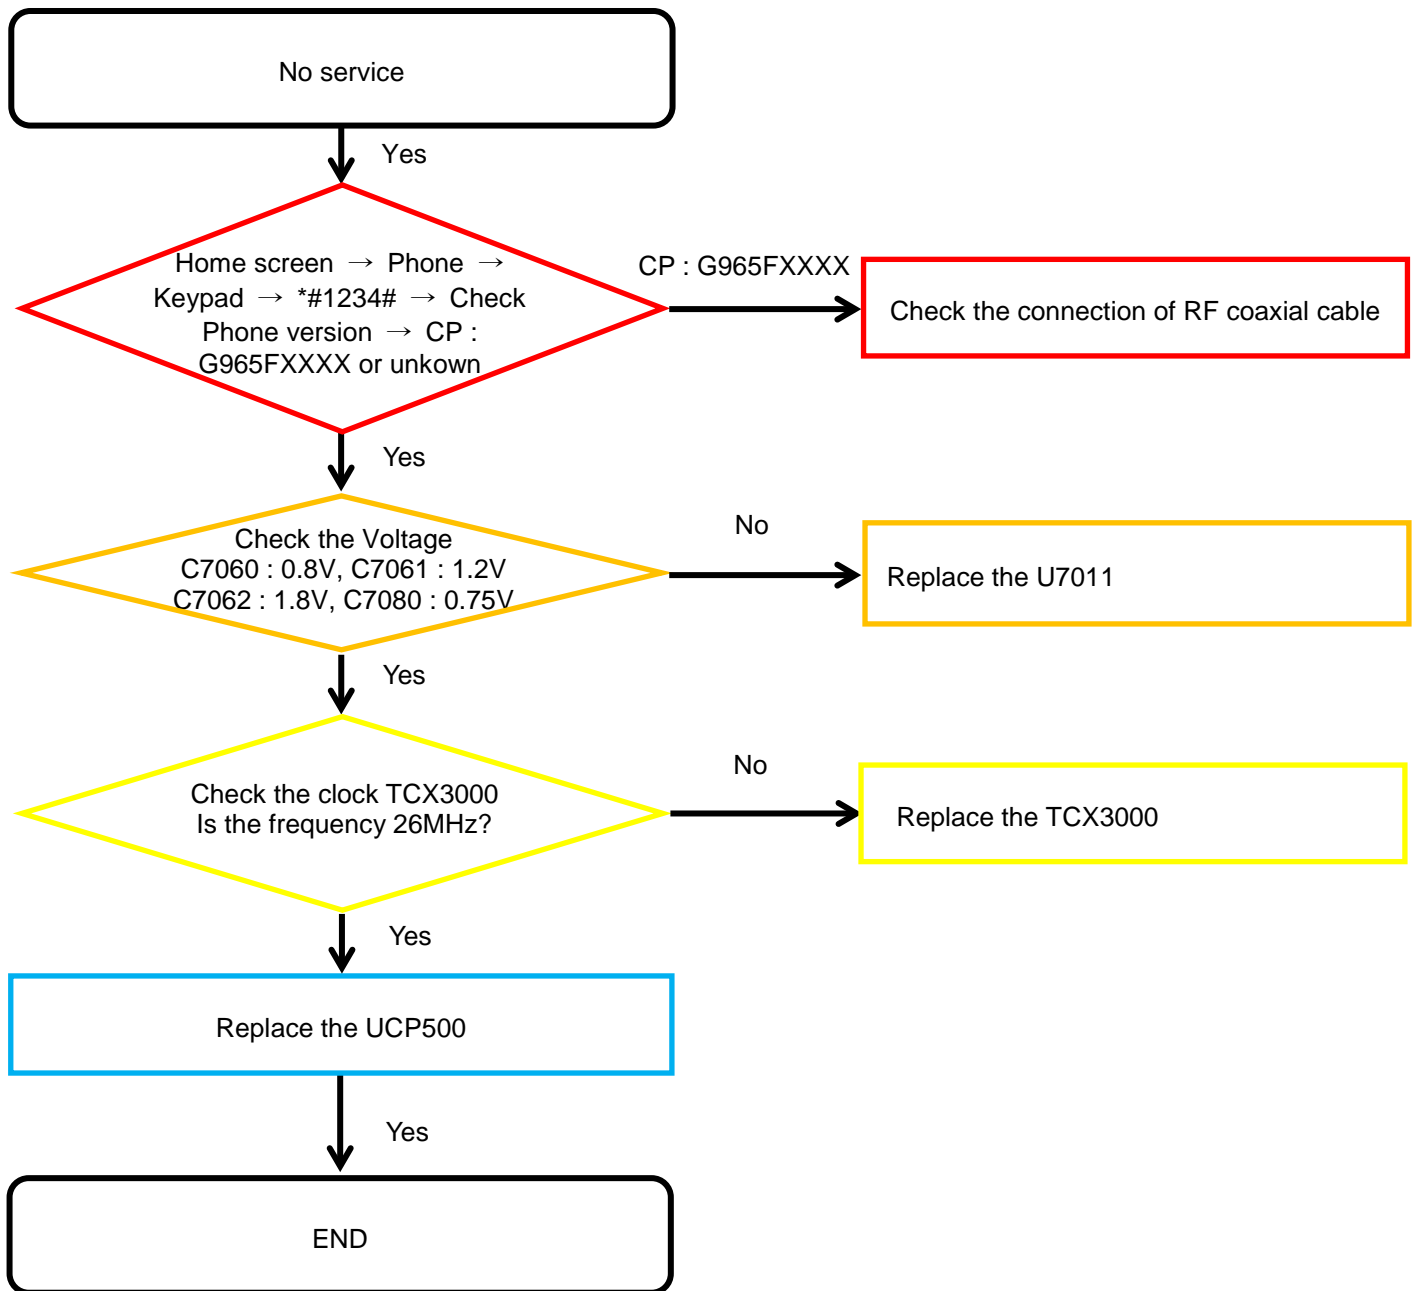


# Mobile1Tech.com

## 8. Level 3 Repair



### 8-4-4. SIM Part

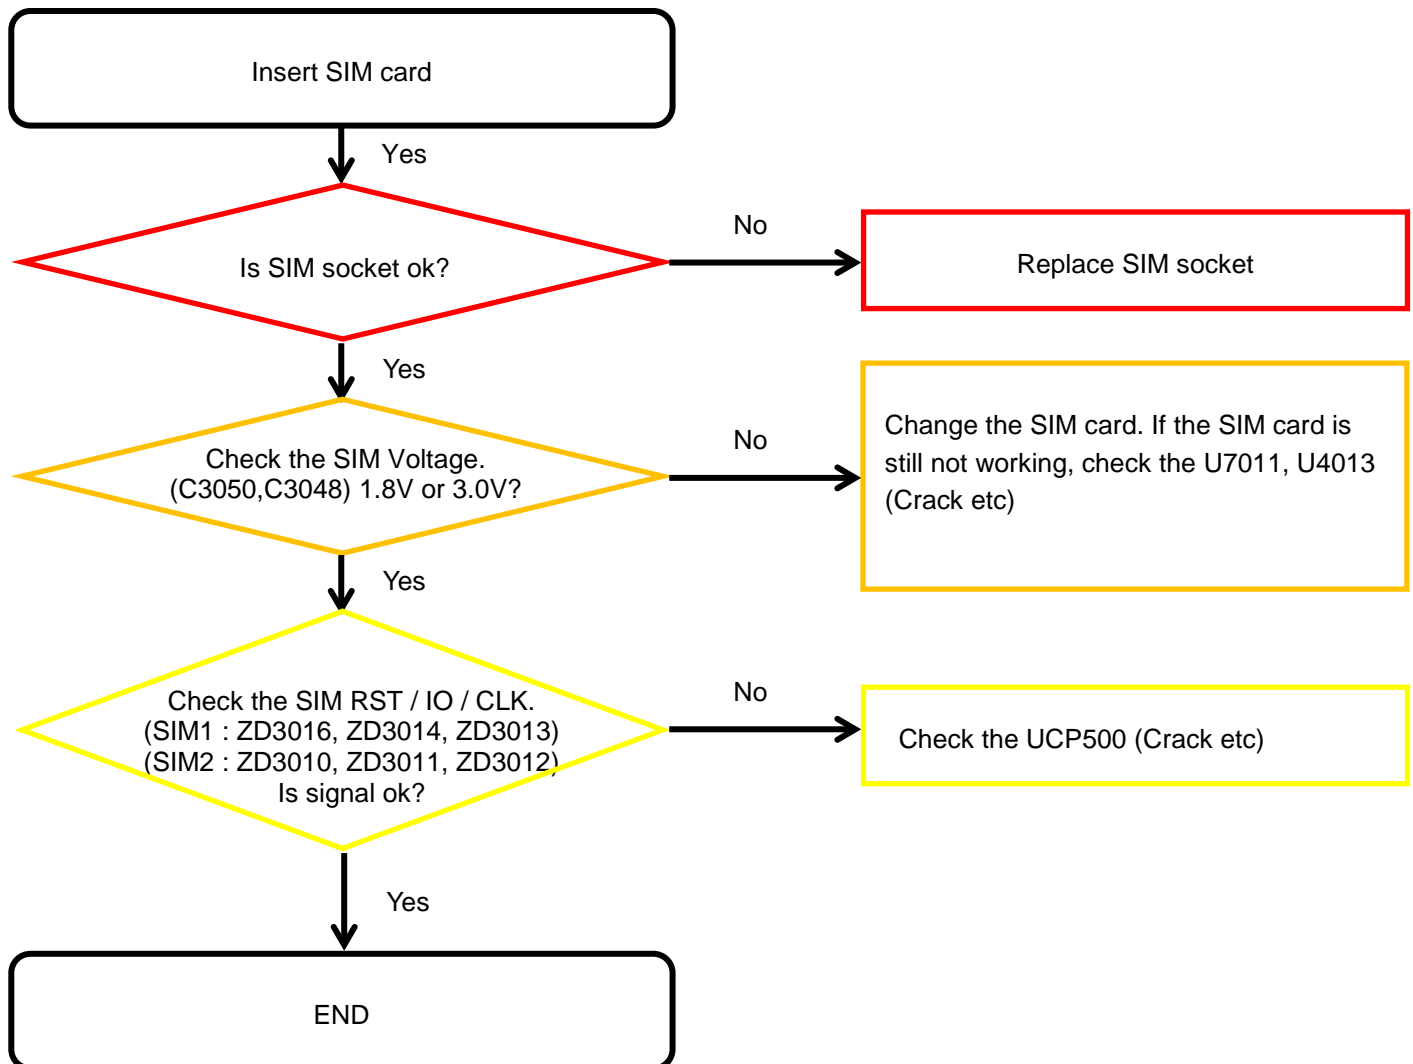


**Mobile1Tech.com**

## 8. Level 3 Repair



### 8-4-5. T-Flash Part

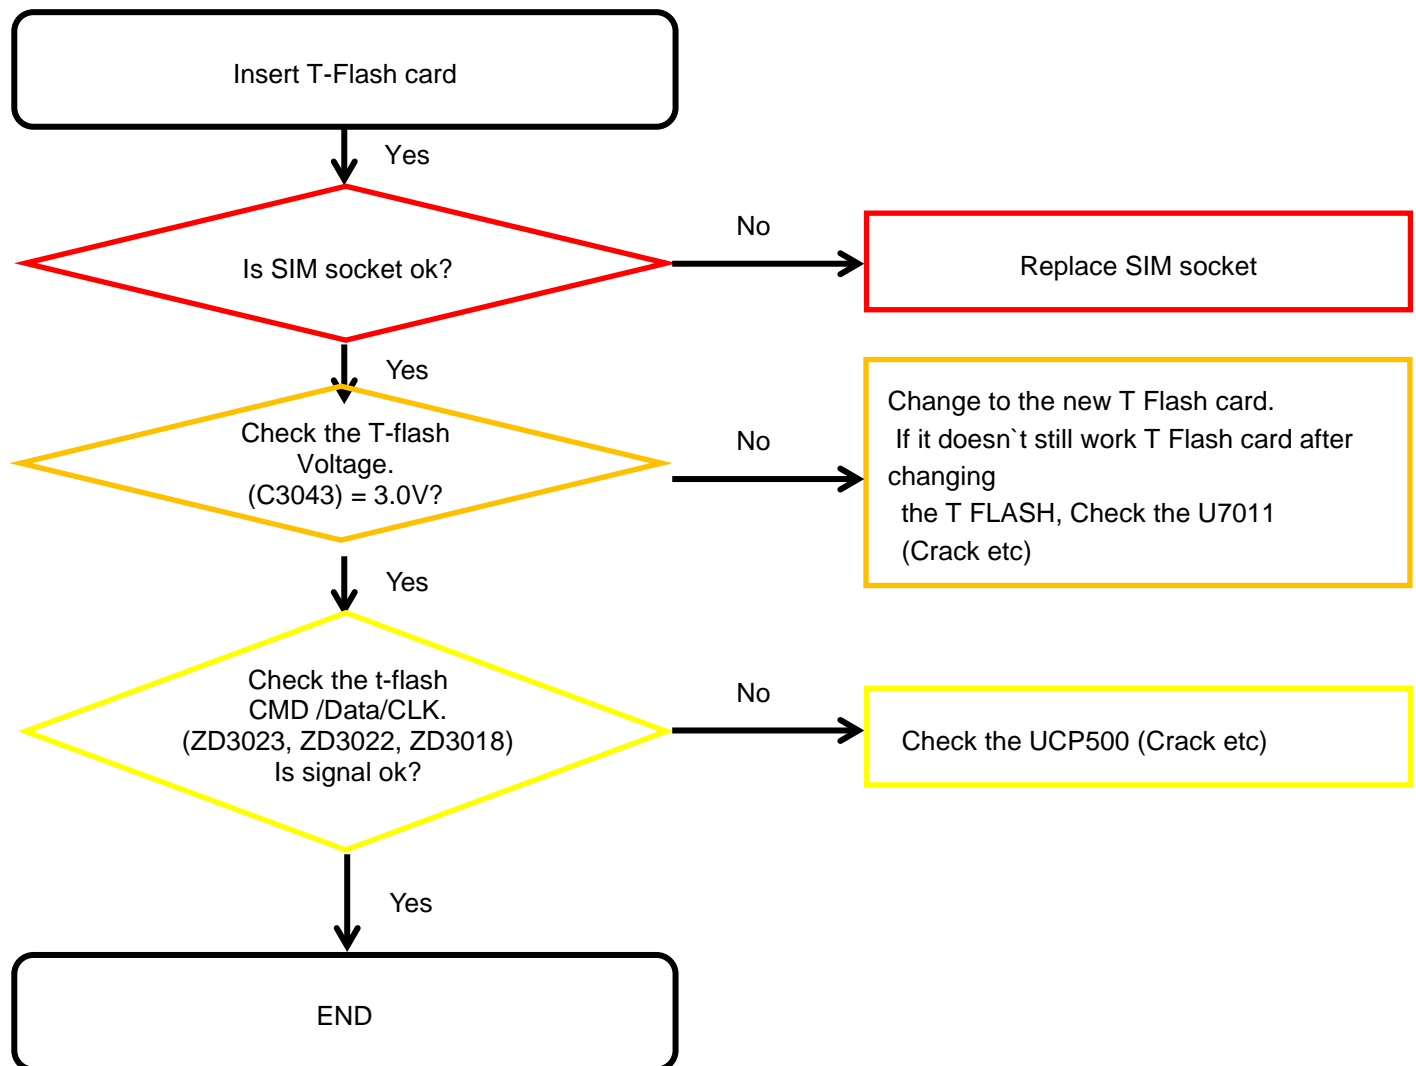


**Mobile1Tech.com**

## 8. Level 3 Repair



### 8-4-6-1. Cable Charging Part (Normal/Fast)

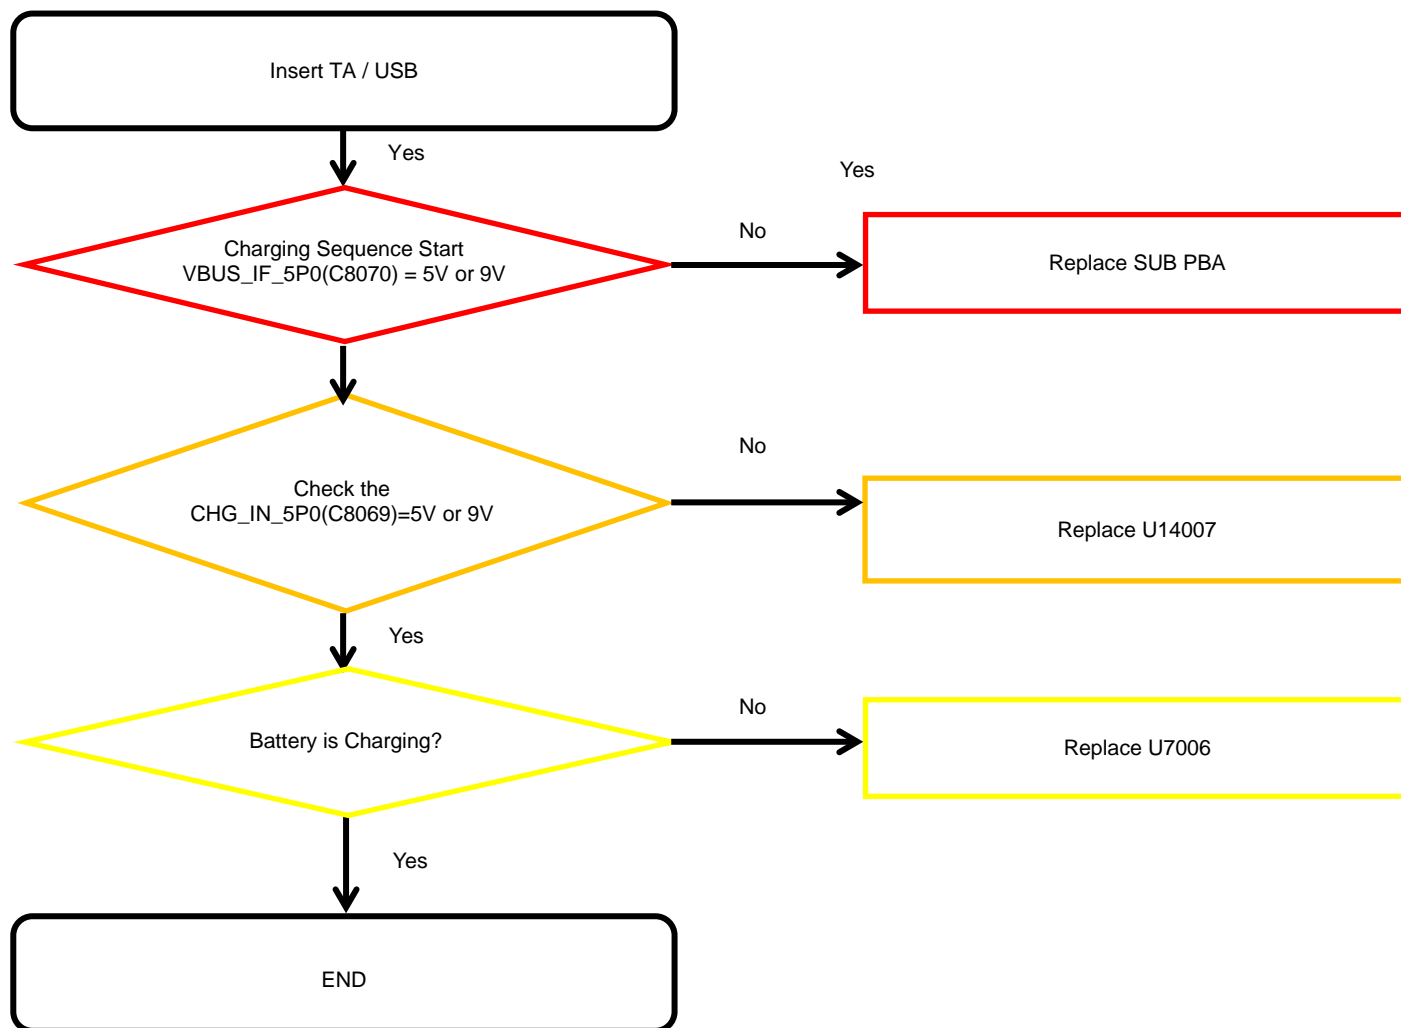


**Mobile1Tech.com**

## 8. Level 3 Repair



### 8-4-6-2. Wireless Charging Part (Normal/Fast)

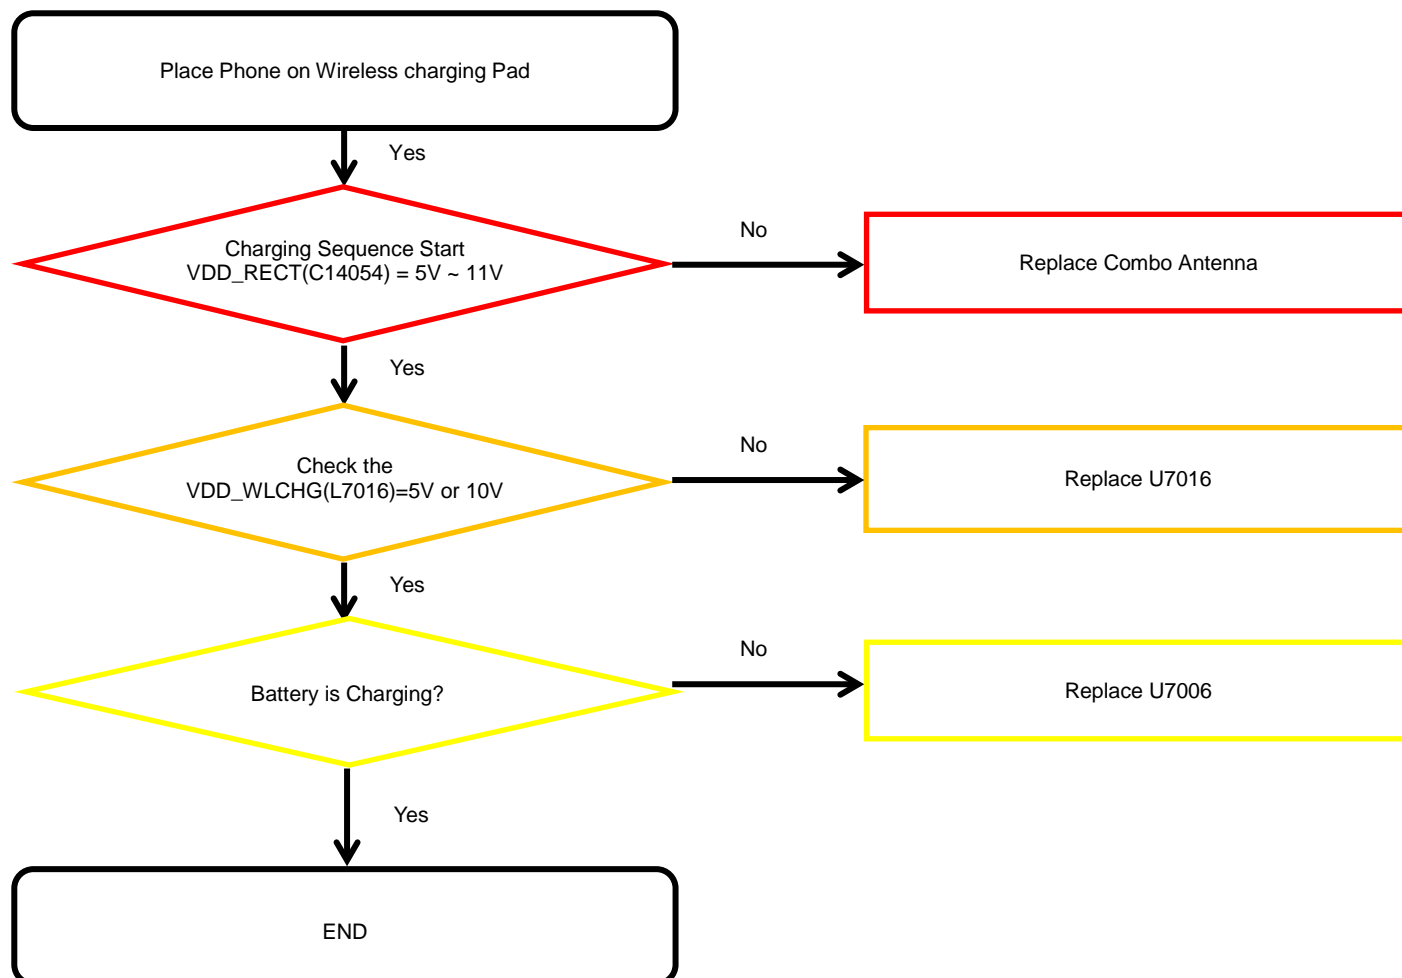


**Mobile1Tech.com**



## 8. Level 3 Repair



### 8-4-7. OTG

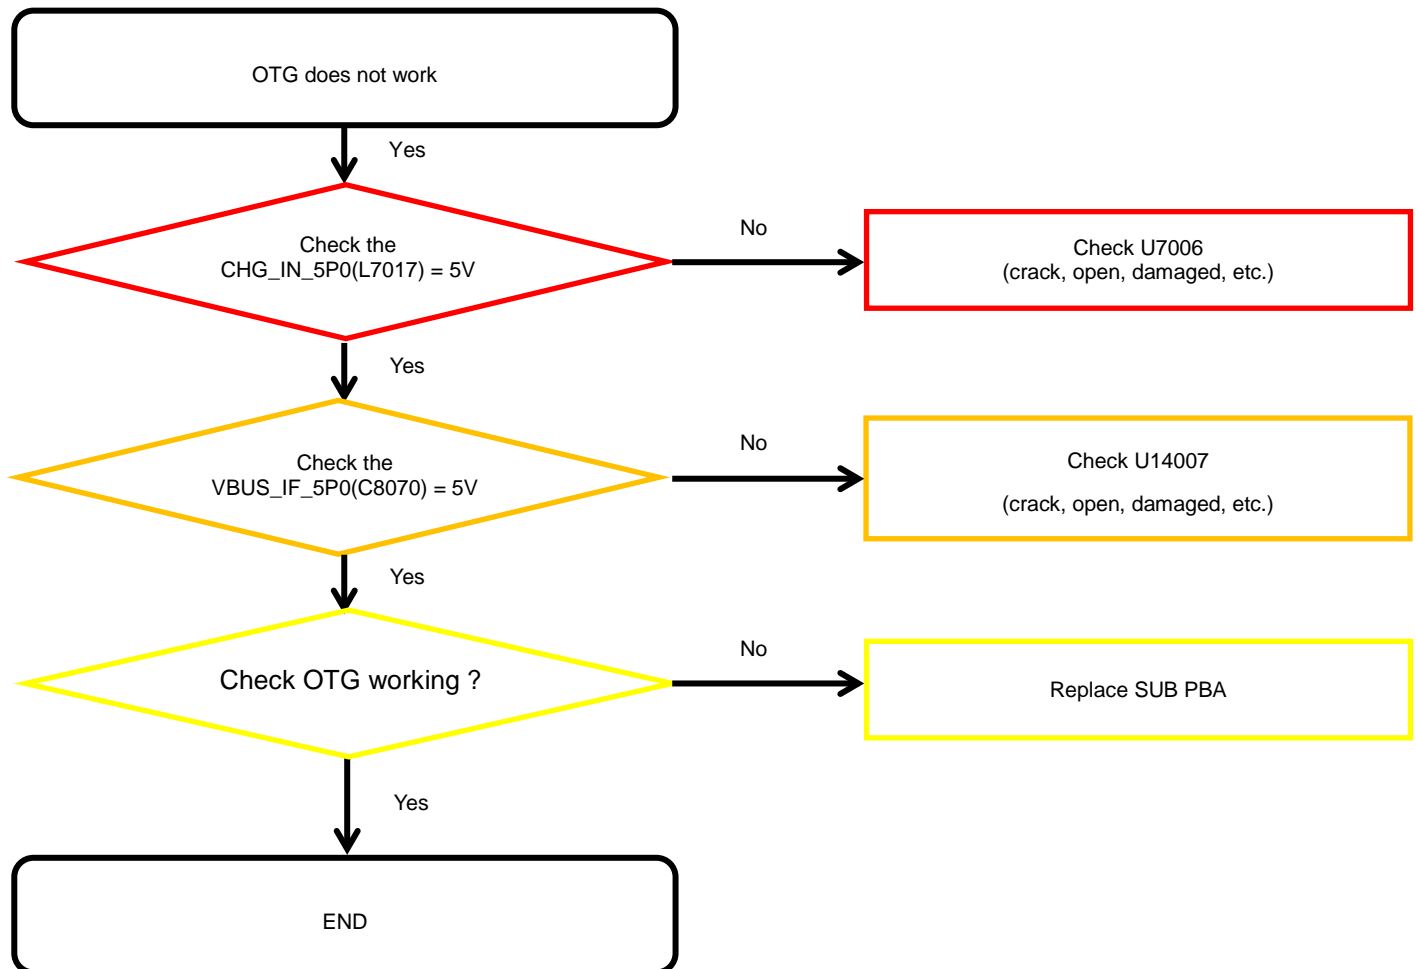


**Mobile1Tech.com**

## 8. Level 3 Repair



### 8-4-8-1. Sensor Hub

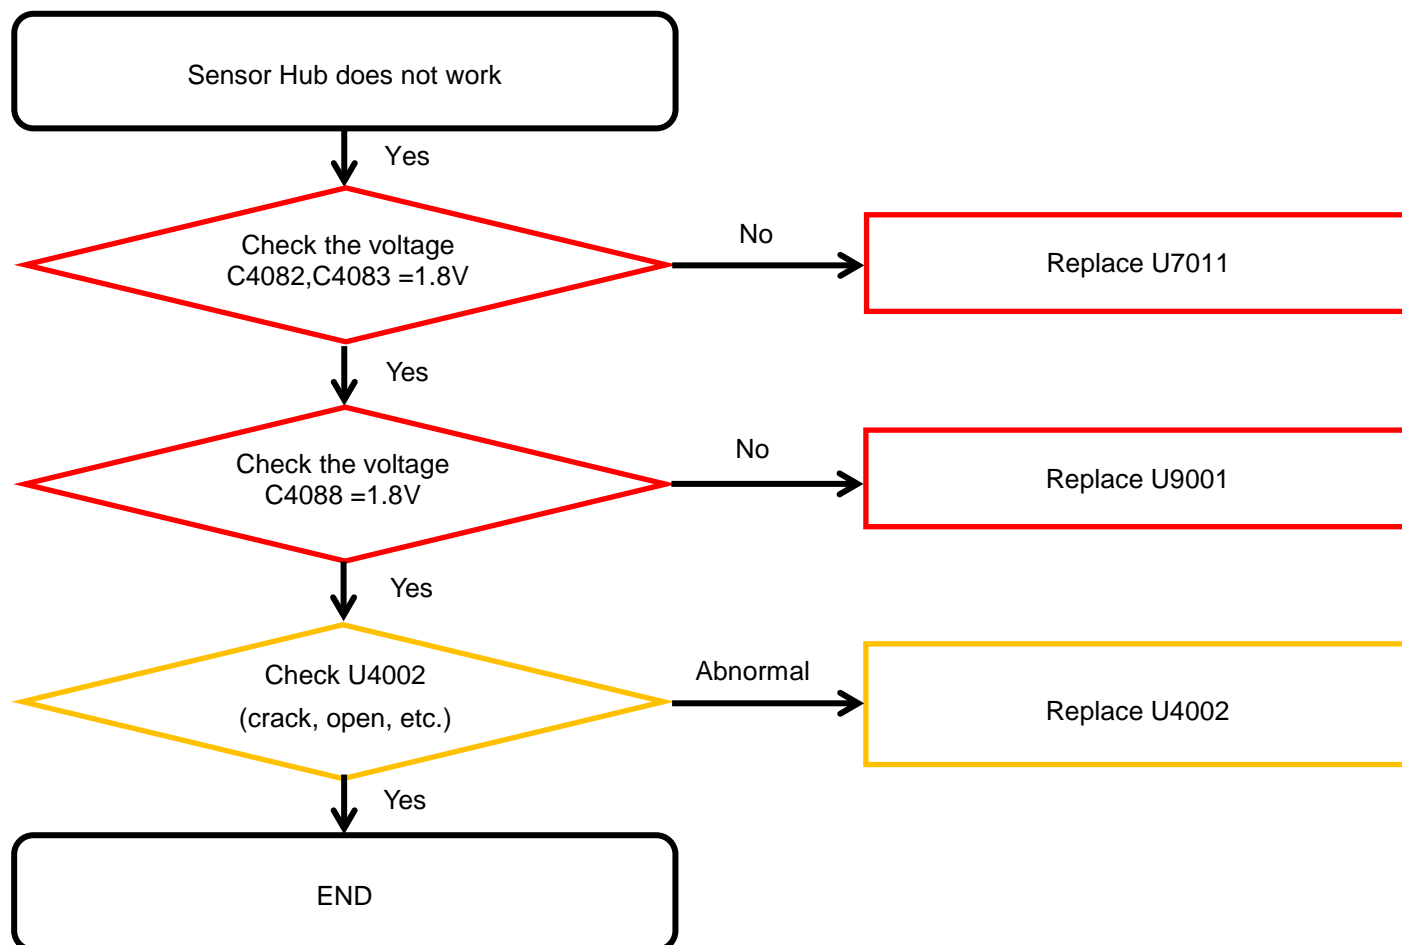


**Mobile1Tech.com**

## 8. Level 3 Repair



### 8-4-8-2. Magnetic Sensor

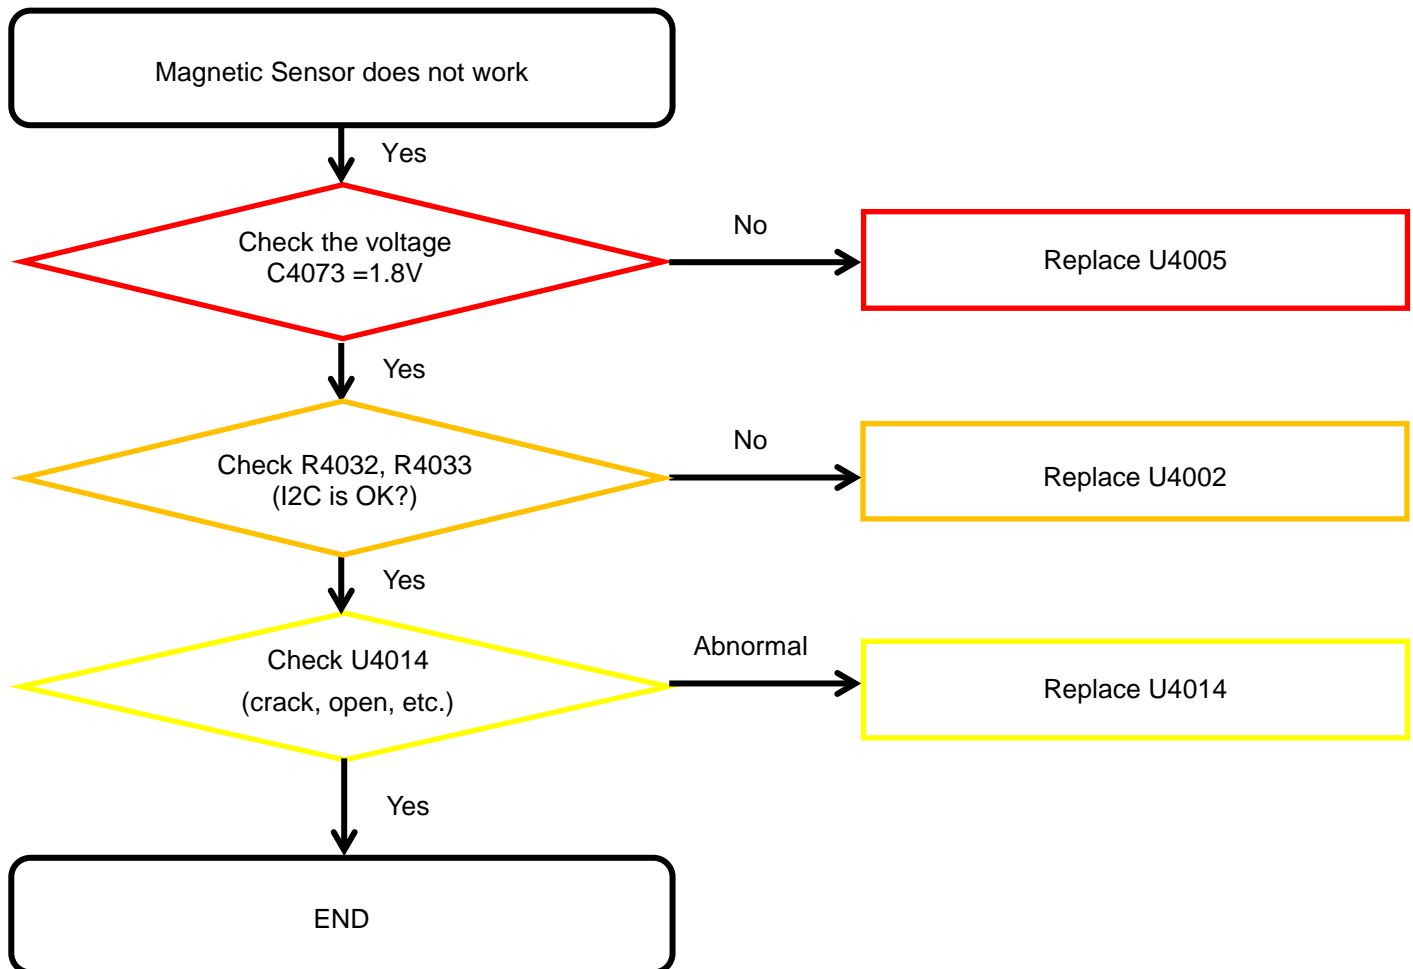


**Mobile1Tech.com**

## 8. Level 3 Repair




### 8-4-8-3. 6Axis Sensor

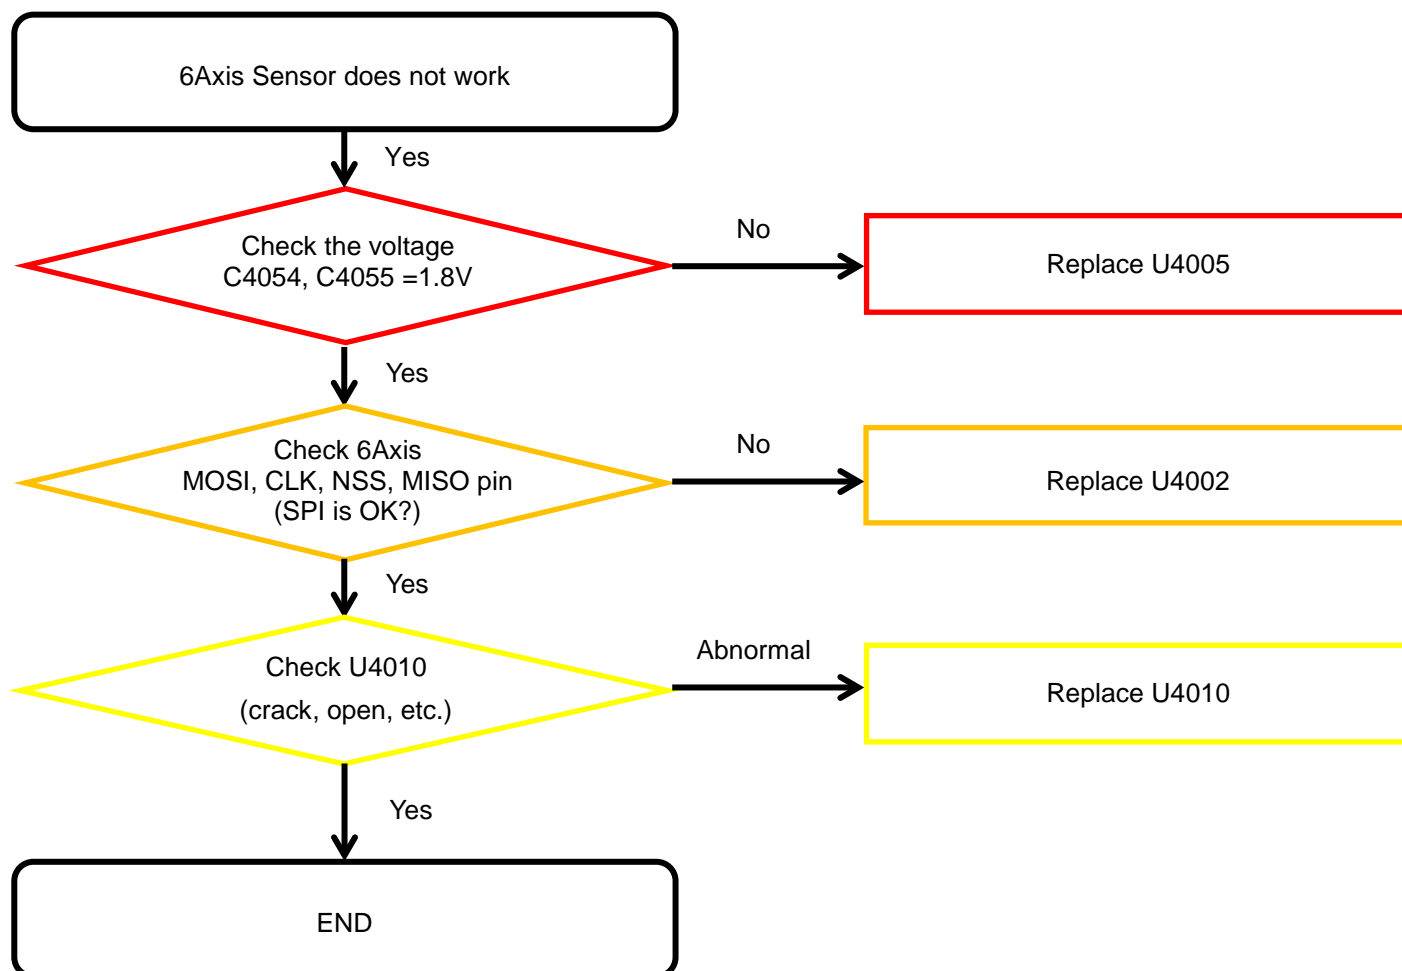

## 8. Level 3 Repair




### 8-4-8-4. Barometer sensor

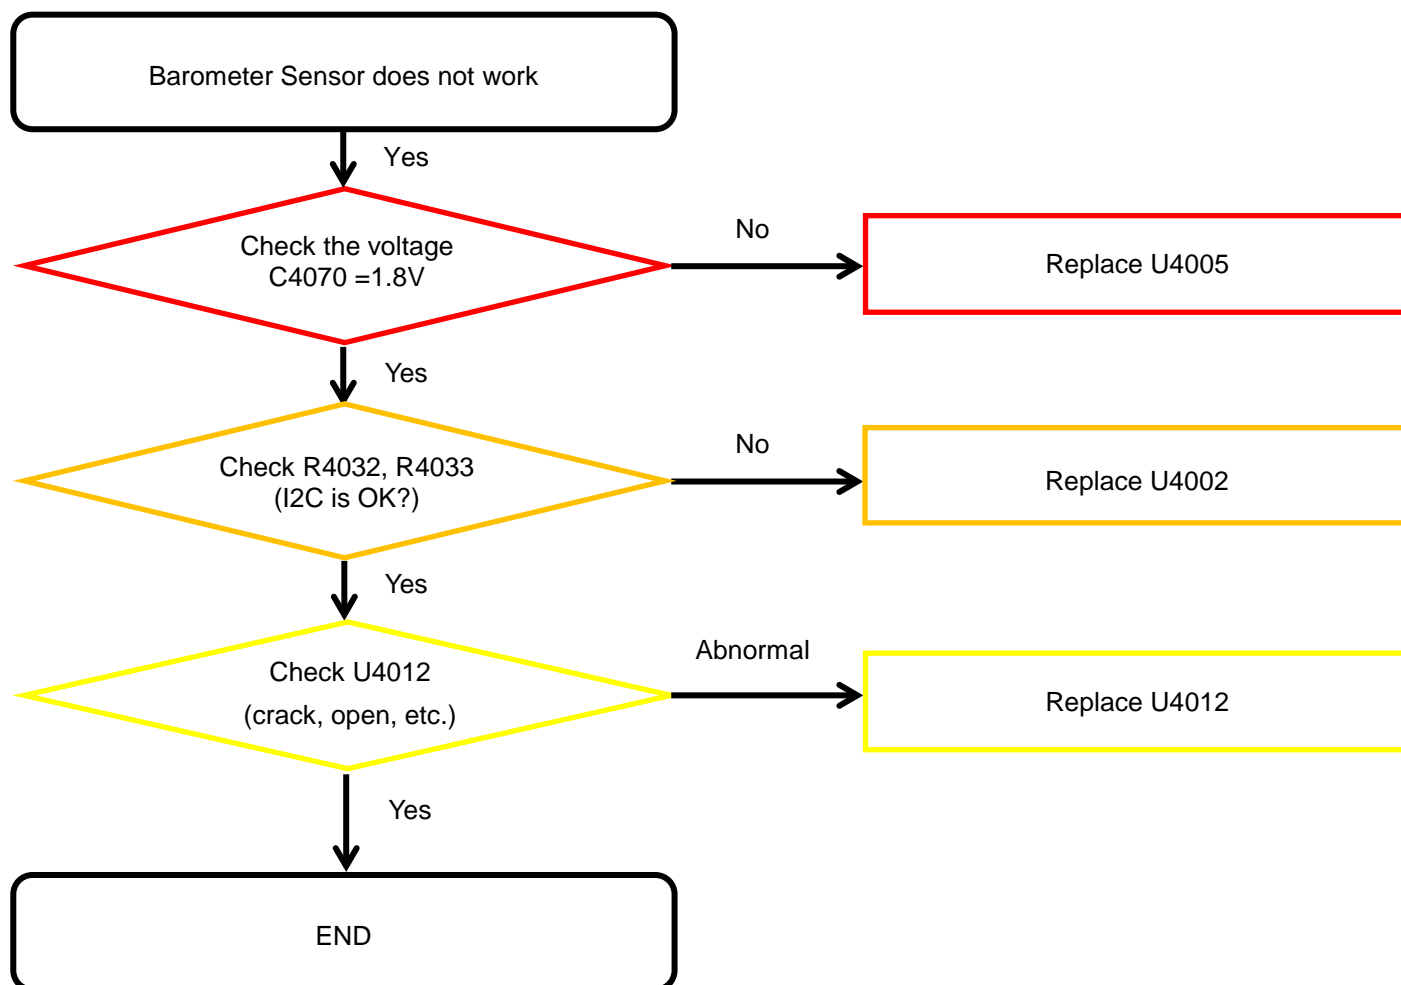

## 8. Level 3 Repair




### 8-4-8-5. Proximity + RGB Light sensor

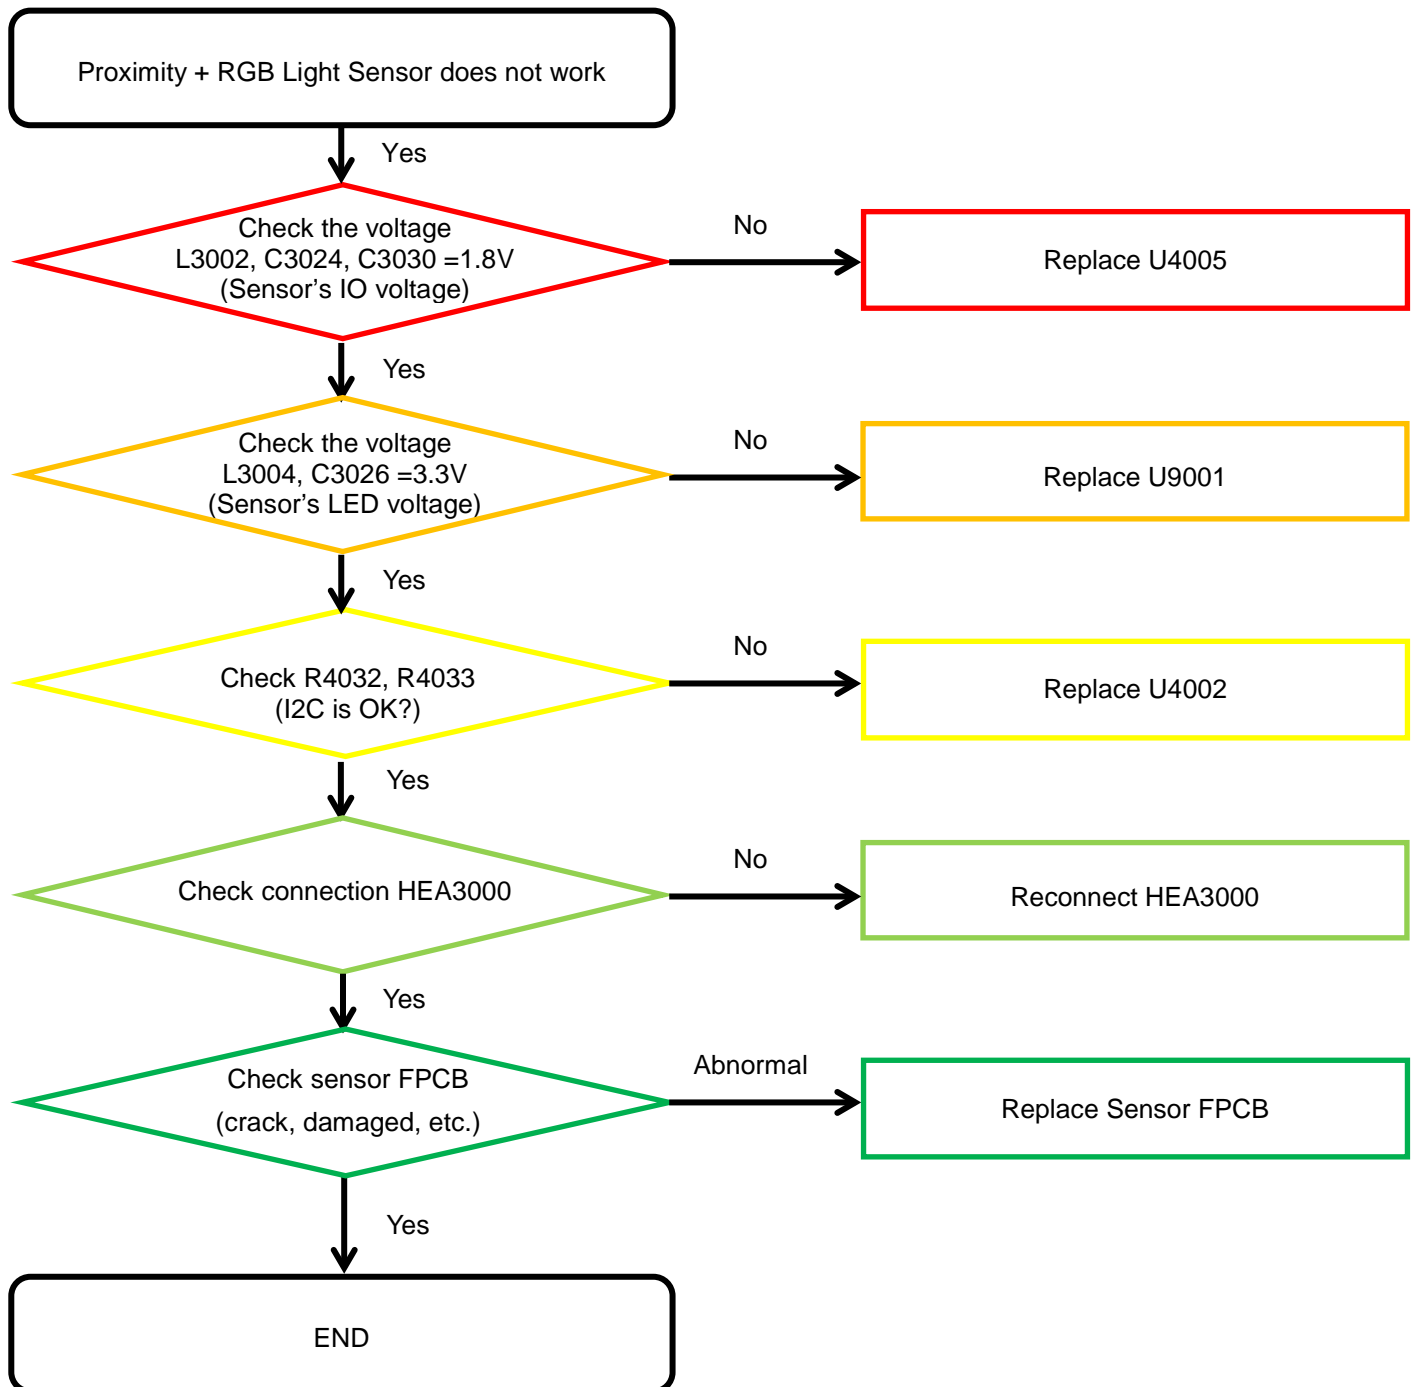

## 8. Level 3 Repair





### 8-4-8-6. HRM Sensor

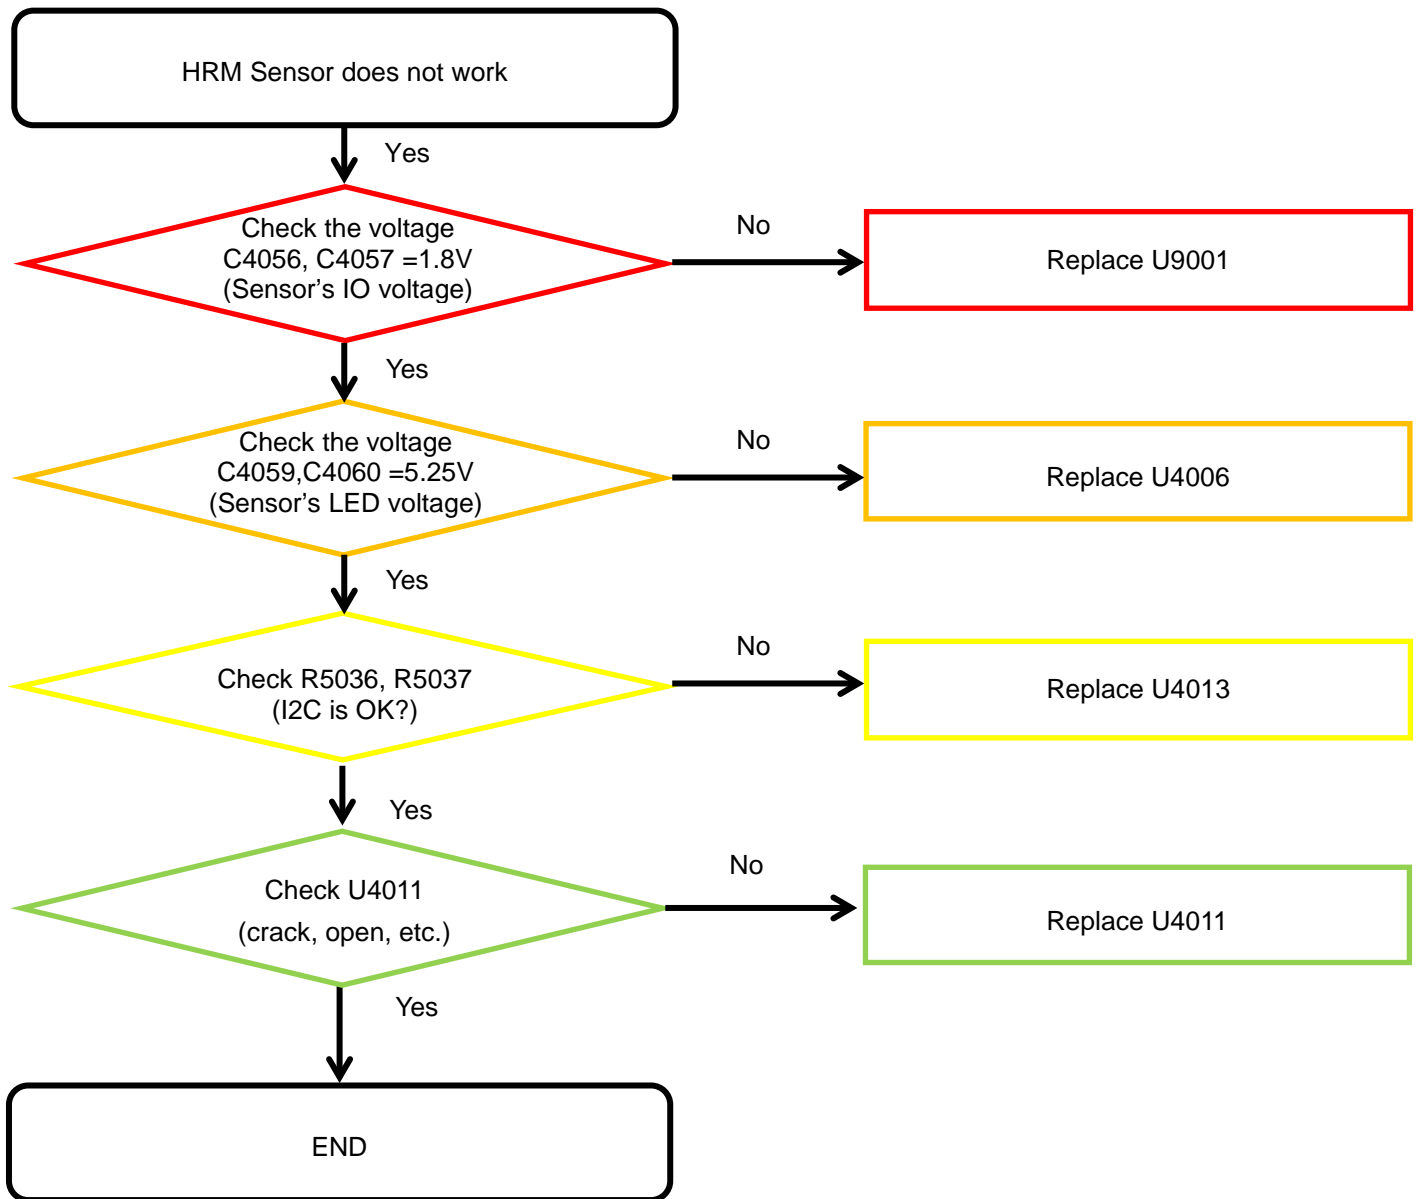

## 8. Level 3 Repair



### 8-4-8-7. Hall Sensor

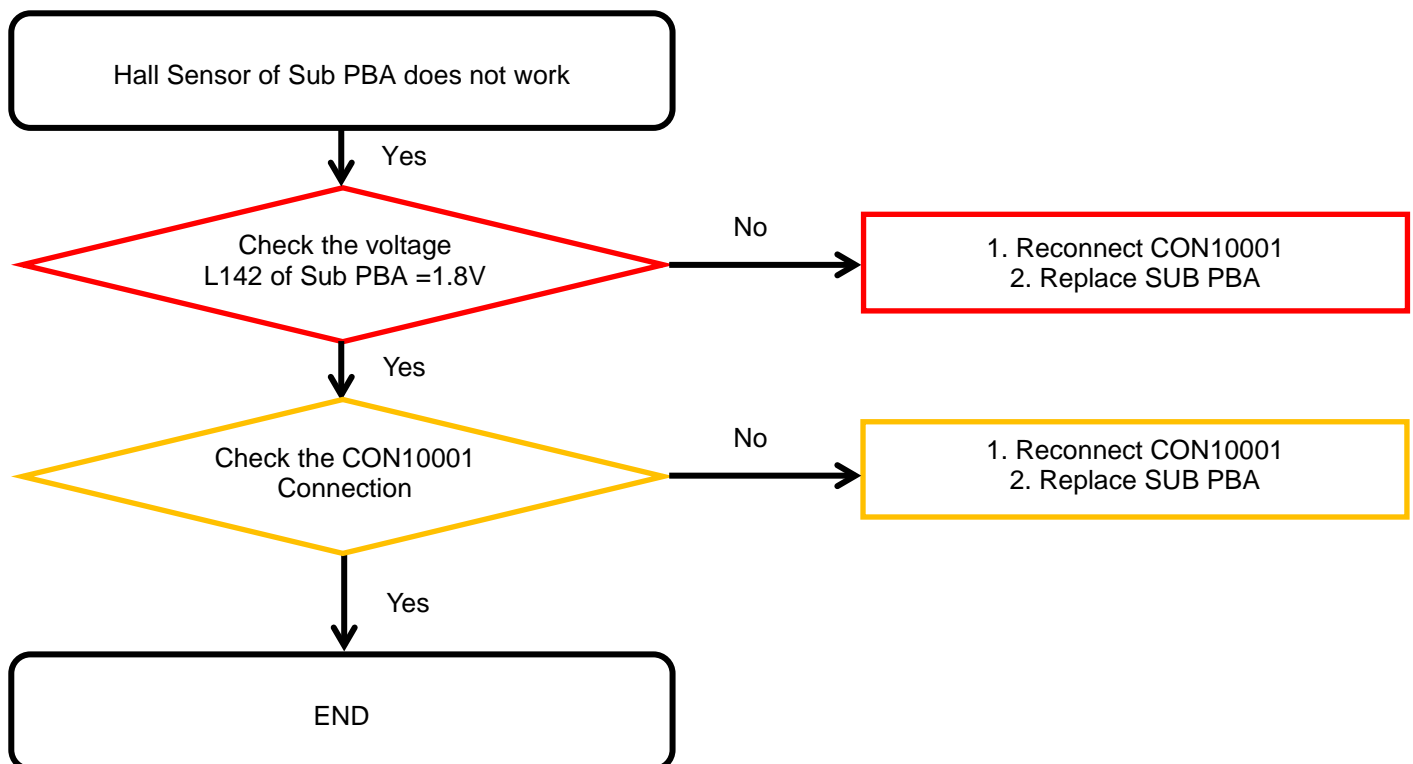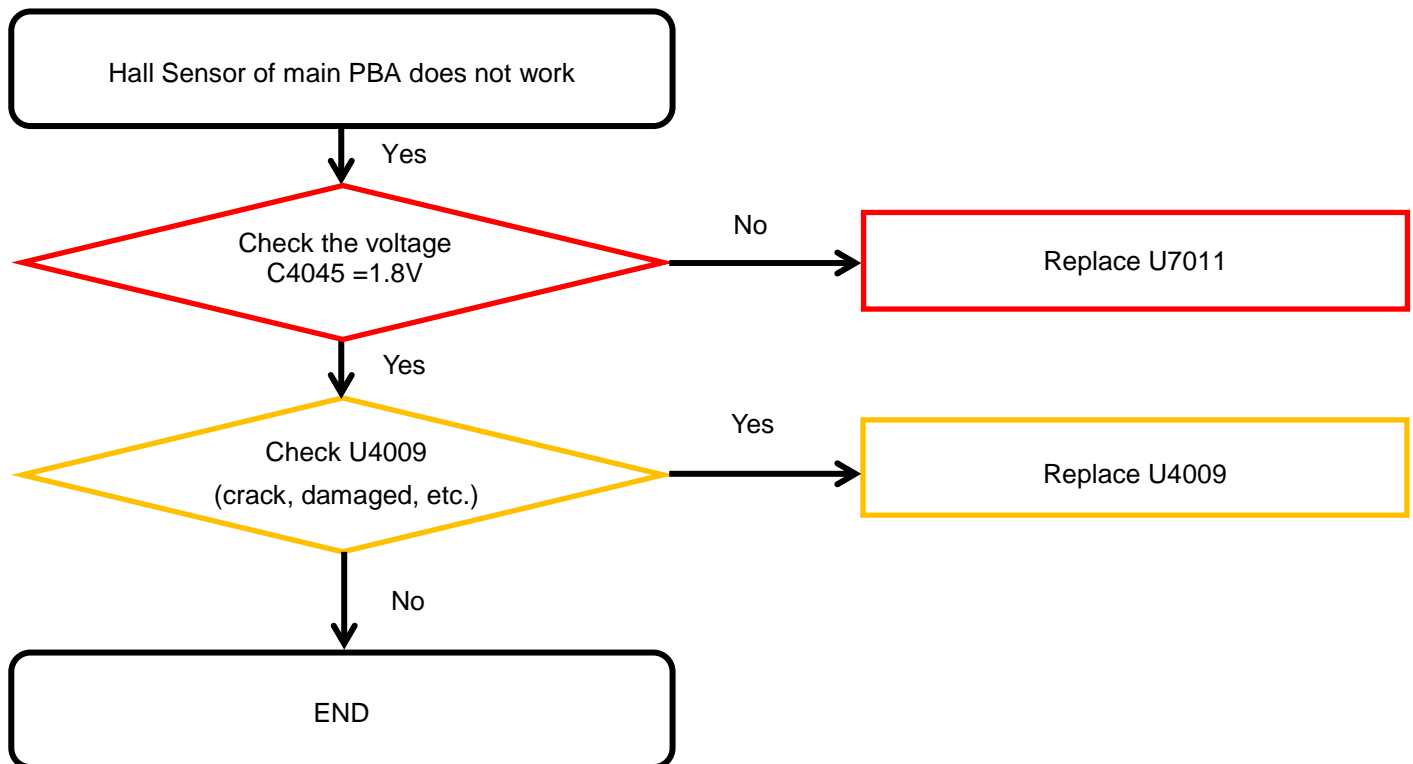




## 8. Level 3 Repair




### 8-4-8-8. Fingerprint Sensor

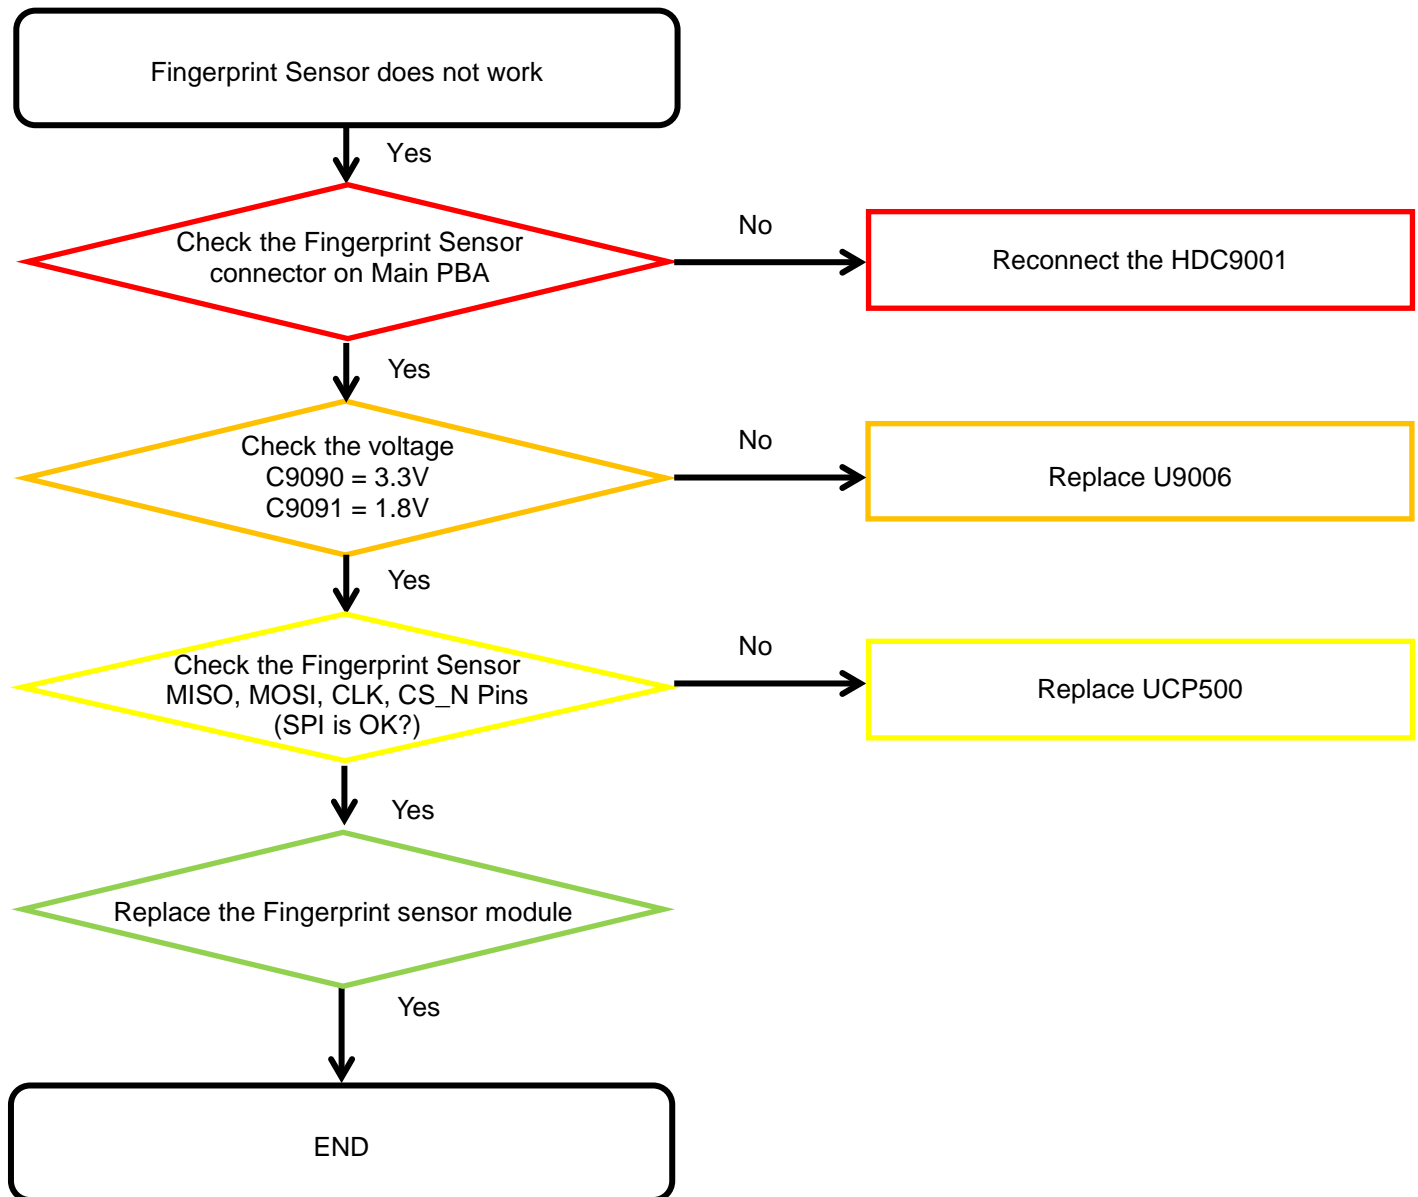



## 8. Level 3 Repair


### 8-4-9-1. Microphone Part - Main MIC

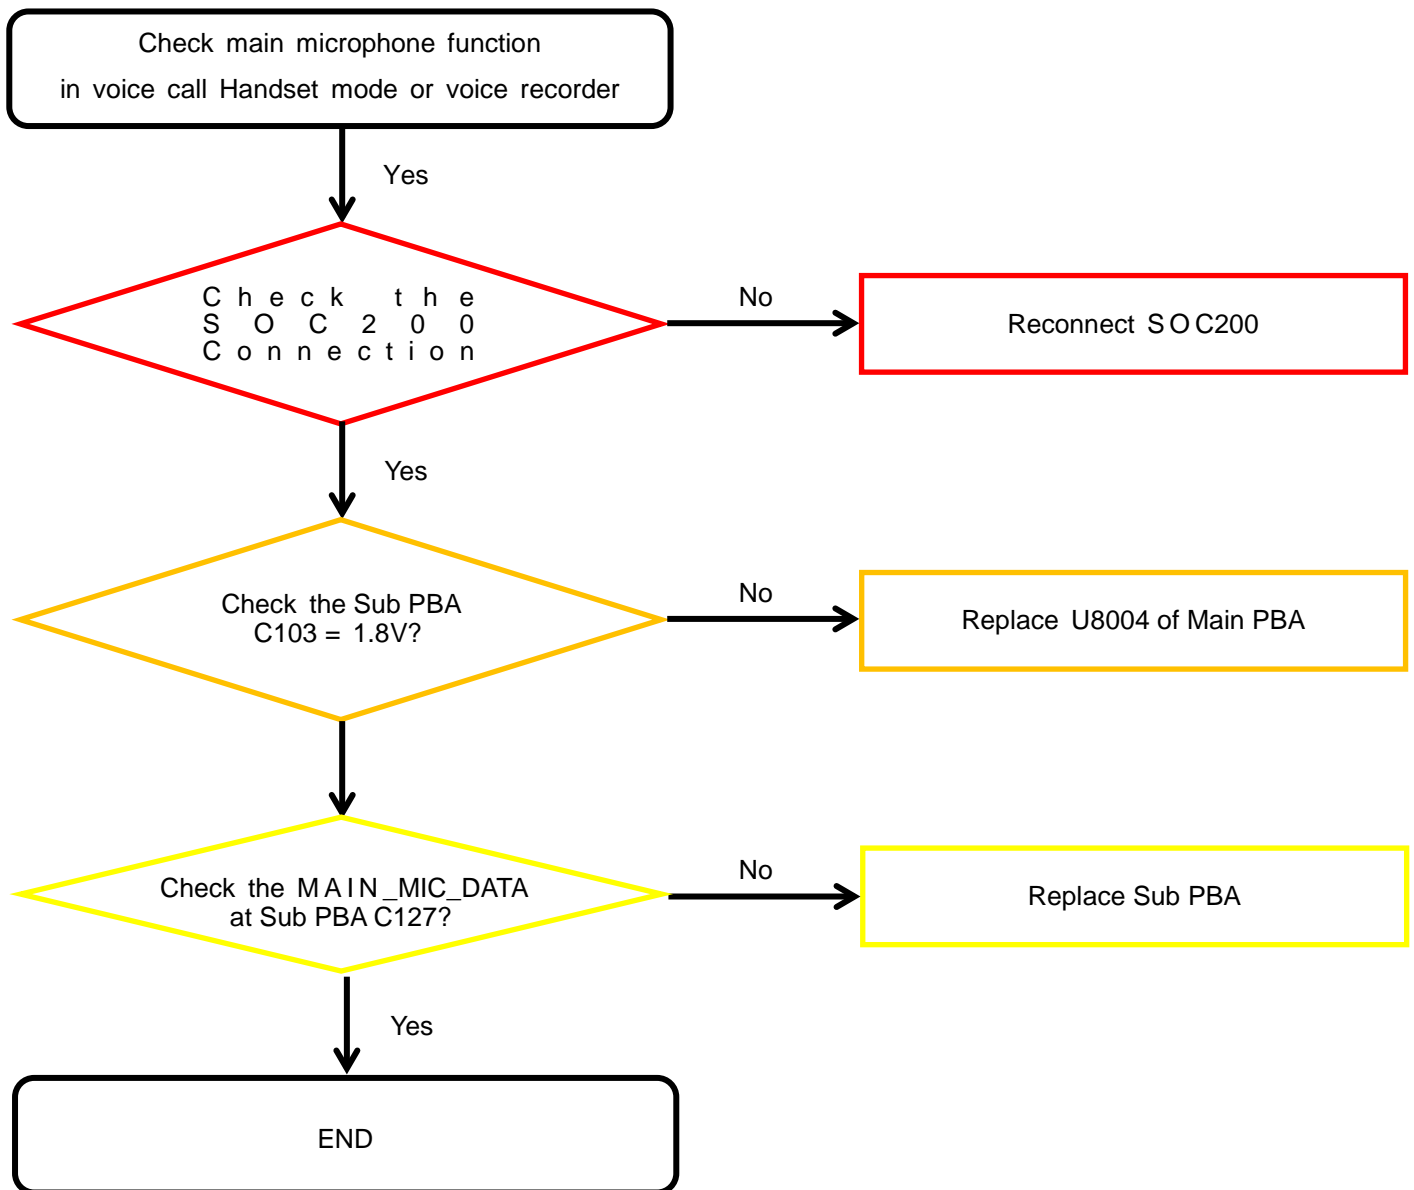

## 8. Level 3 Repair




### 8-4-9-2. Microphone Part - Sub(2nd) MIC

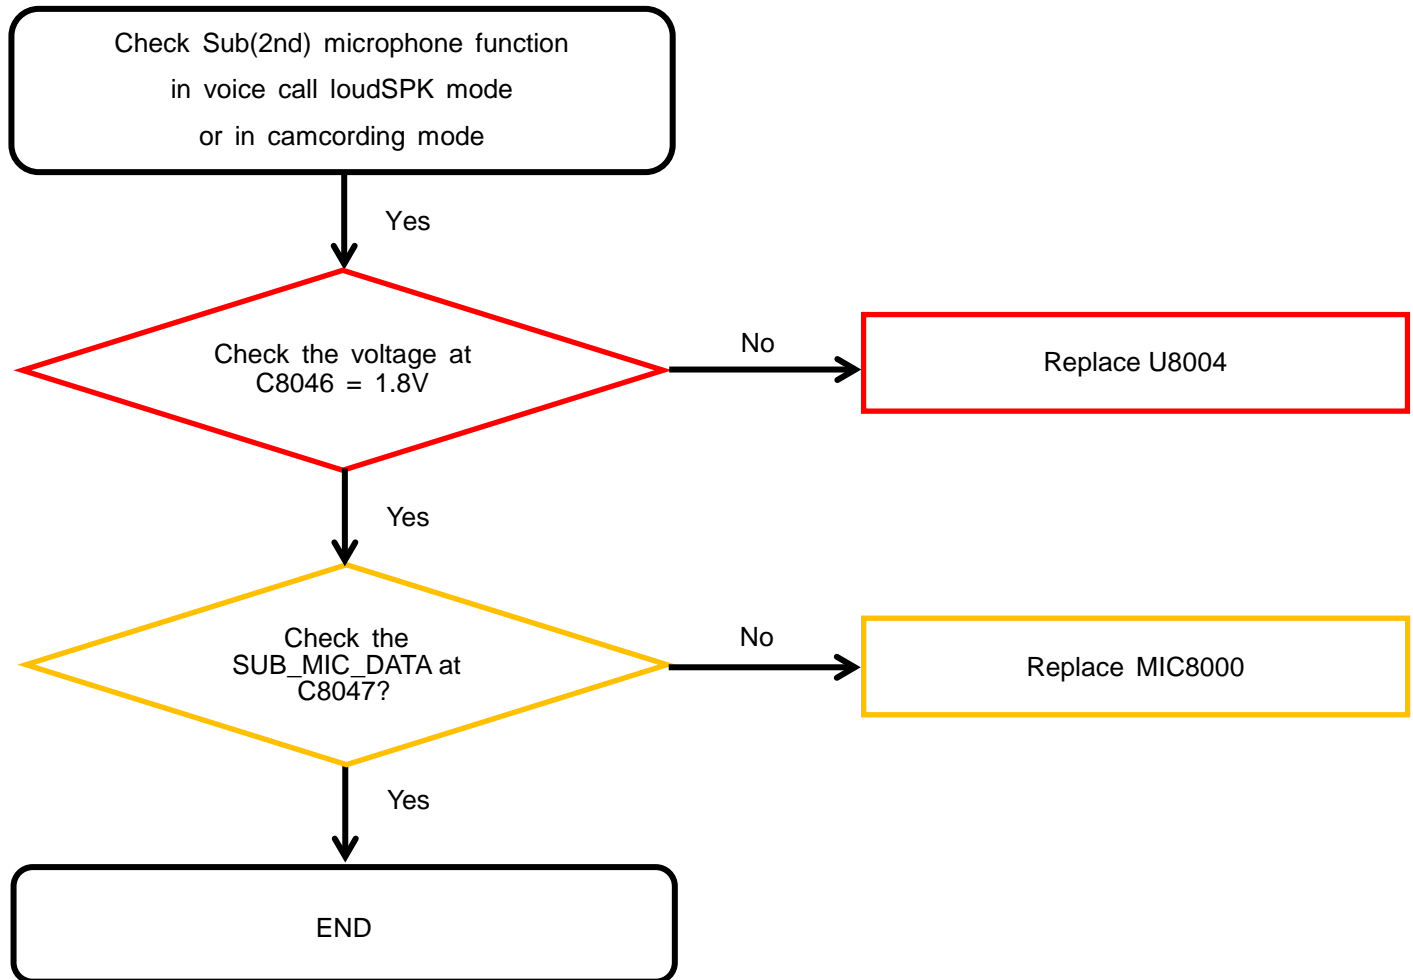



## 8. Level 3 Repair


### 8-4-10. Speaker Part

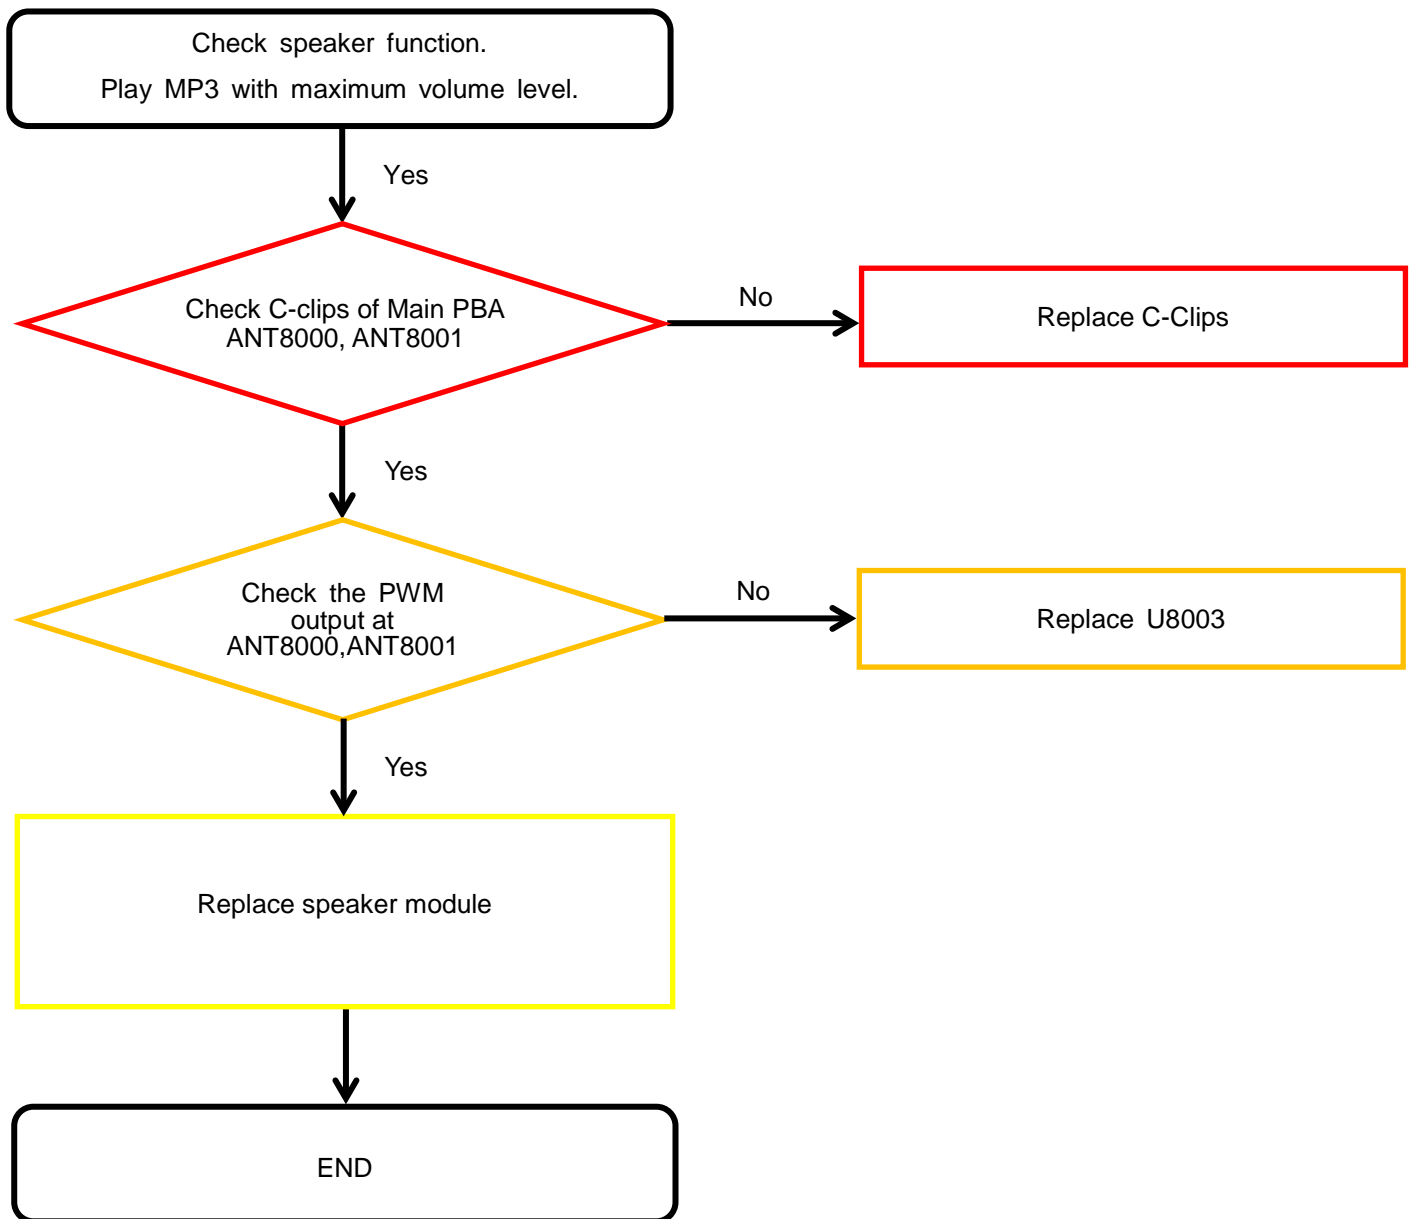

## 8. Level 3 Repair




### 8-4-11. Receiver Part

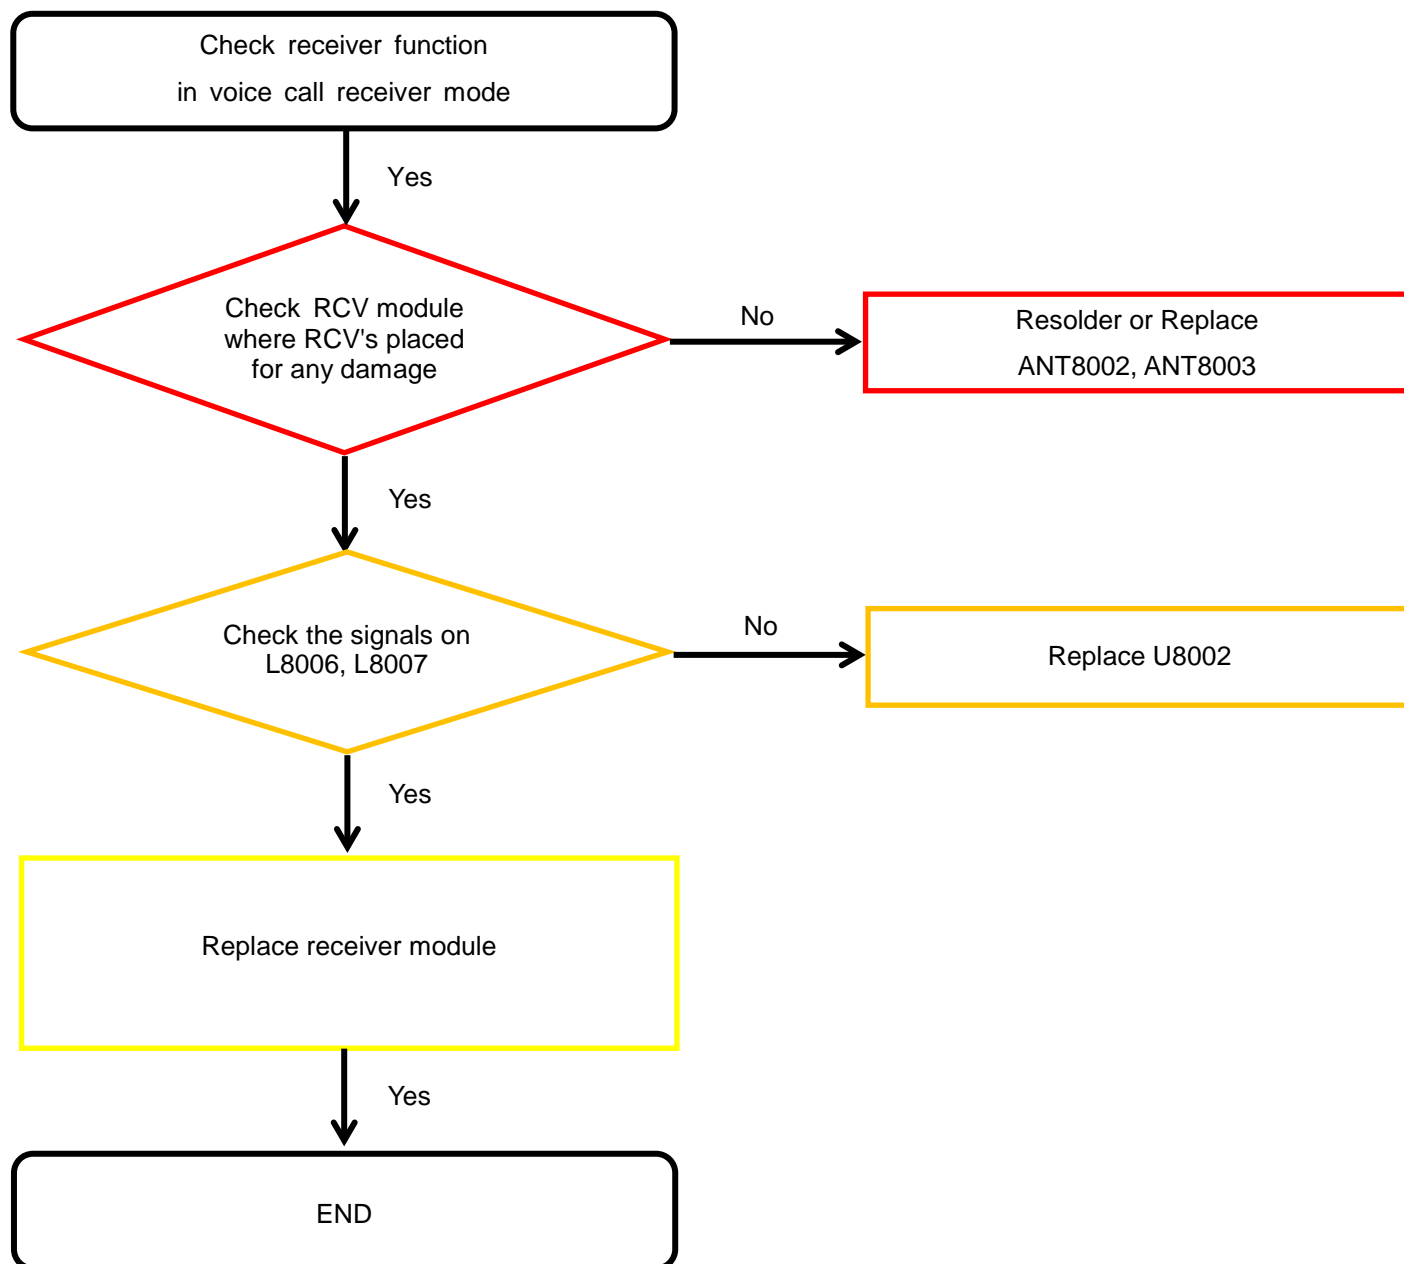

## 8. Level 3 Repair




### 8-4-12. BT/WIFI

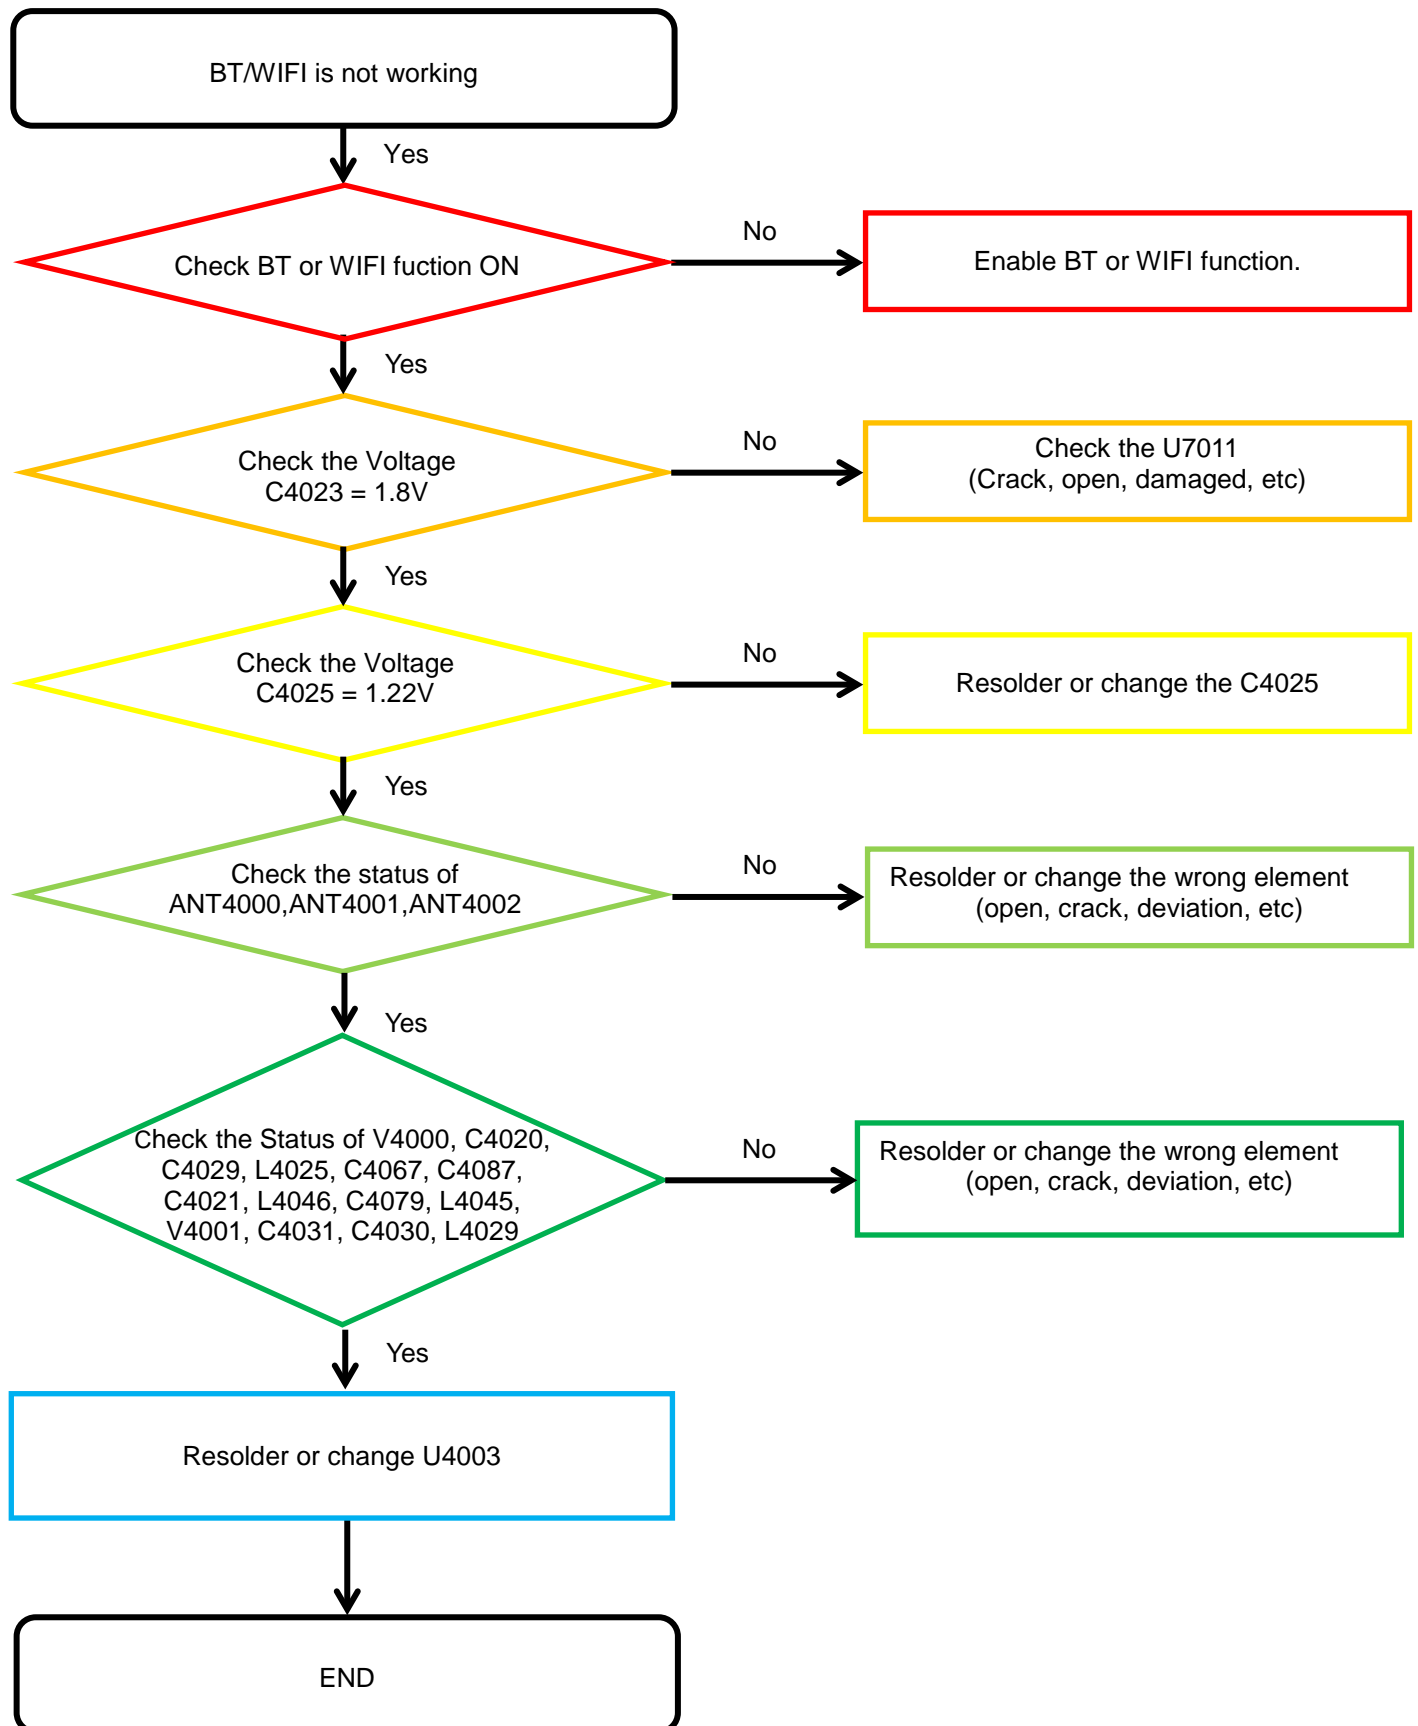

## 8. Level 3 Repair




### 8-4-13. GPS

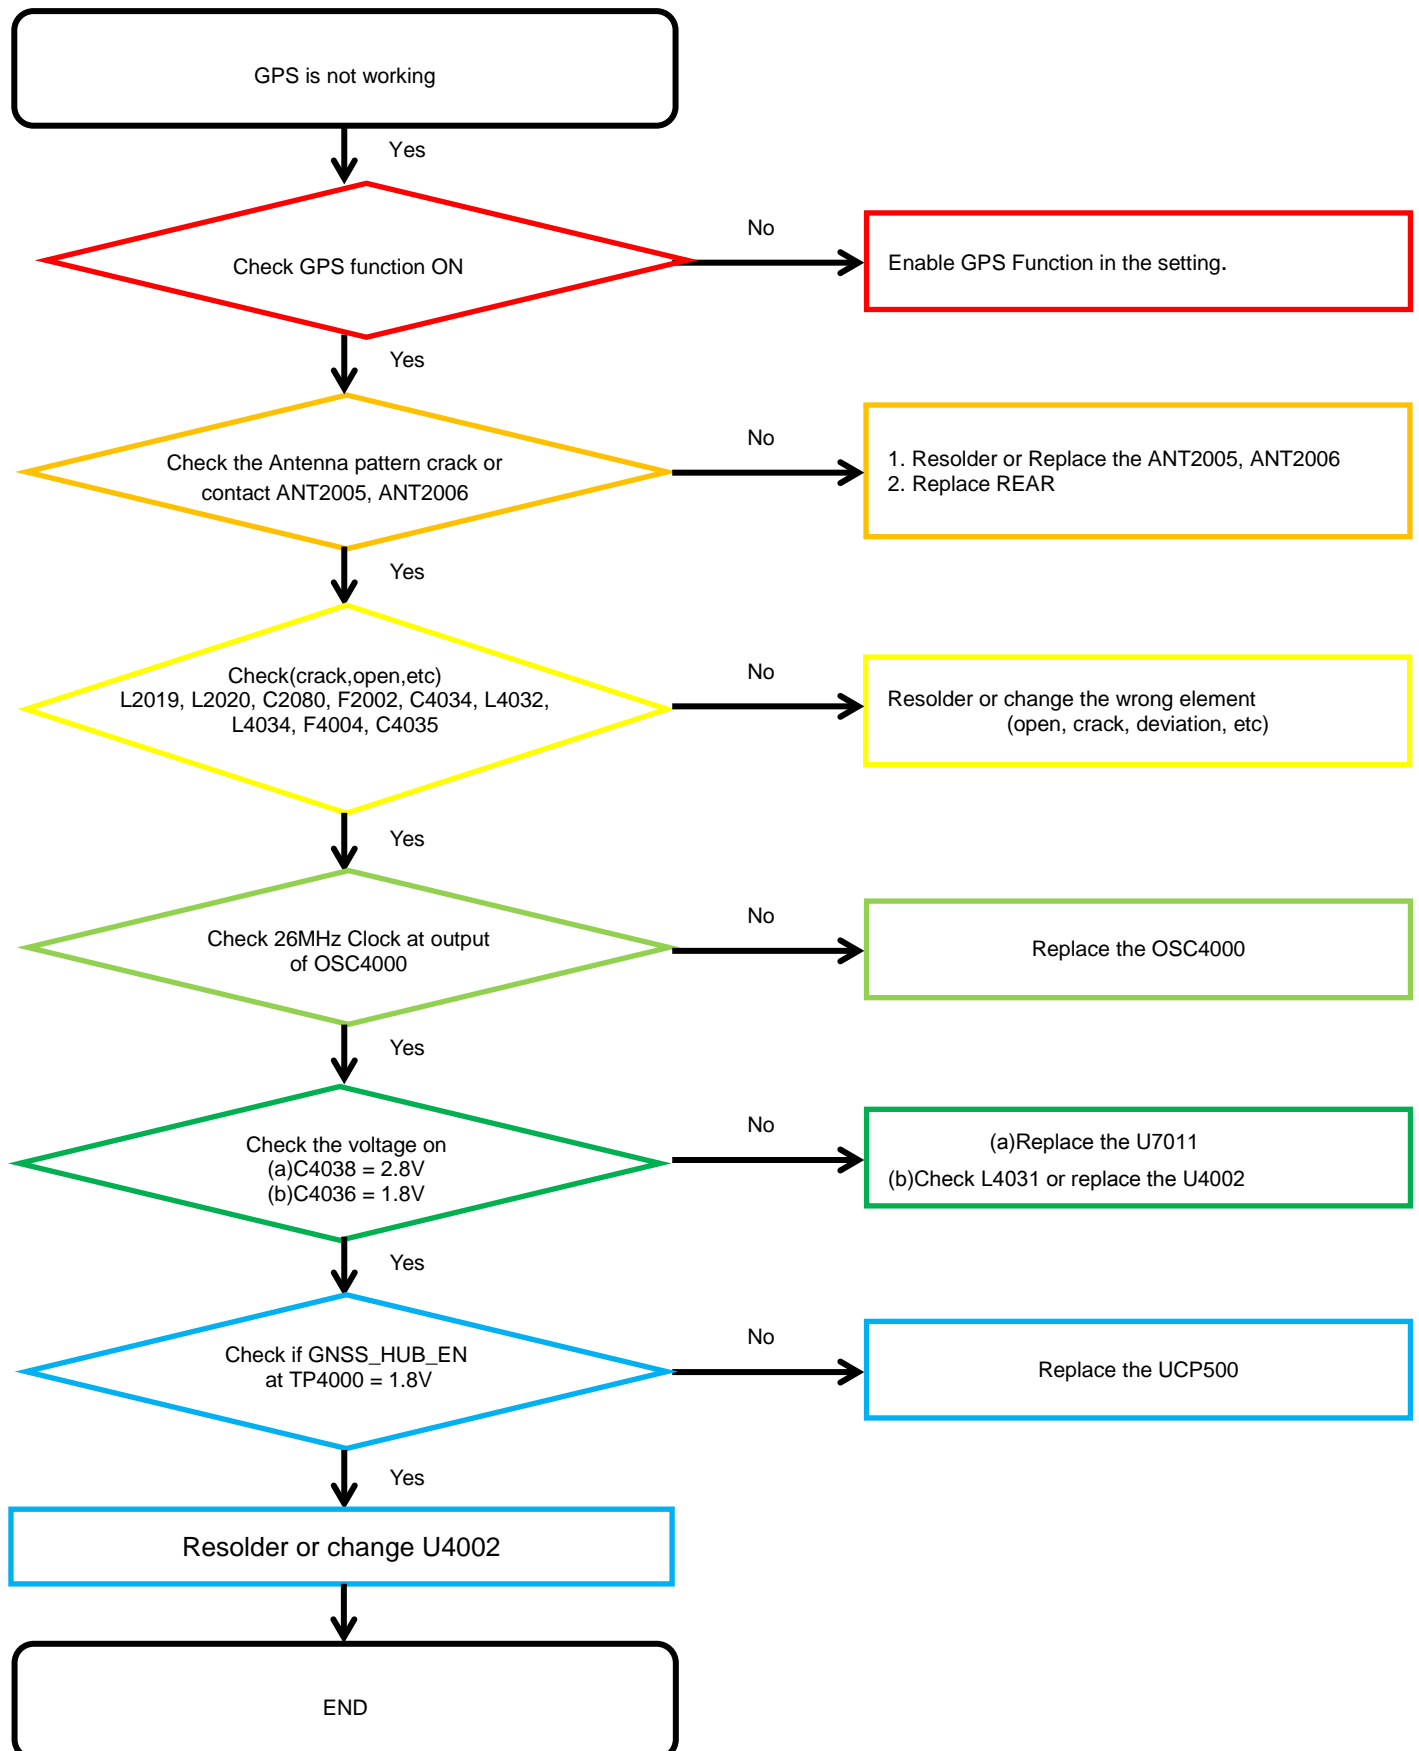

## 8. Level 3 Repair



### 8-4-14. NFC

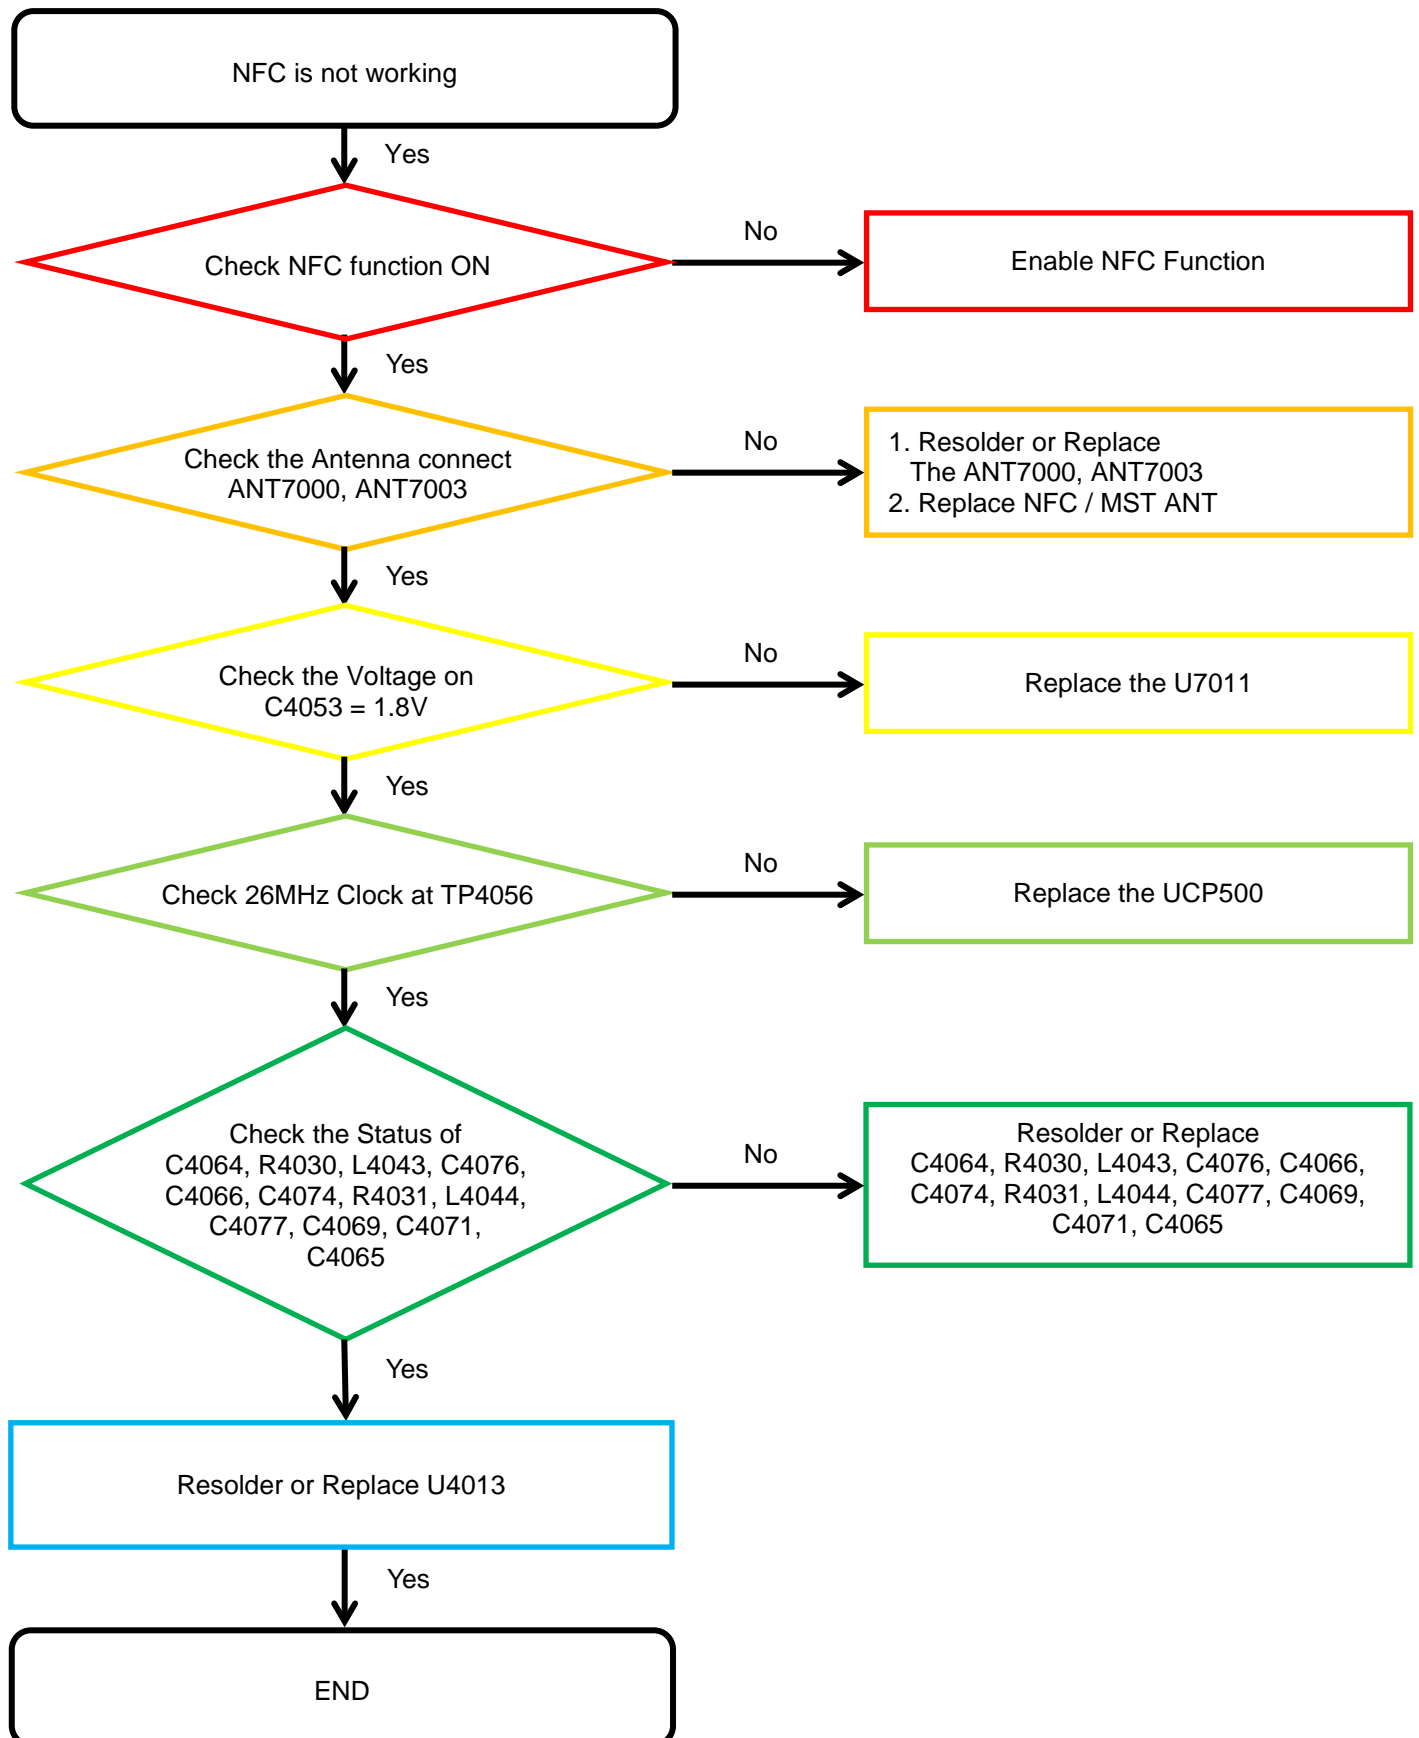




## 8. Level 3 Repair




### 8-4-15. MST

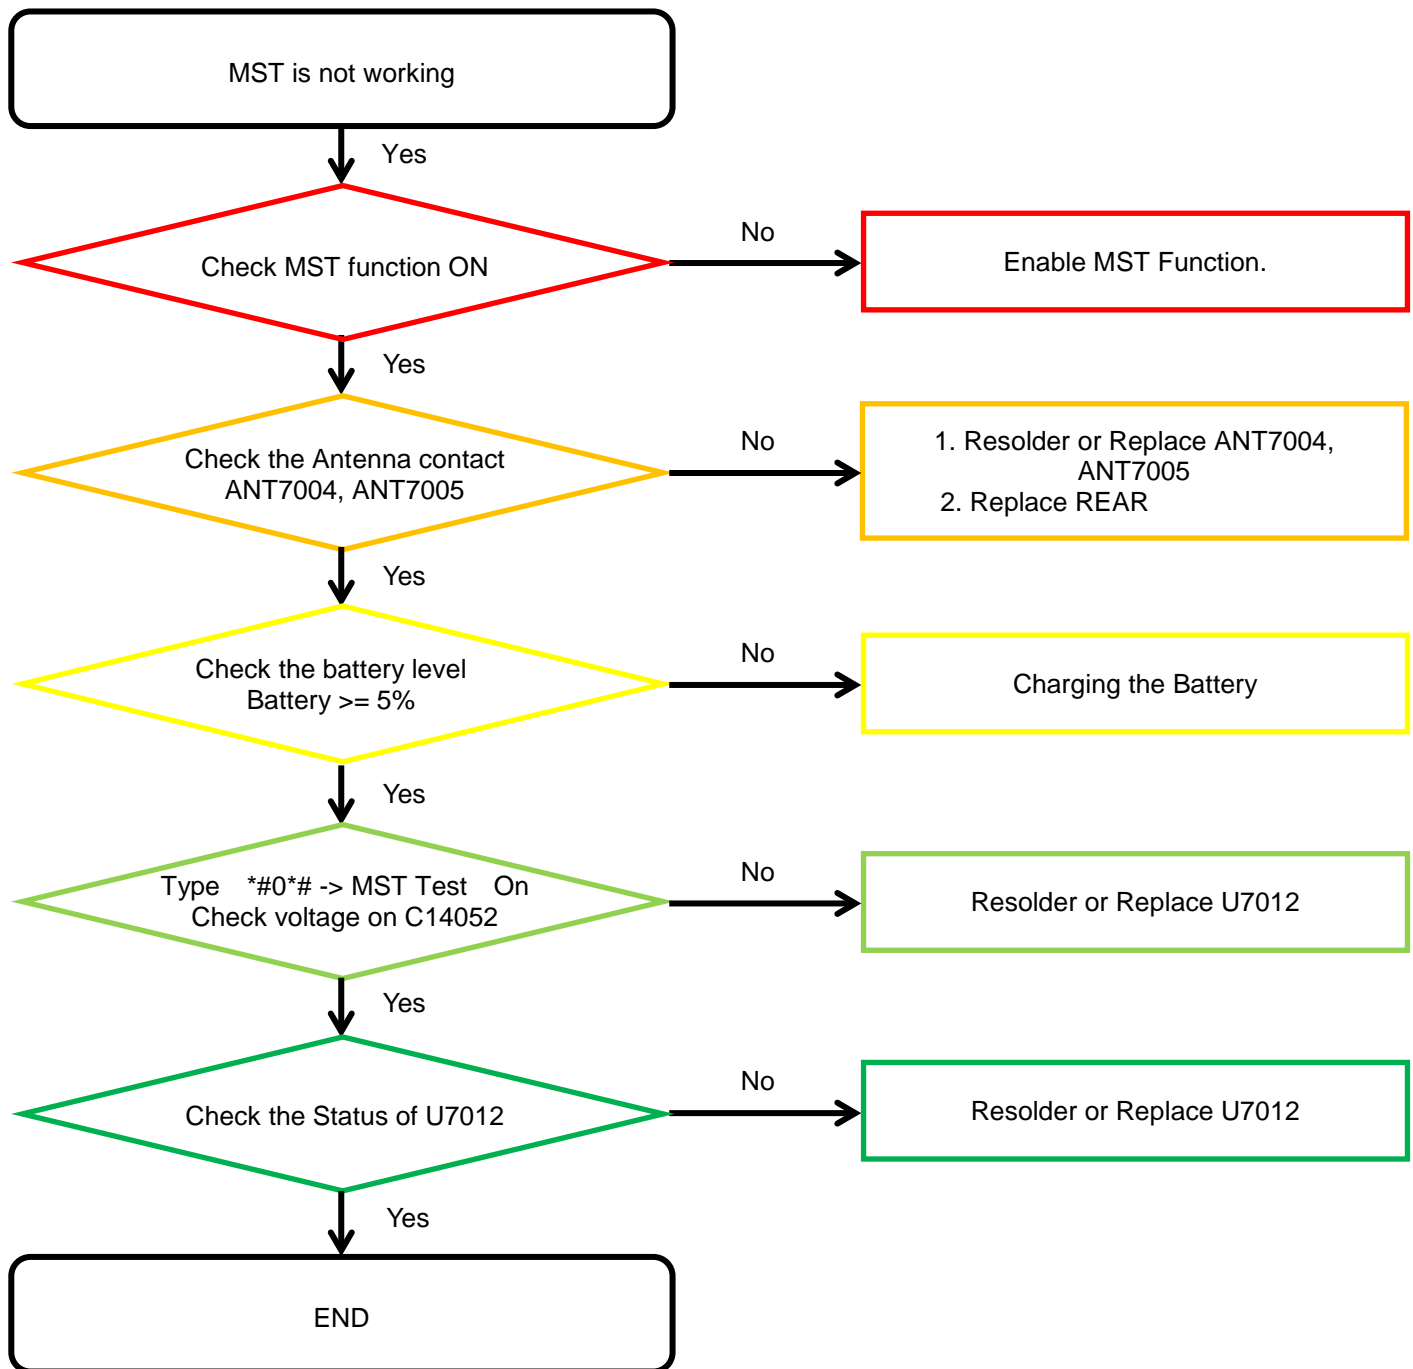

## 8. Level 3 Repair




### 8-4-16. Display

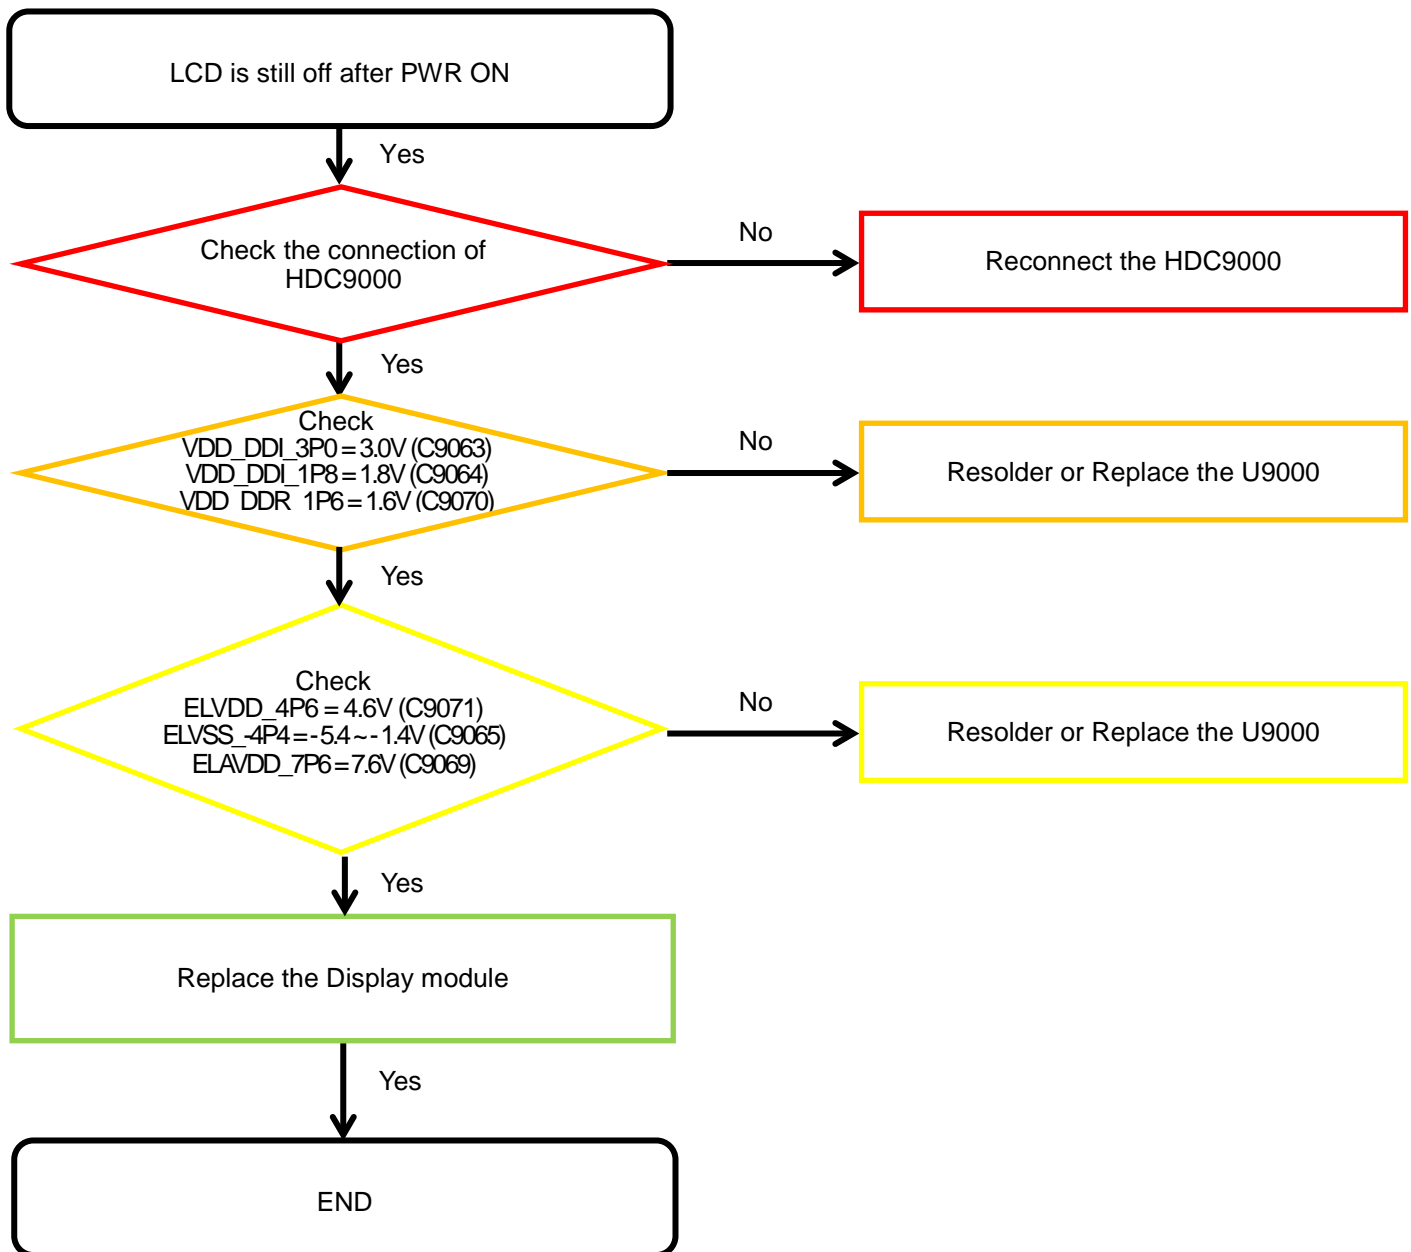

## 8. Level 3 Repair




### 8-4-17. 12M CAMERA

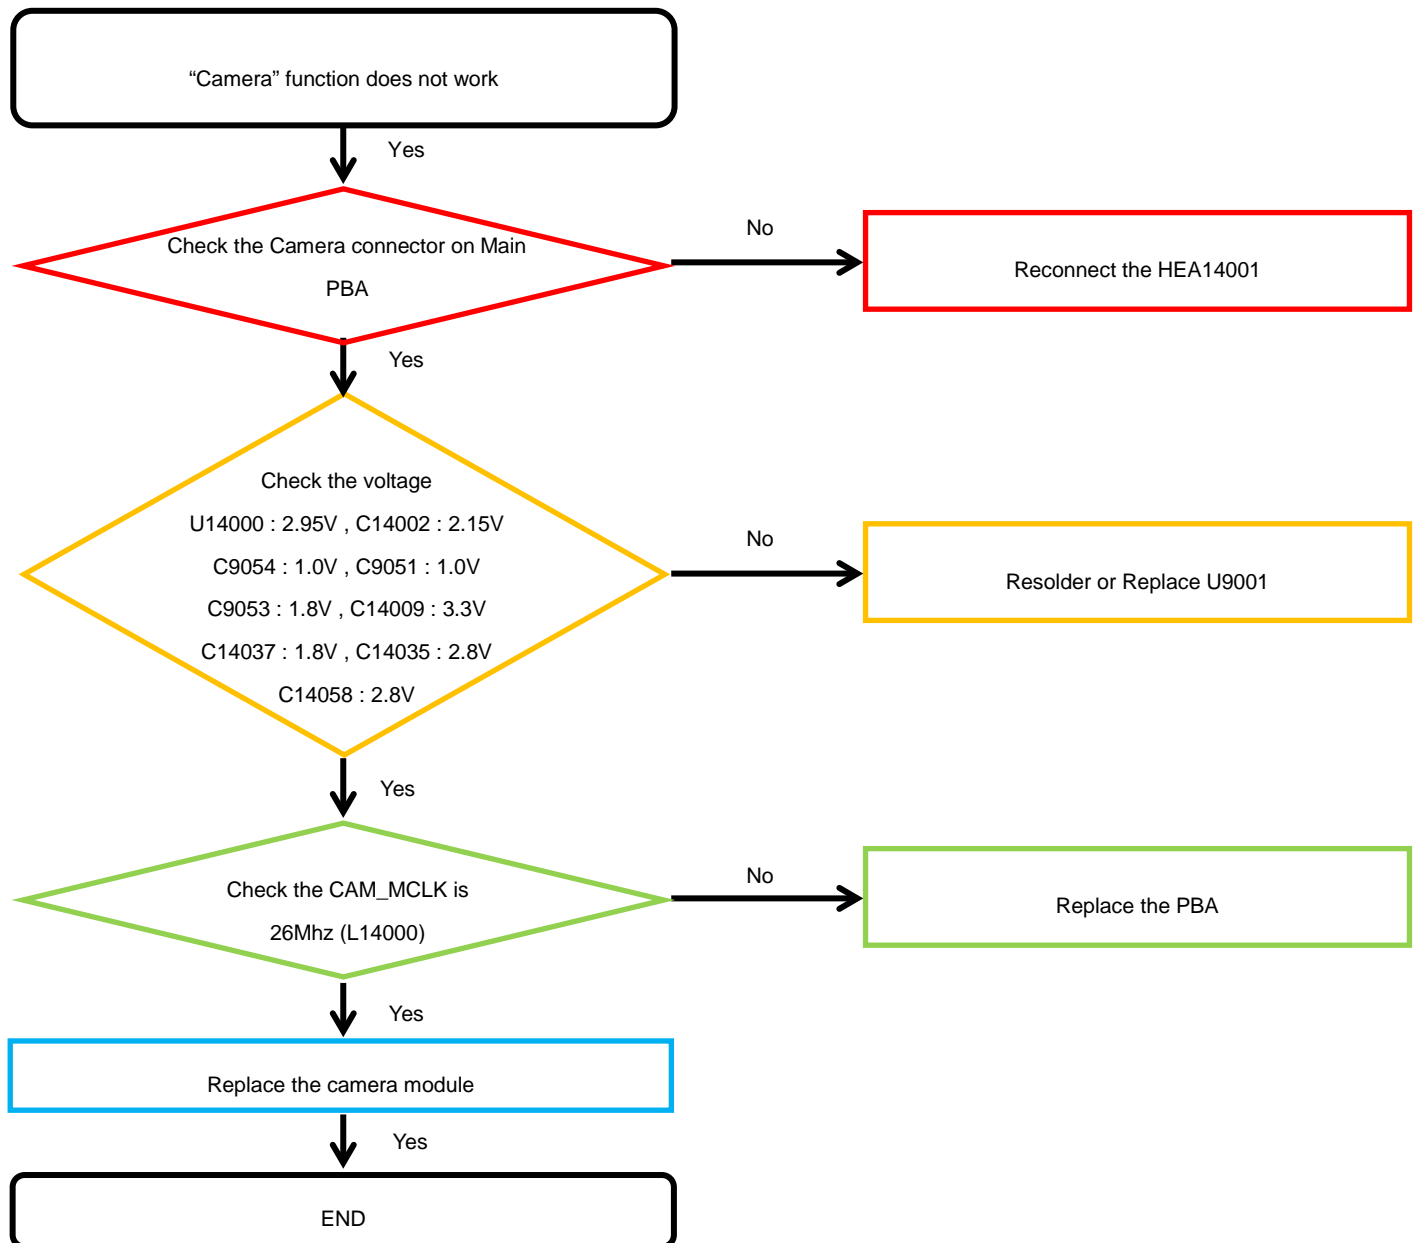

## 8. Level 3 Repair




### 8-4-18. 8M CAMERA

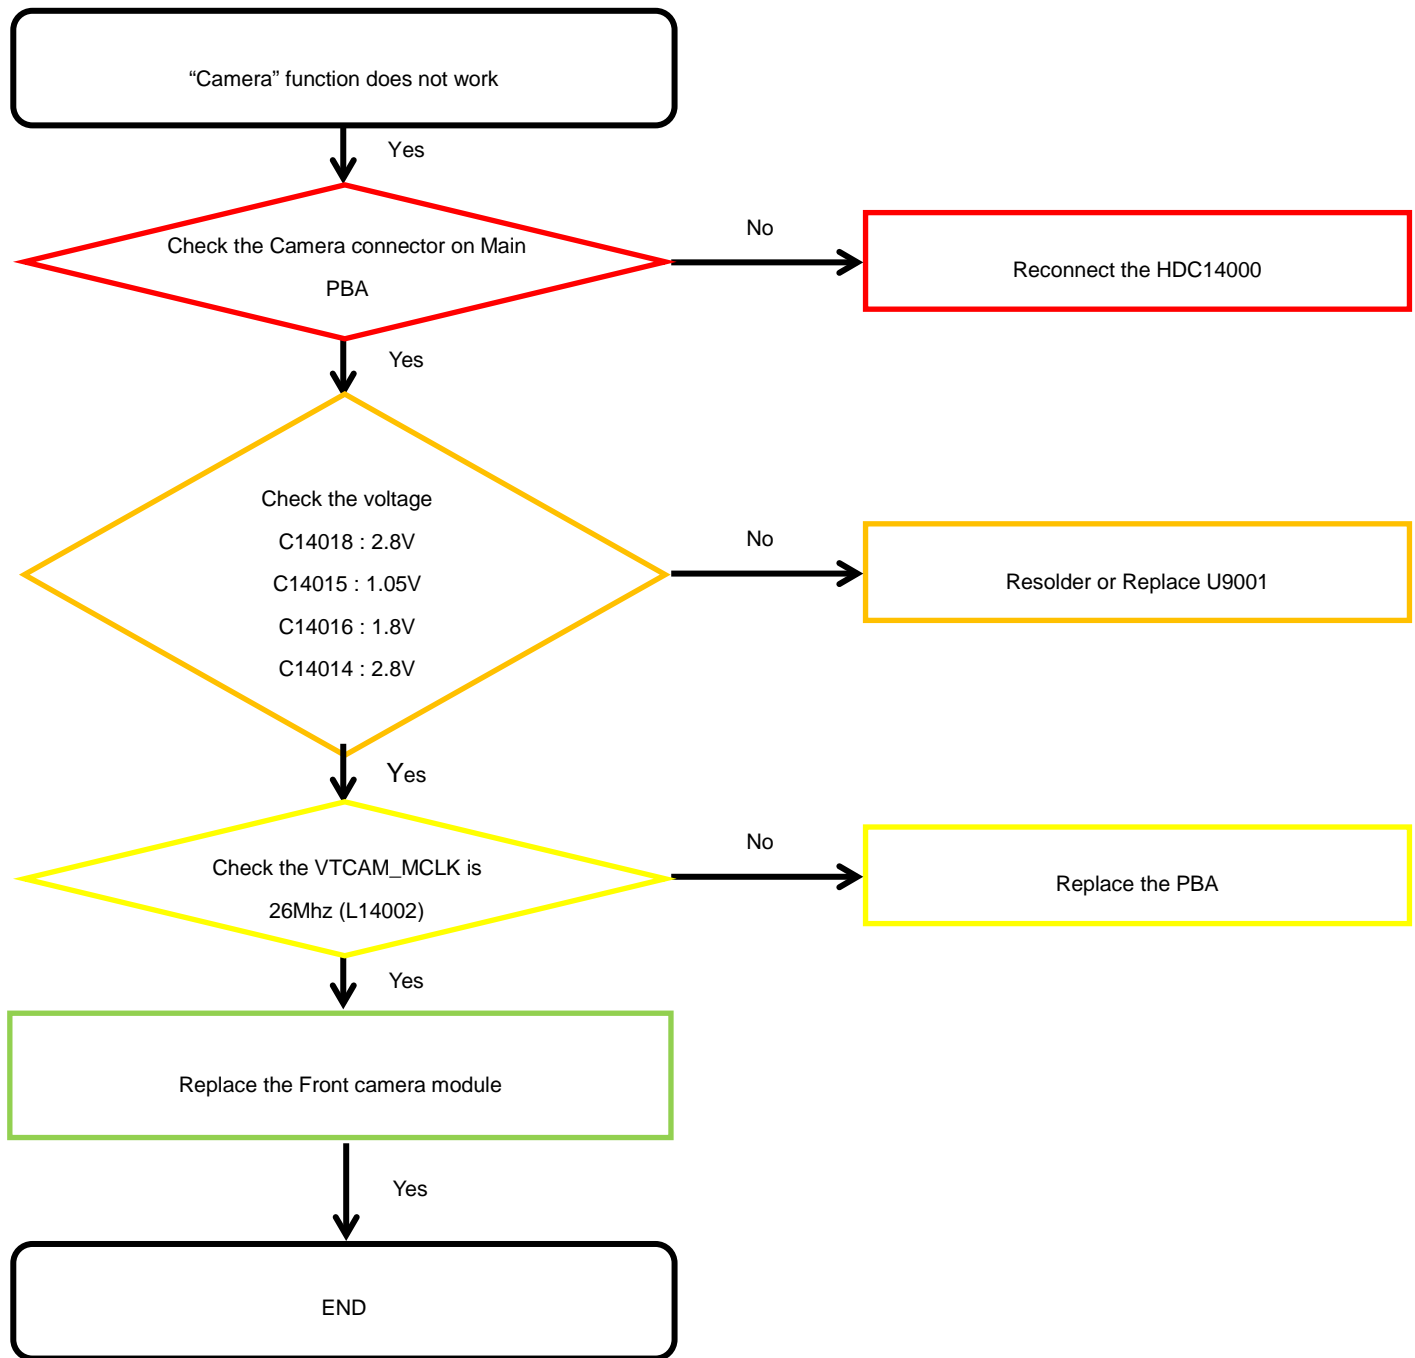

## 8. Level 3 Repair




### 8-4-19. IRIS CAM

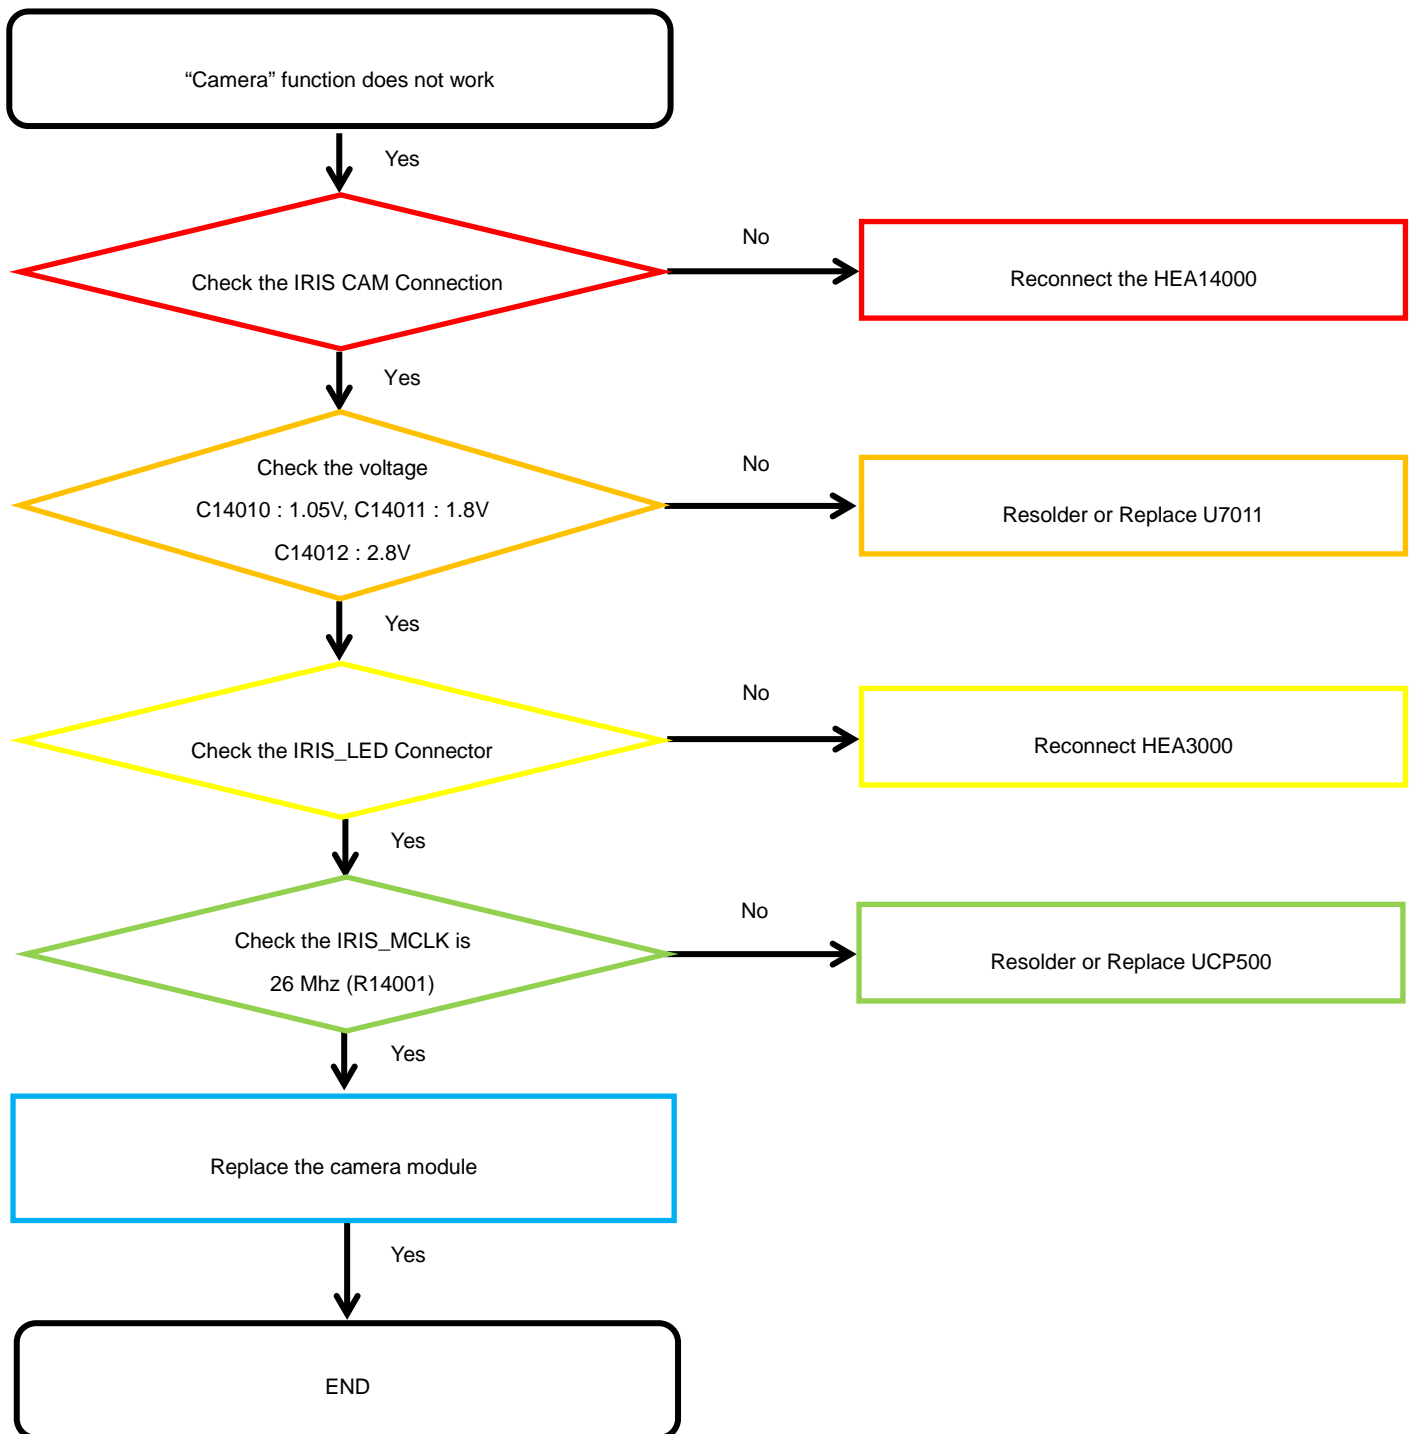

## 8. Level 3 Repair




### 8-4-20. TSP

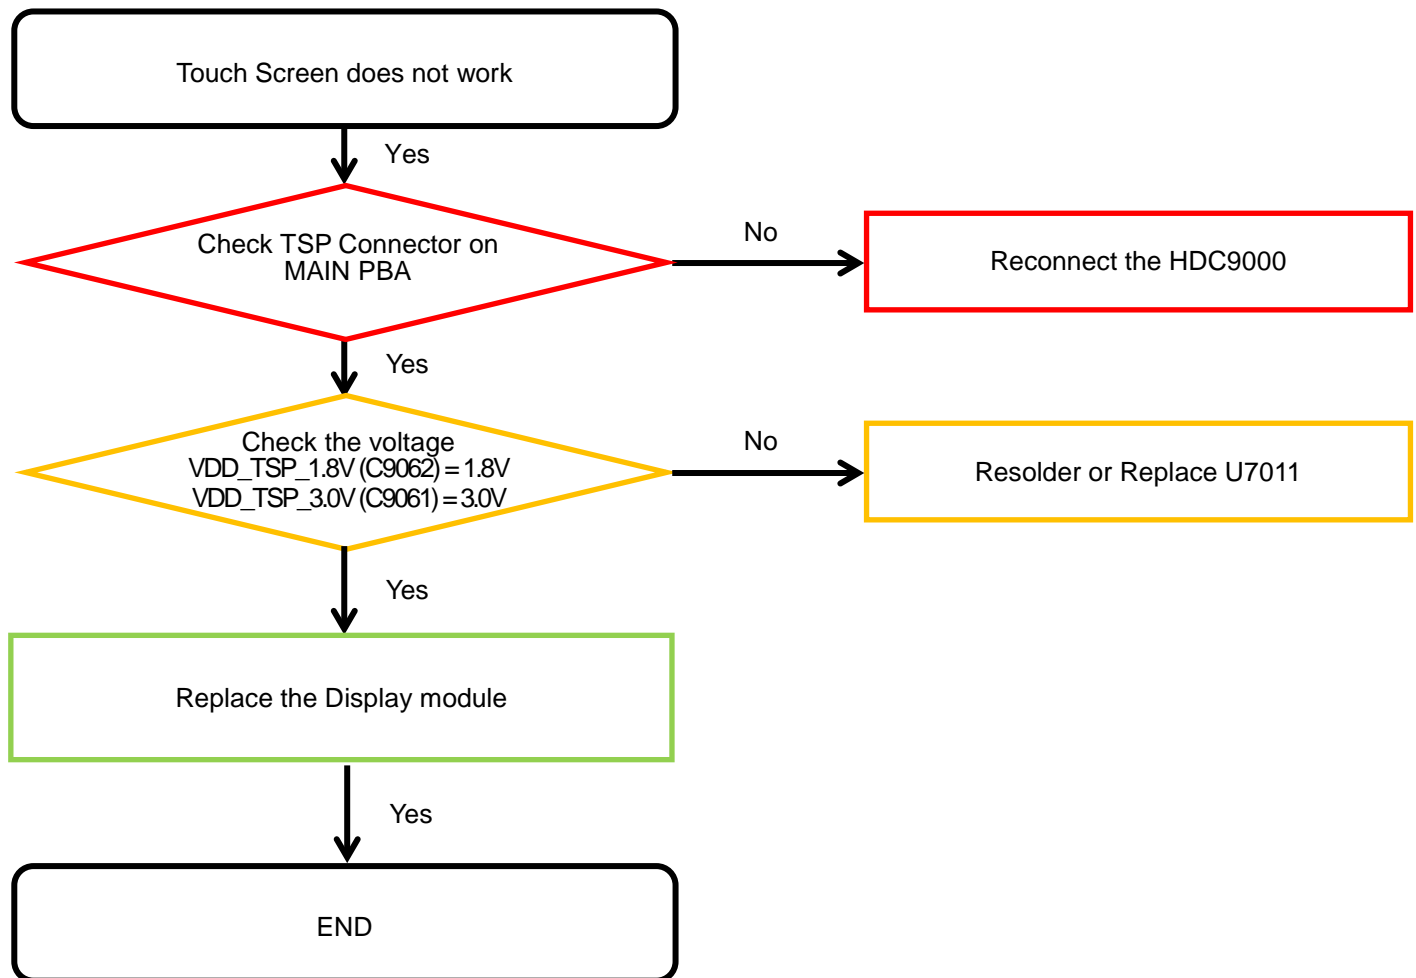

## 8. Level 3 Repair




### 8-4-21. Pressure Touch (Home Button function)

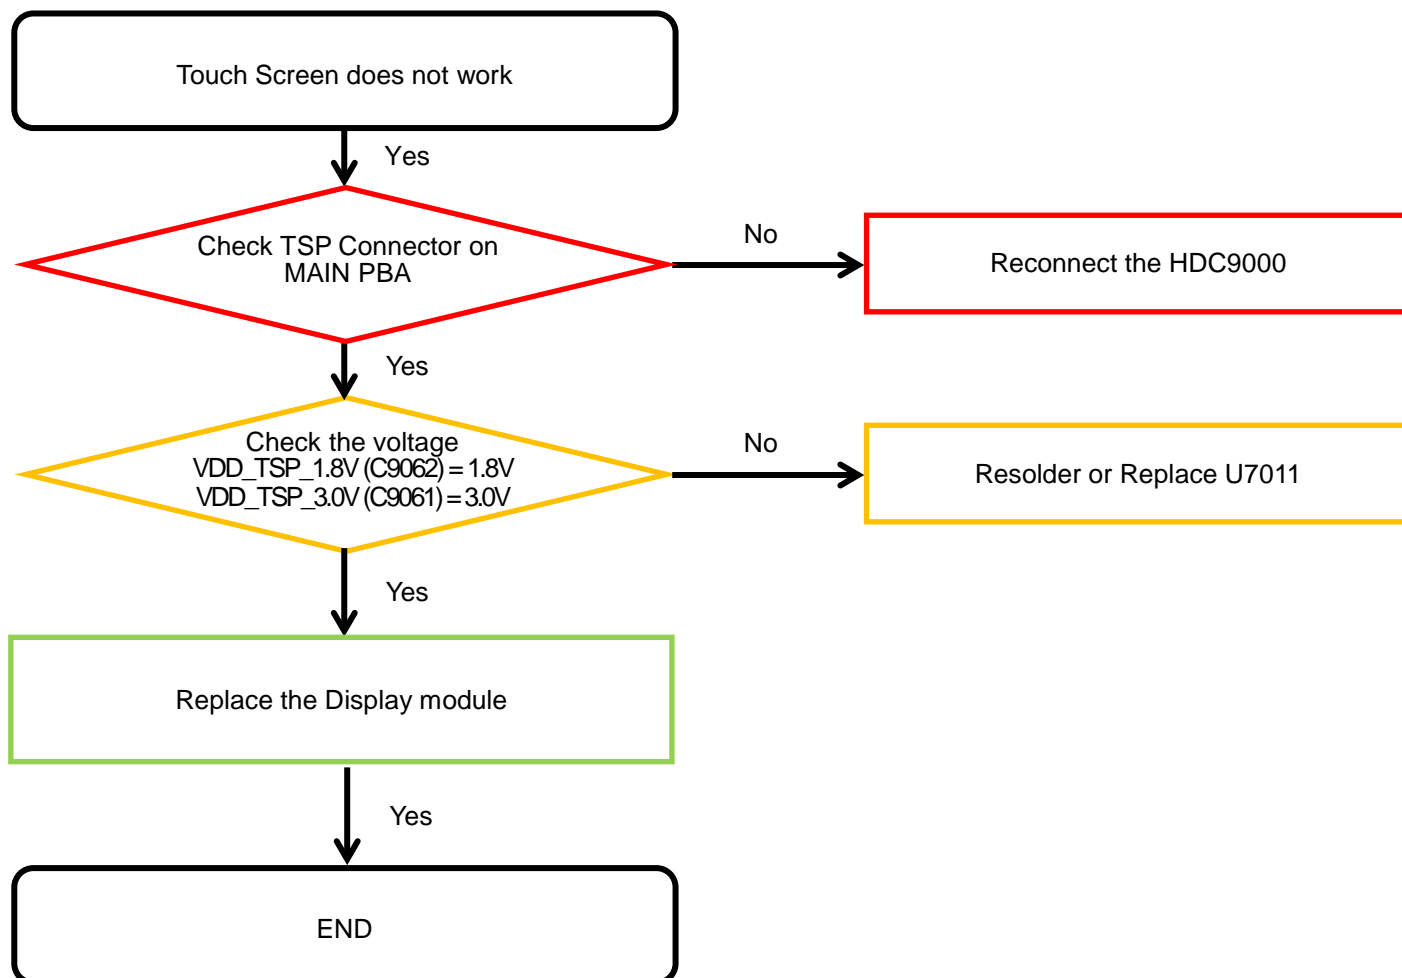

## 8. Level 3 Repair



### 8-4-22. Motor

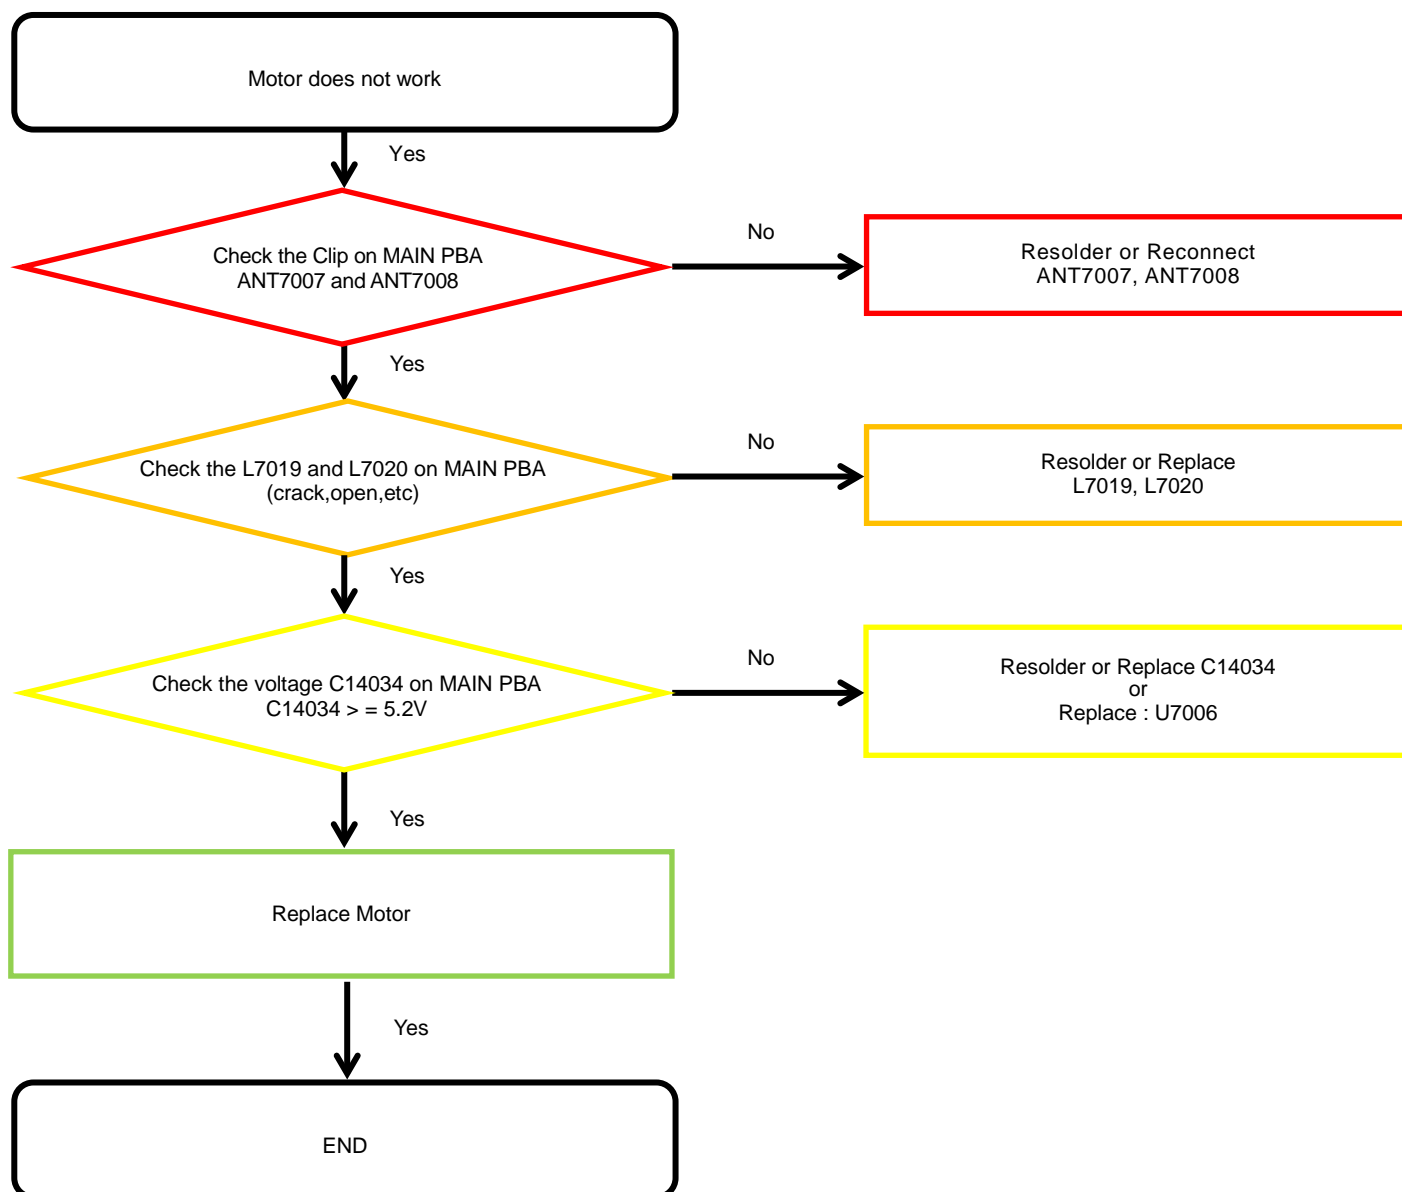




## 8. Level 3 Repair




### 8-4-23. DeX Station

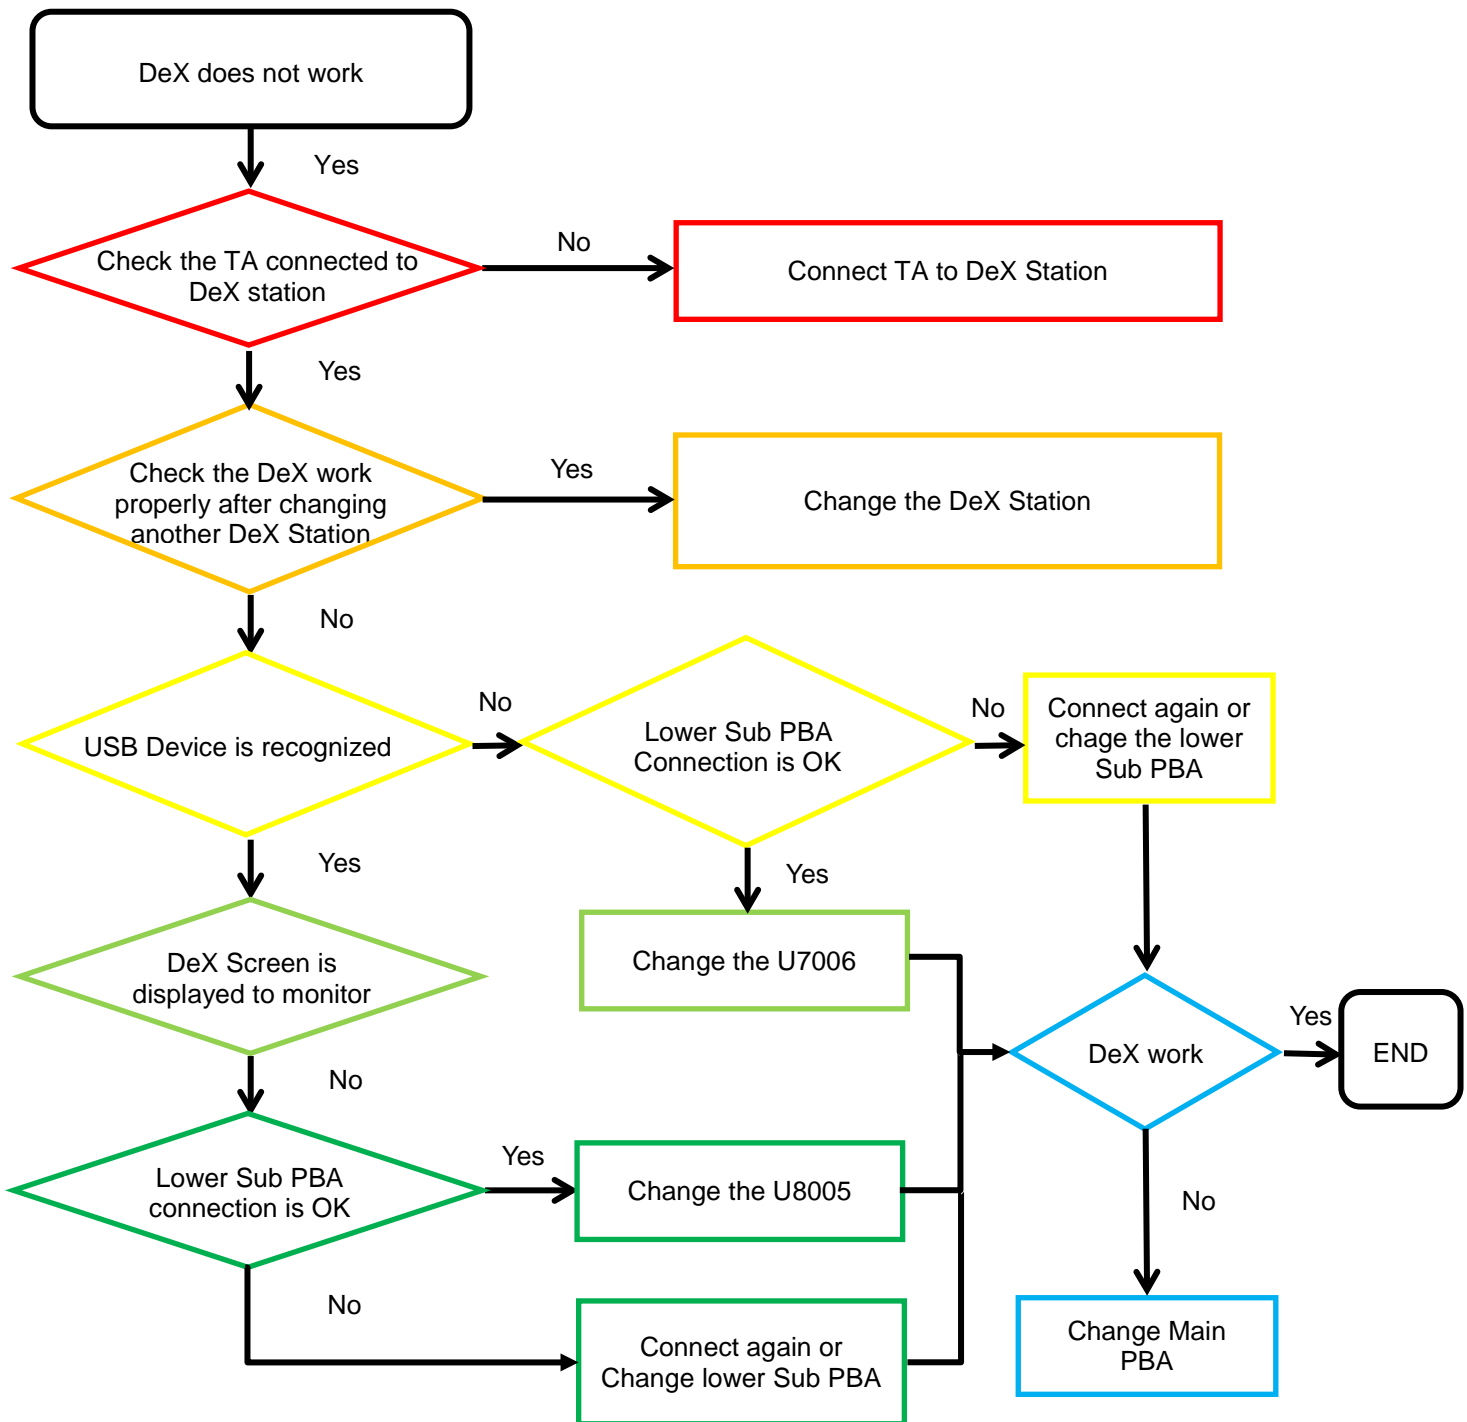

## 8. Level 3 Repair




### 8-4-24. GSM 850/900, WCDMA B5/8, LTE B5/8/12/13/17/18/19/20/26/28 PRx

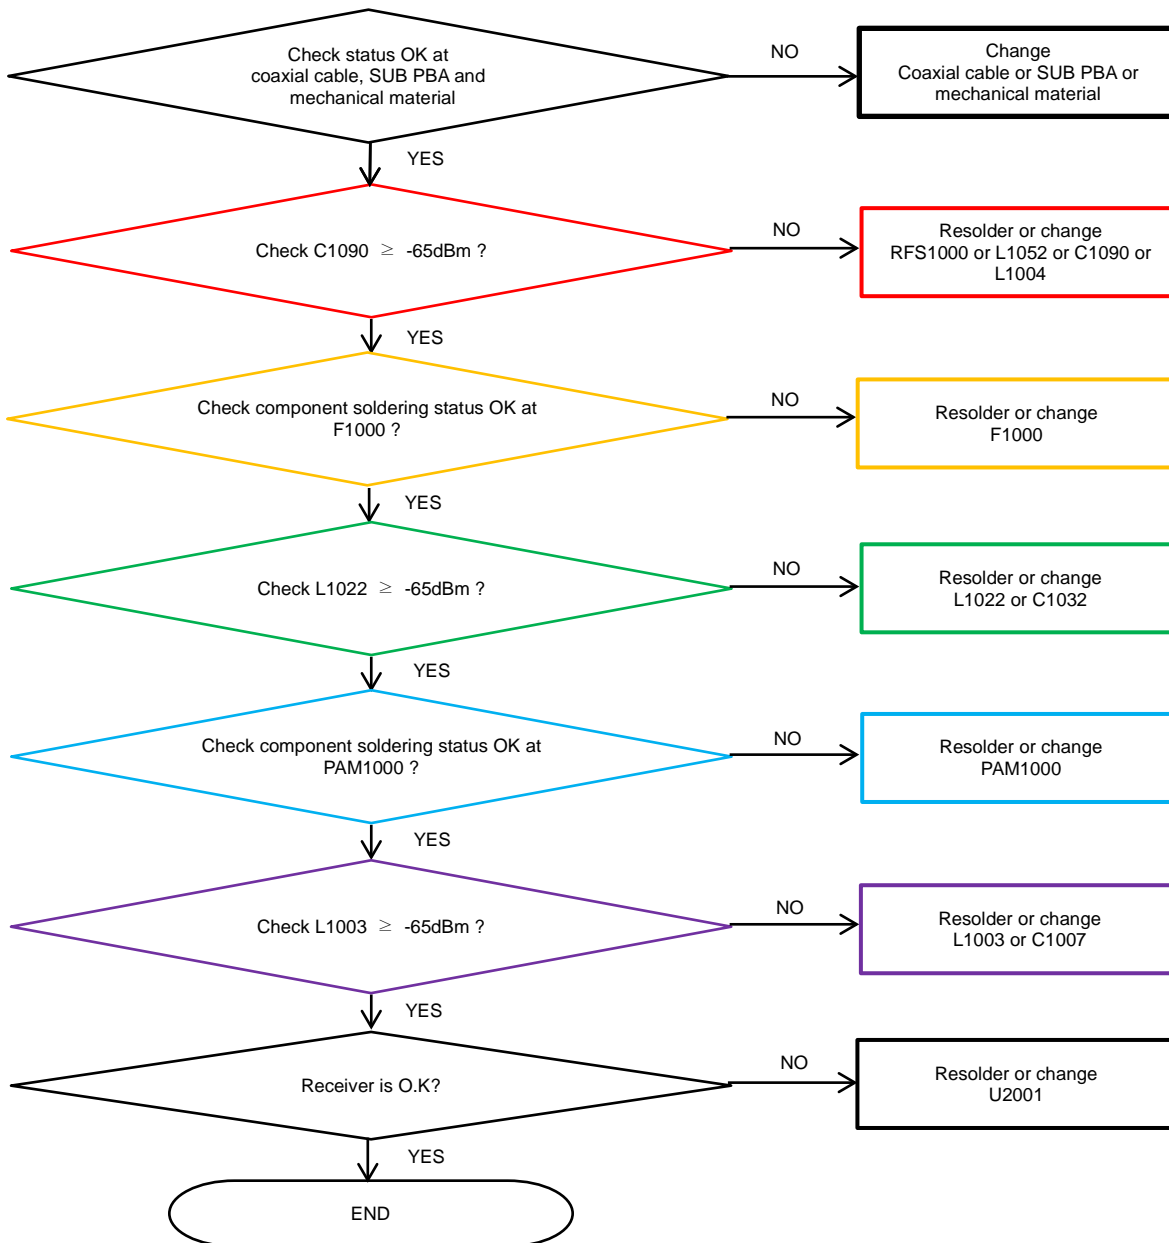

## 8. Level 3 Repair




### 8-4-25. TDSCDMA B38/40/41, LTE B7/38/40/41 PRx

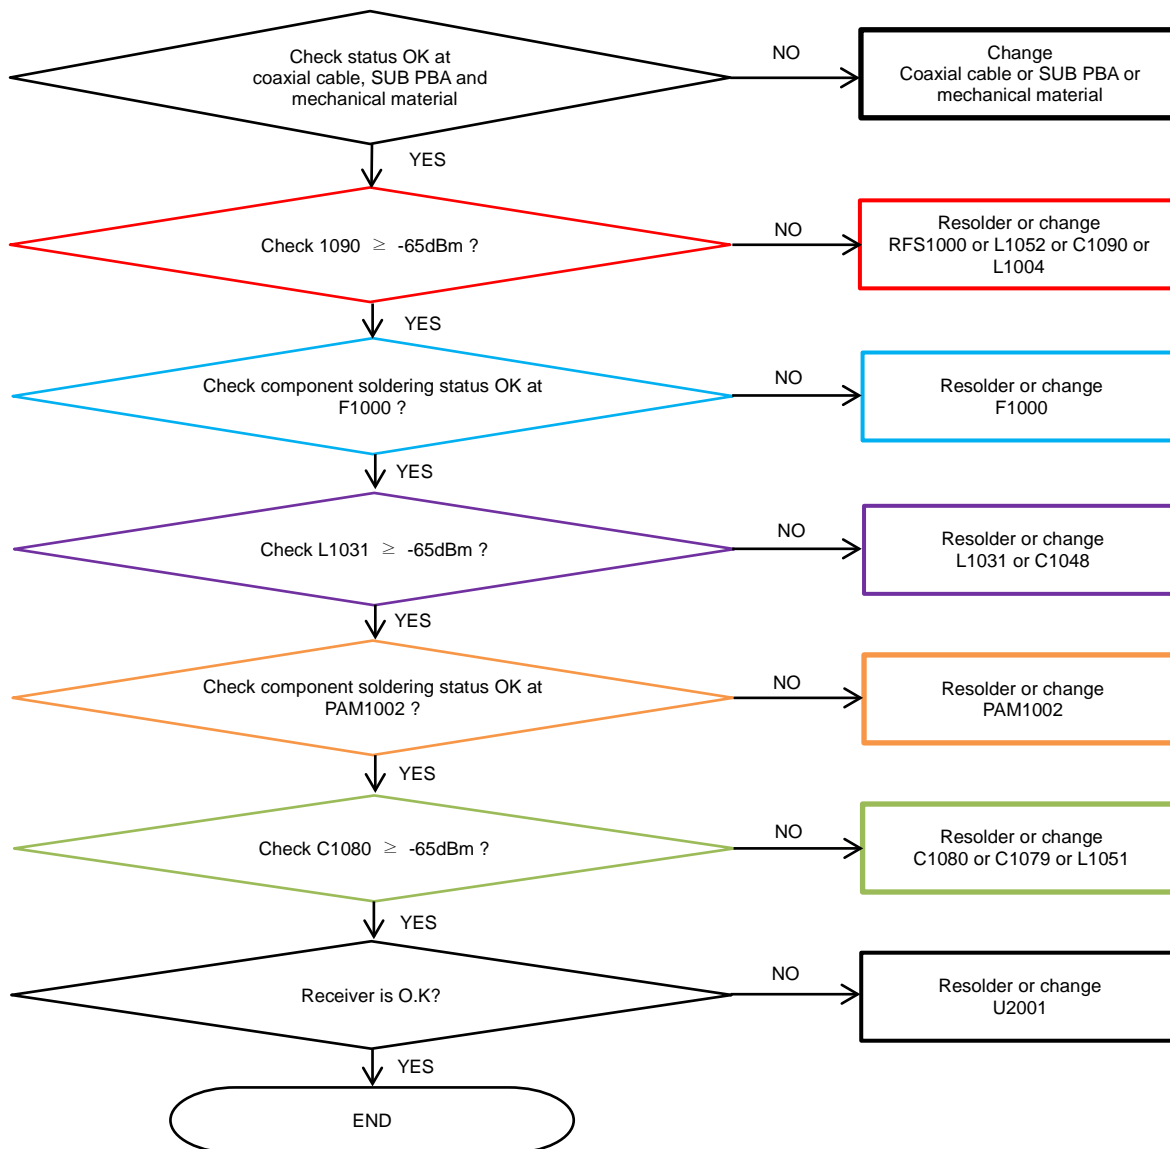



## 8. Level 3 Repair


### 8-4-26. DCS1800/PCS1900, WCDMA B2, LTE B2/3/25 PRx

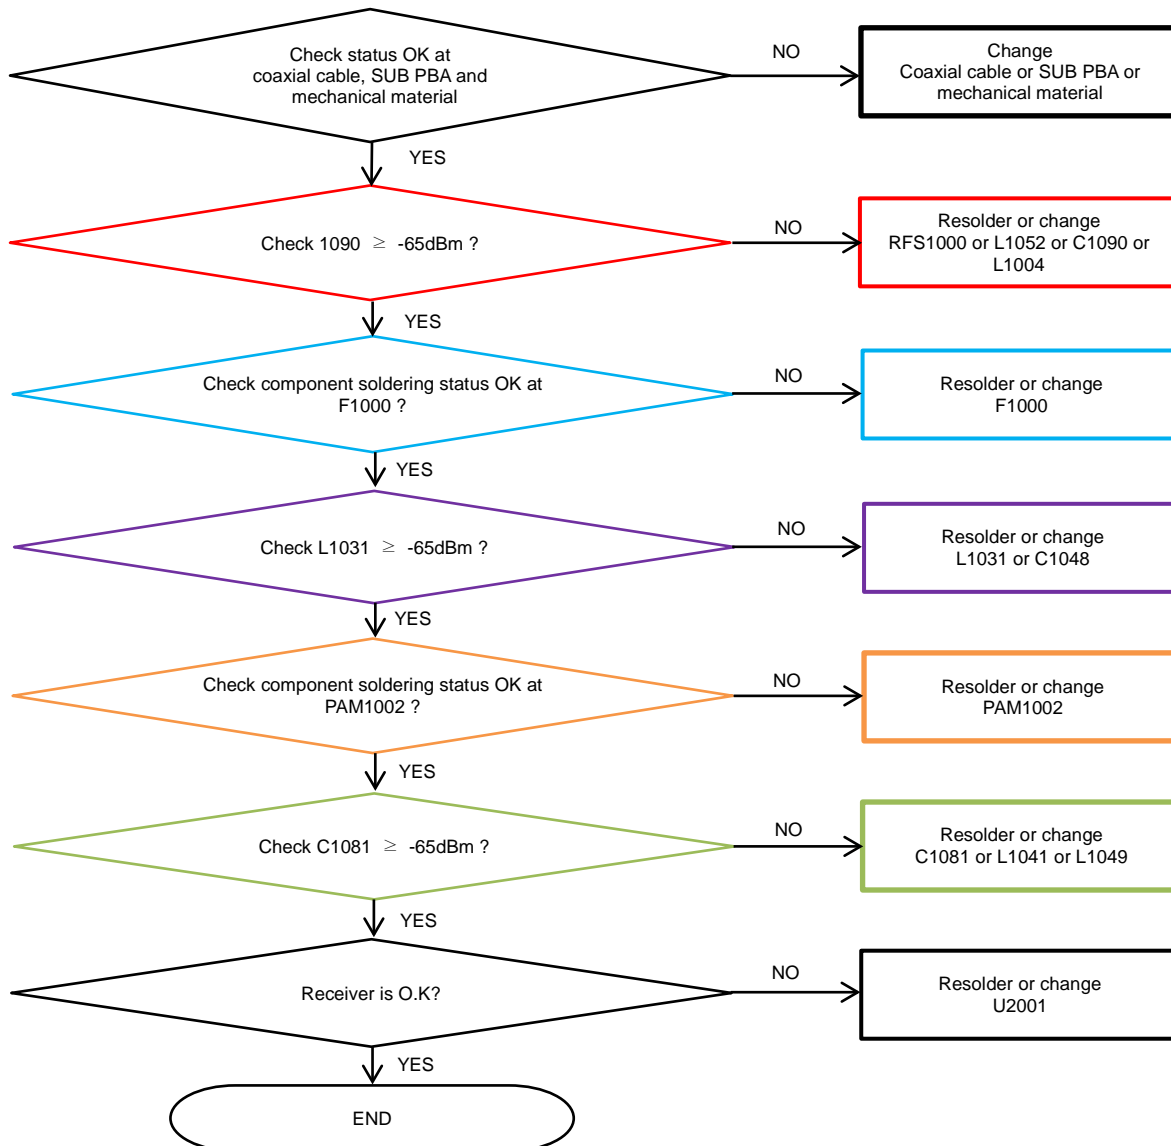

## 8. Level 3 Repair




### 8-4-27. WCDMA B1/4, TDSCDMA B39, LTE B1/4/39/66 PRx

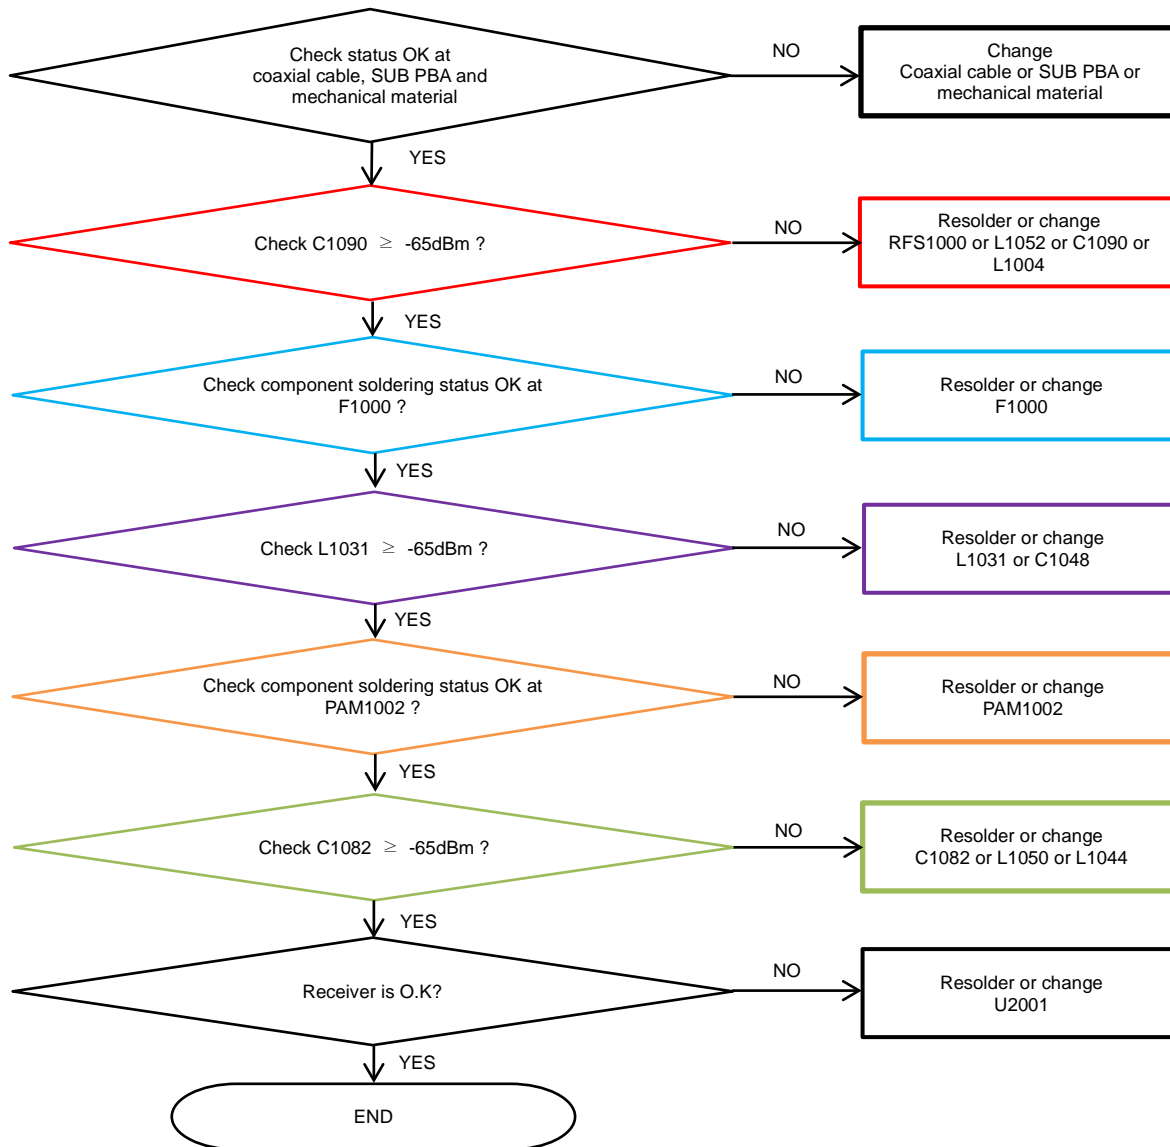

## 8. Level 3 Repair




### 8-4-28. TDSCDMA B34, LTE B34 PRx

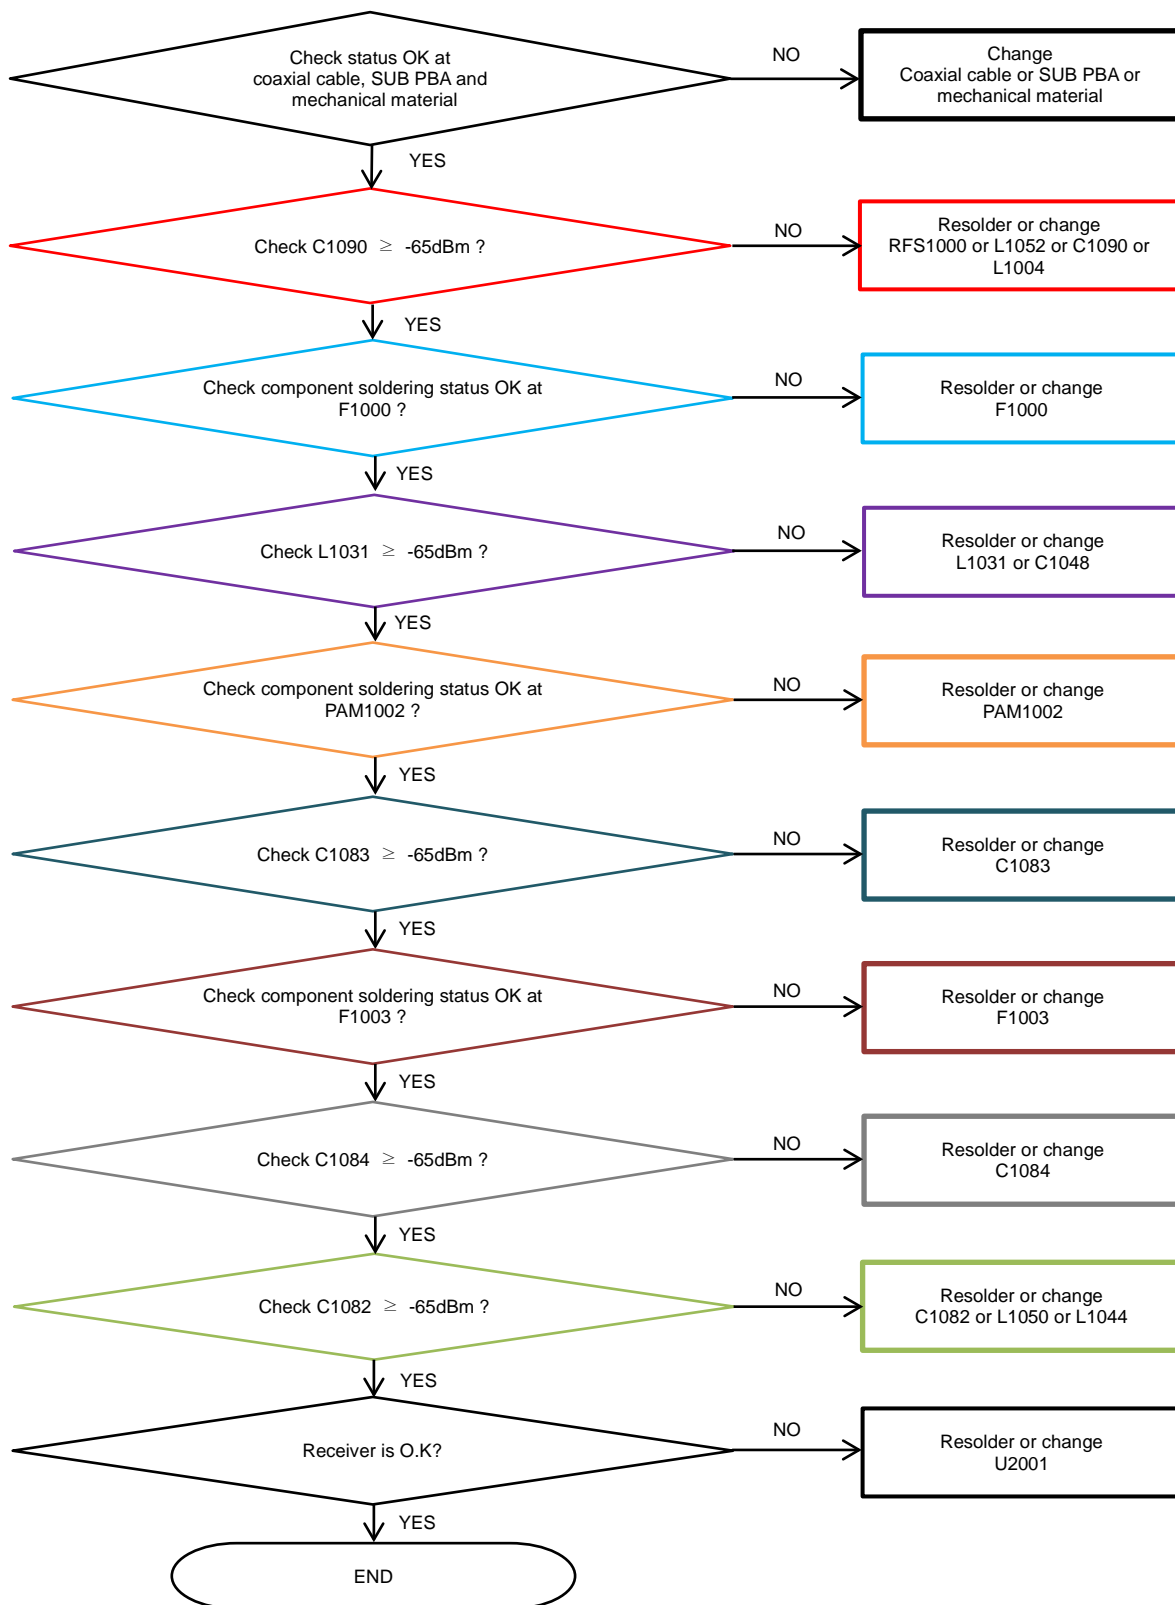


## 8. Level 3 Repair

### 8-4-29. LTE B32 PRx

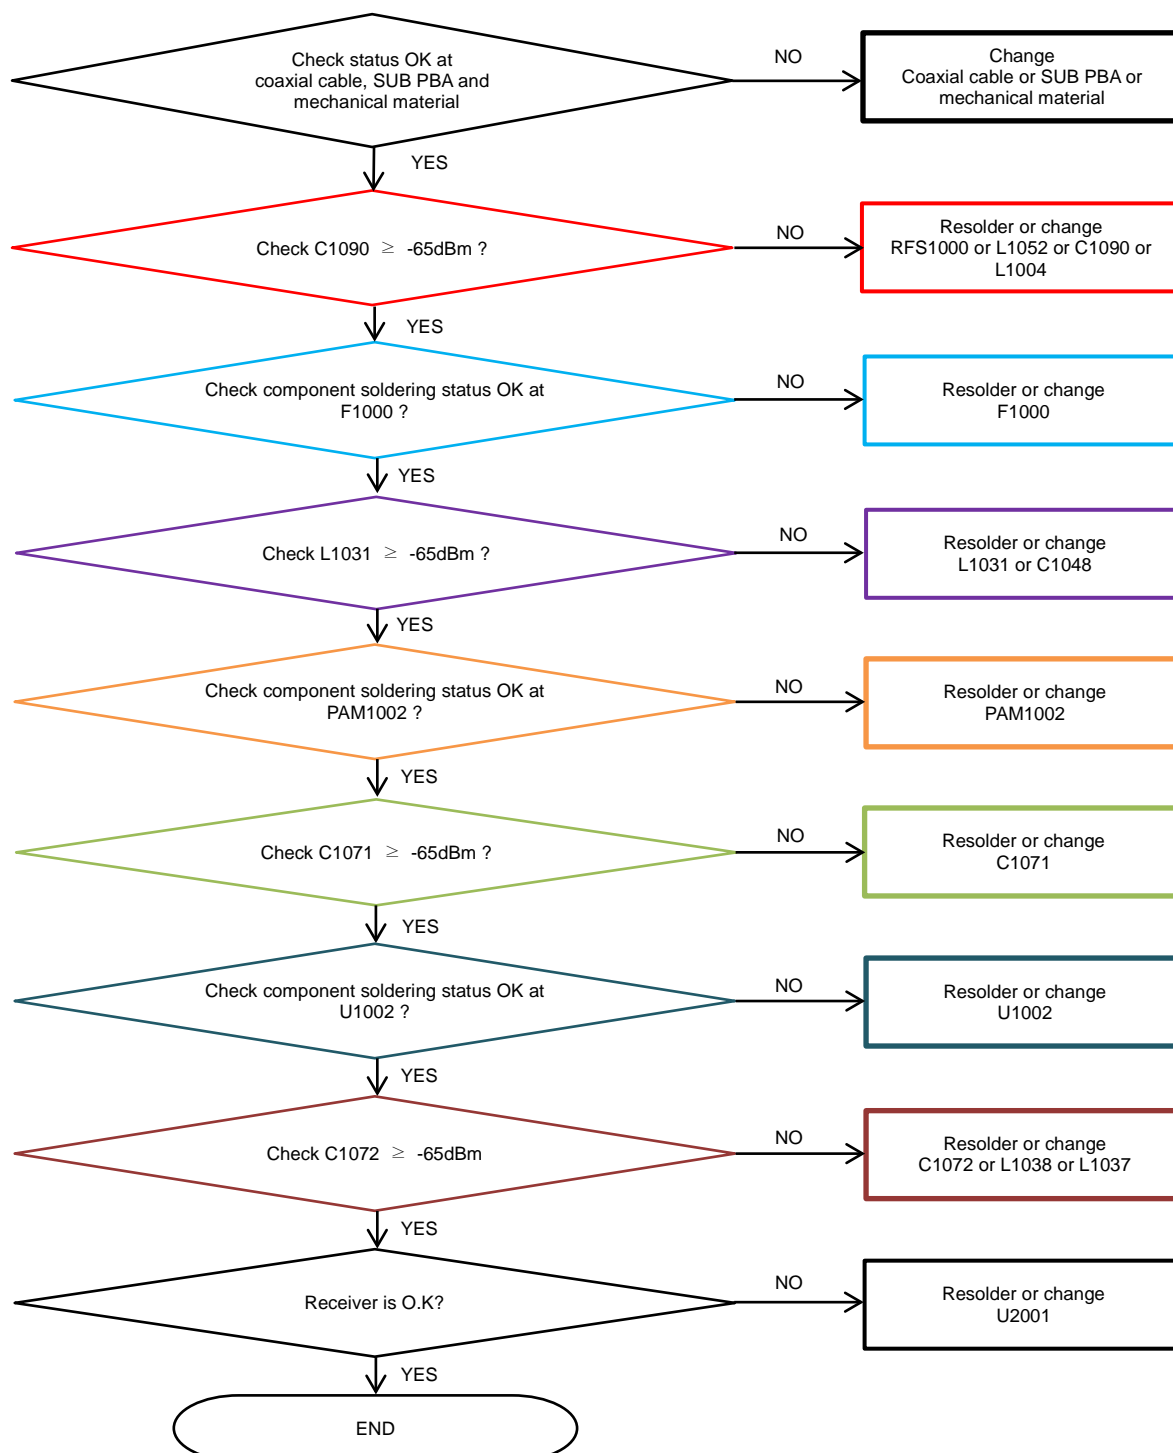

## 8. Level 3 Repair

### 8-4-30. LTE B1/4 4Rx\_PRx

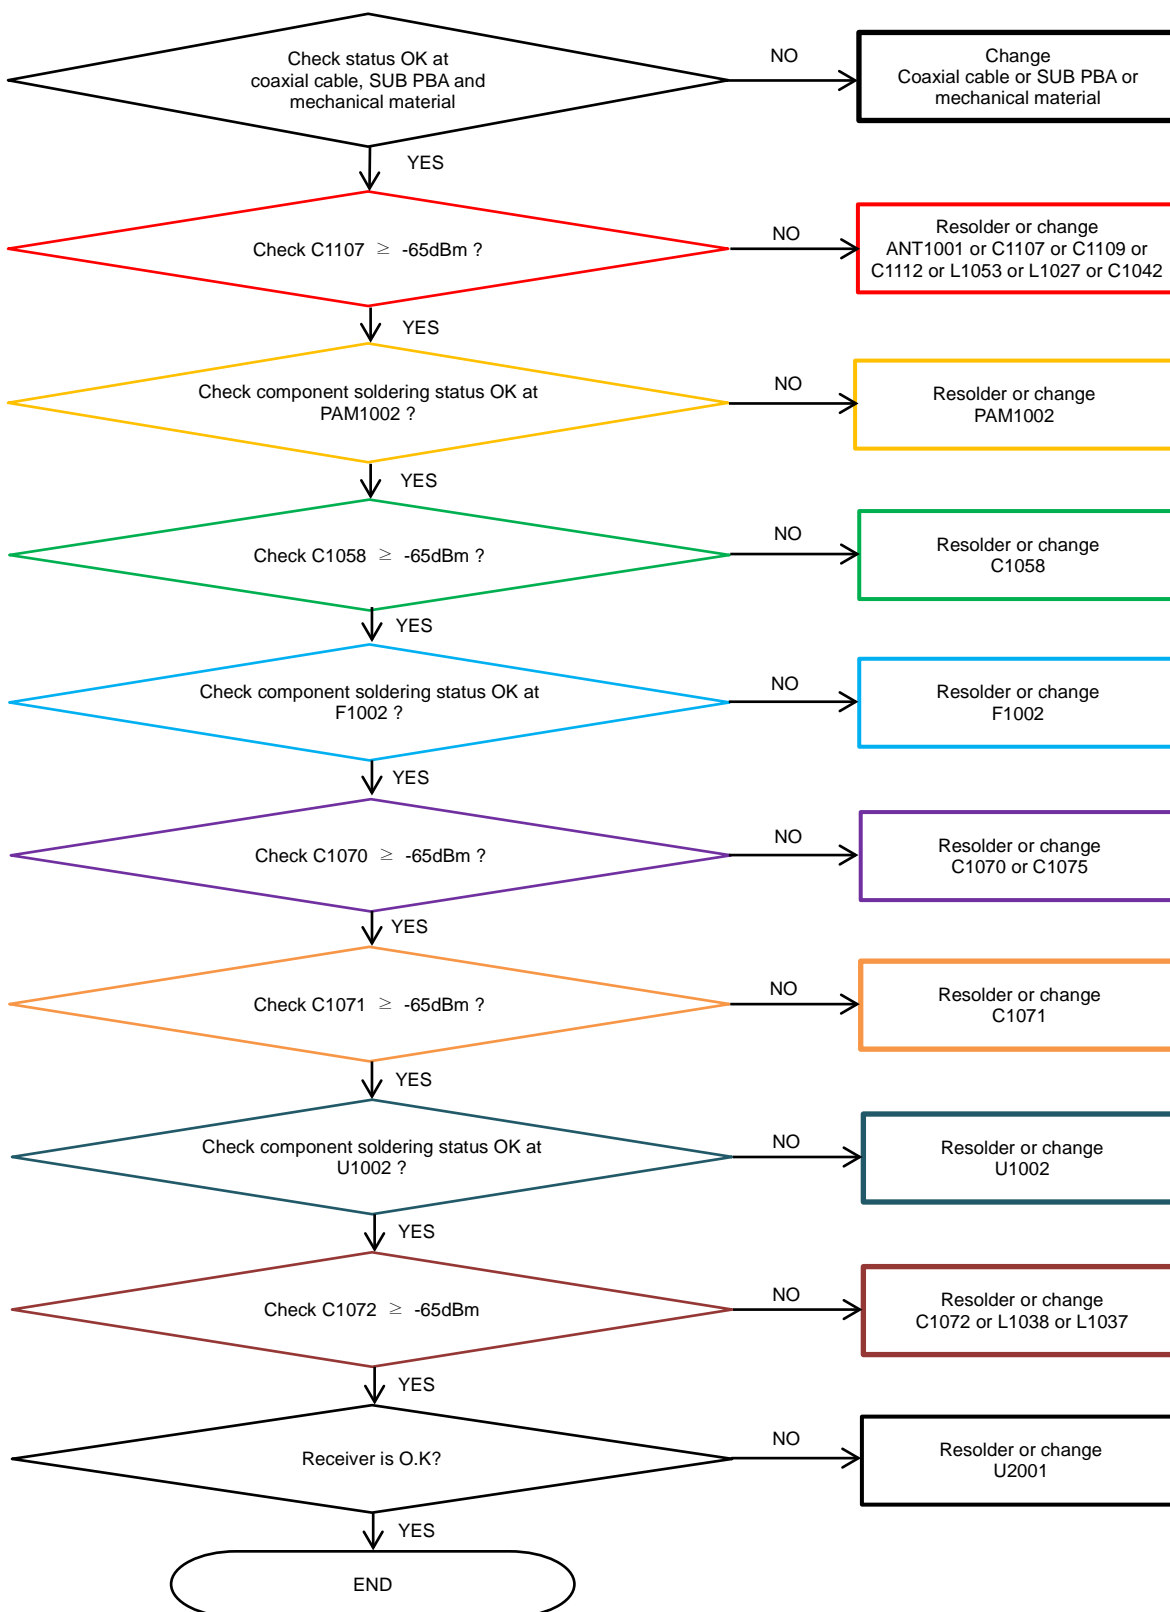




## 8. Level 3 Repair




### 8-4-31. LTE B3 4Rx\_PRx

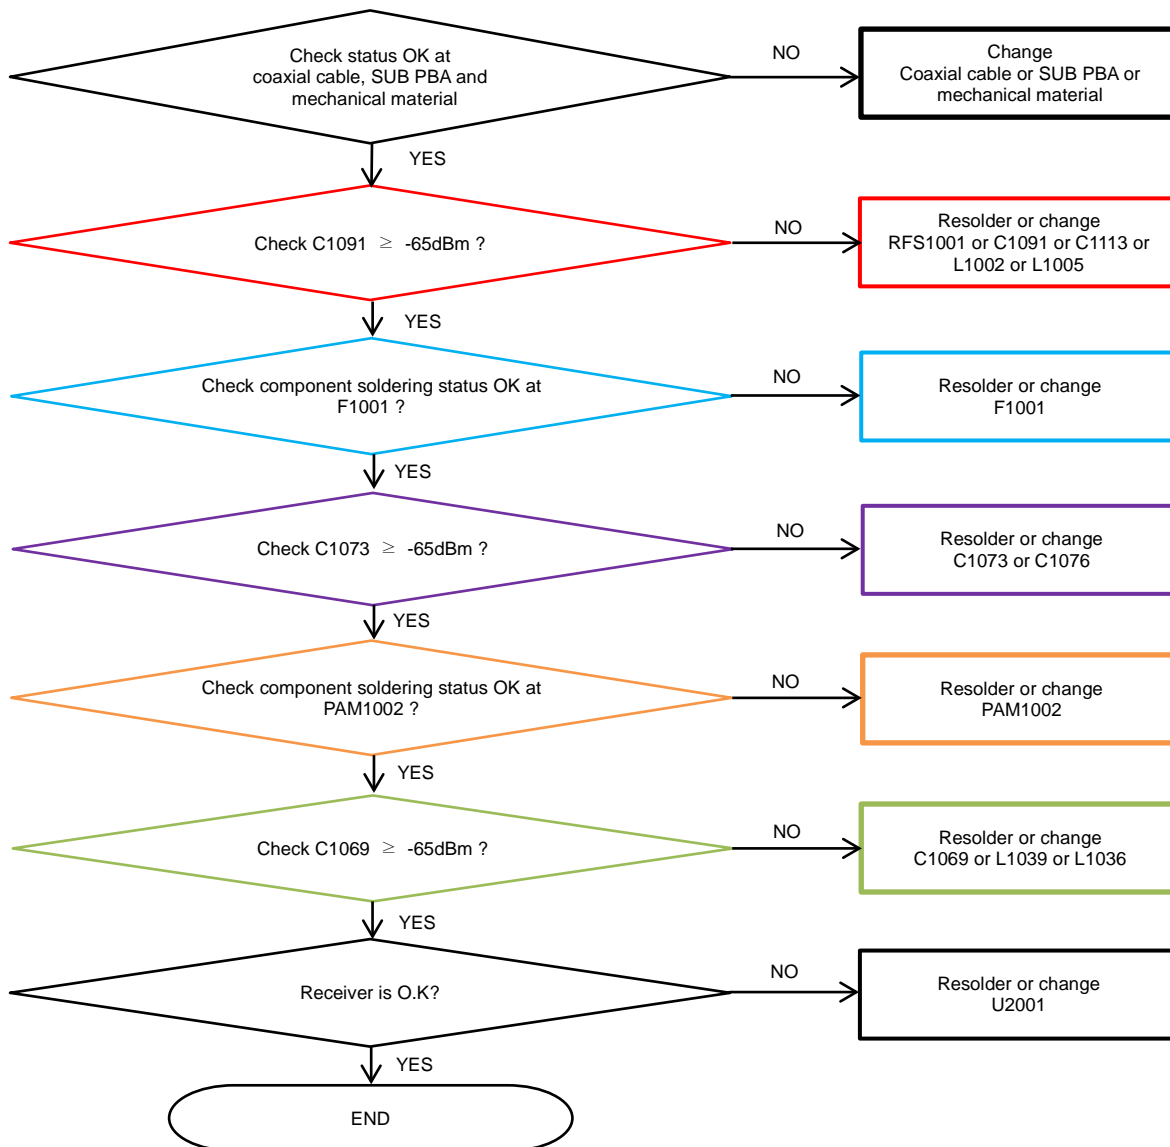

## 8. Level 3 Repair




### 8-4-32. LTE B7 4Rx\_PRx

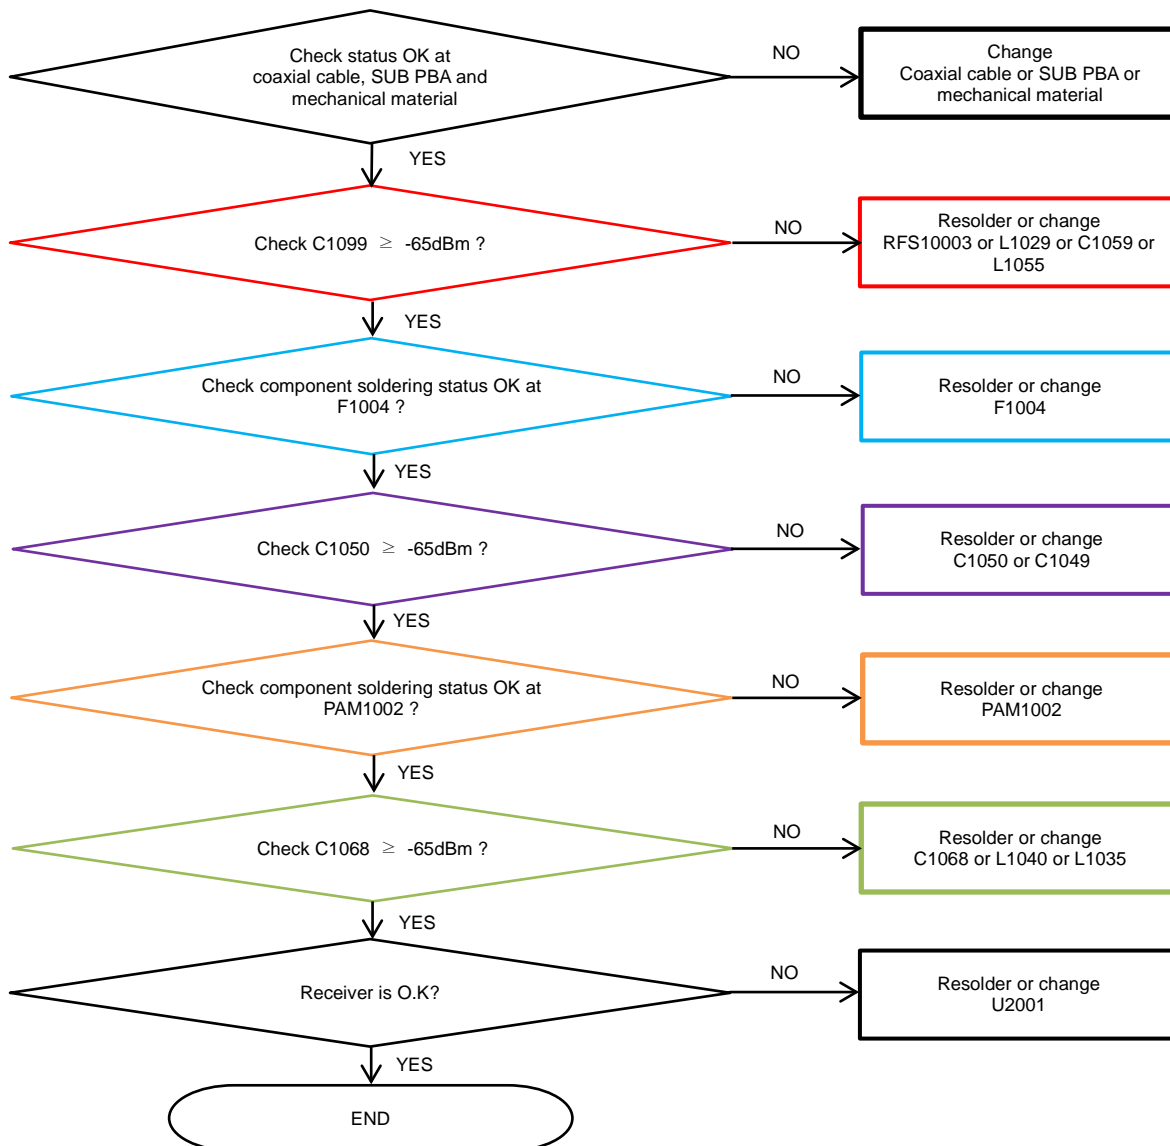

## 8. Level 3 Repair


### 8-4-33. LTE 40 4Rx\_PRx

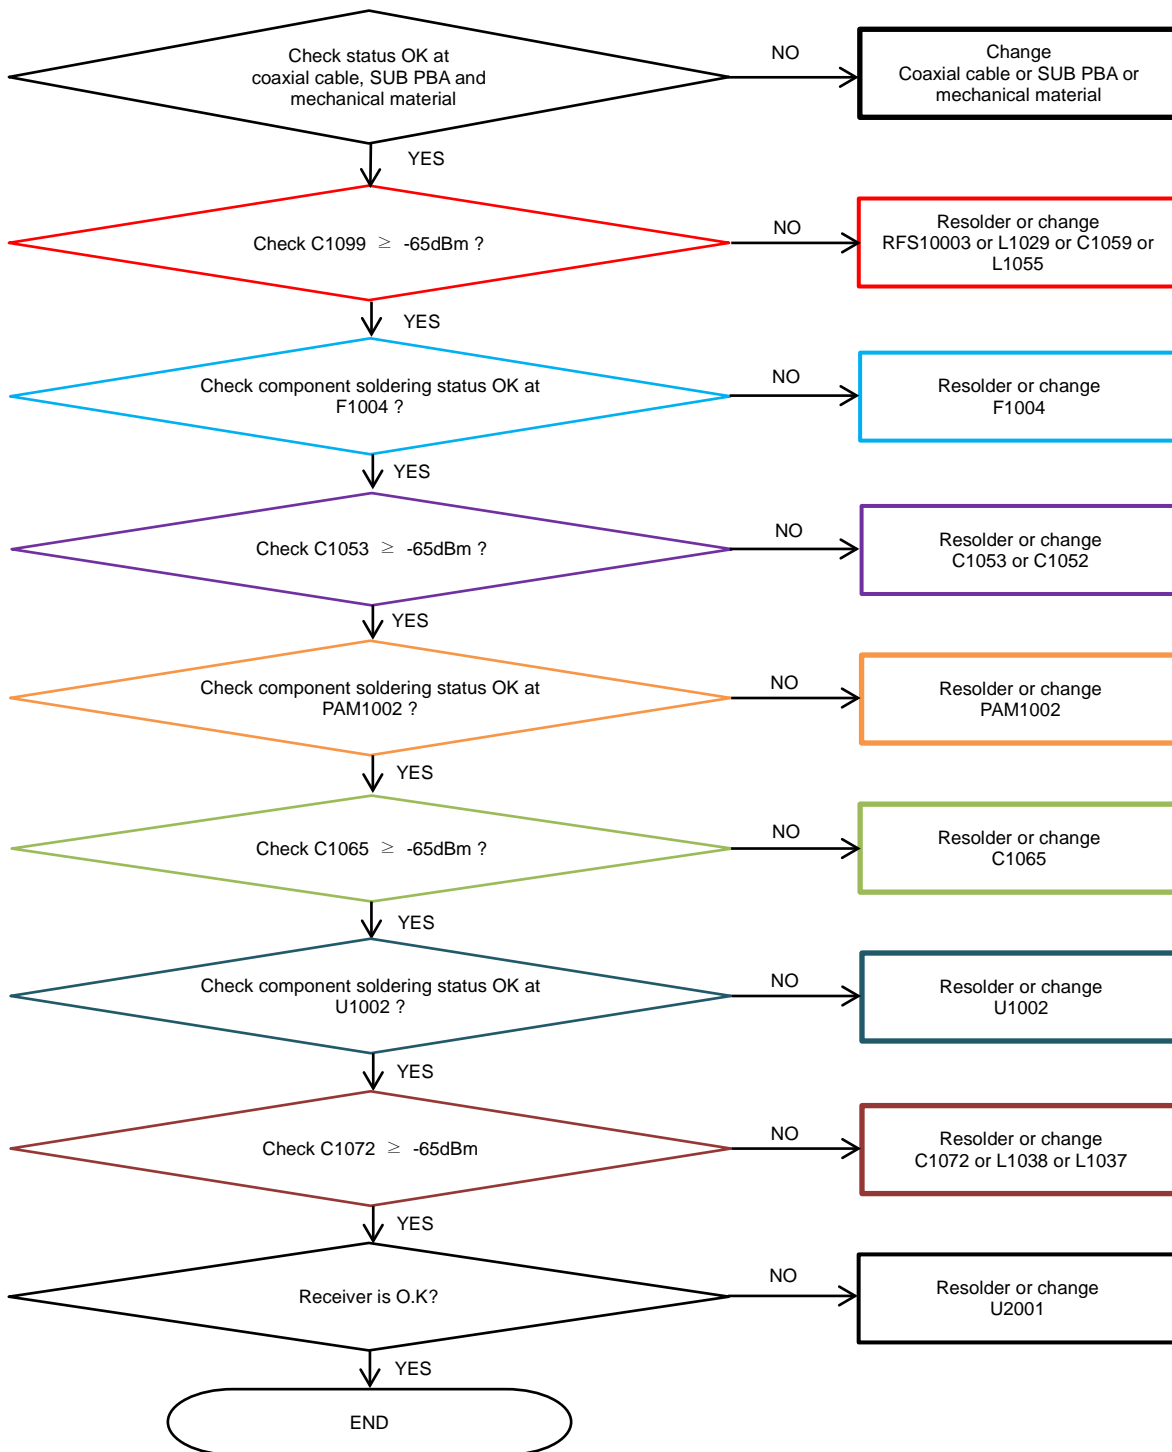

## 8. Level 3 Repair




### 8-4-34. GSM850/900, WCDMA B5/8, LTE B5/8/12/13/17/18/19/20/26/28 DRx

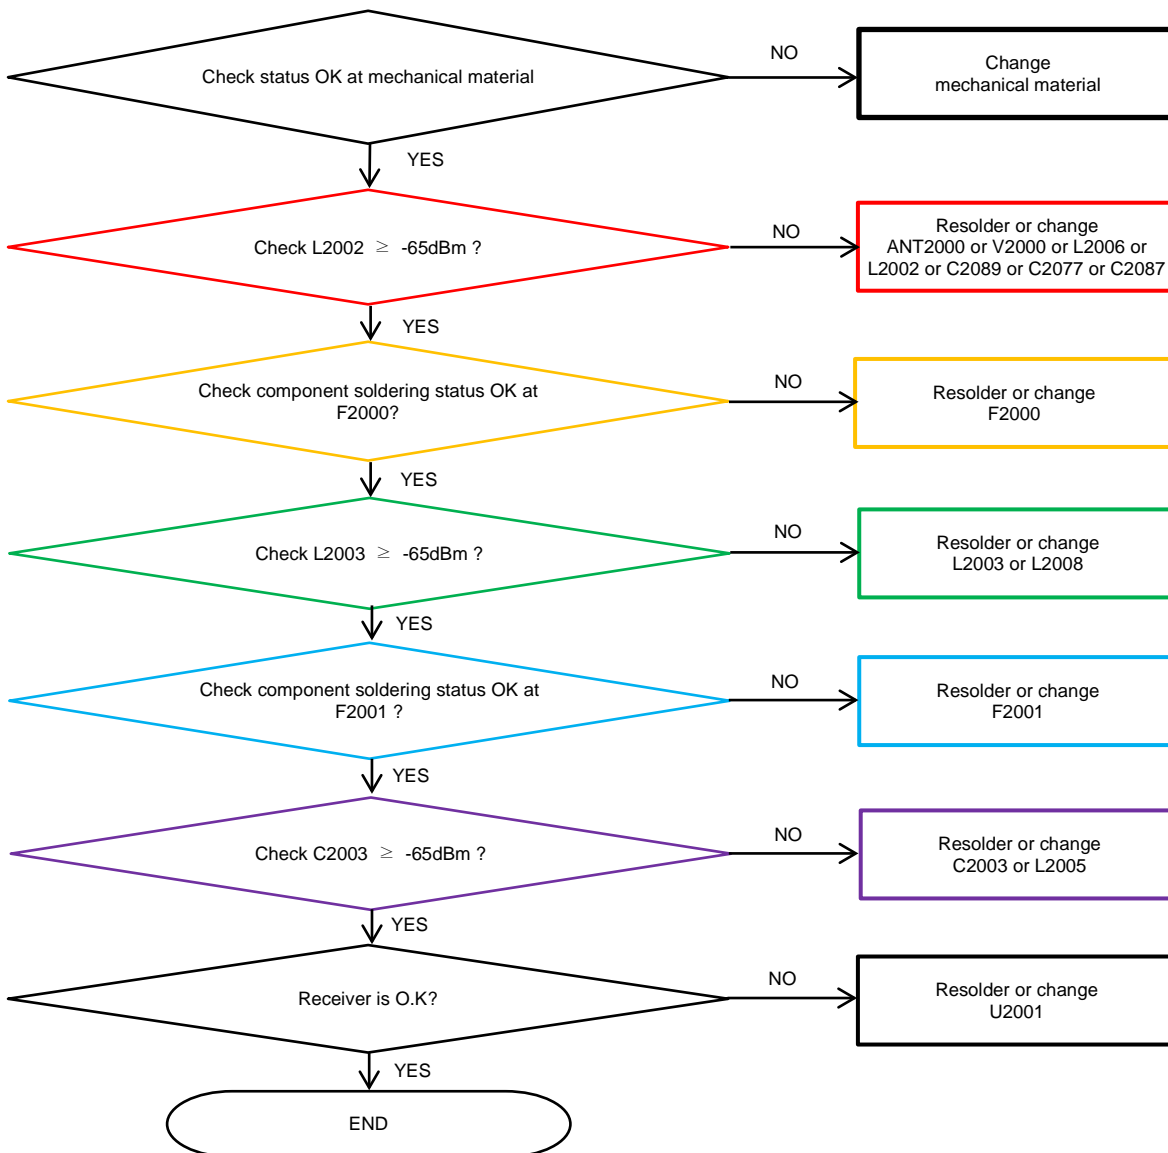

## 8. Level 3 Repair




### 8-4-35. DCS1800/PCS1900, WCDMA B2, LTE B2/3/25 DRx

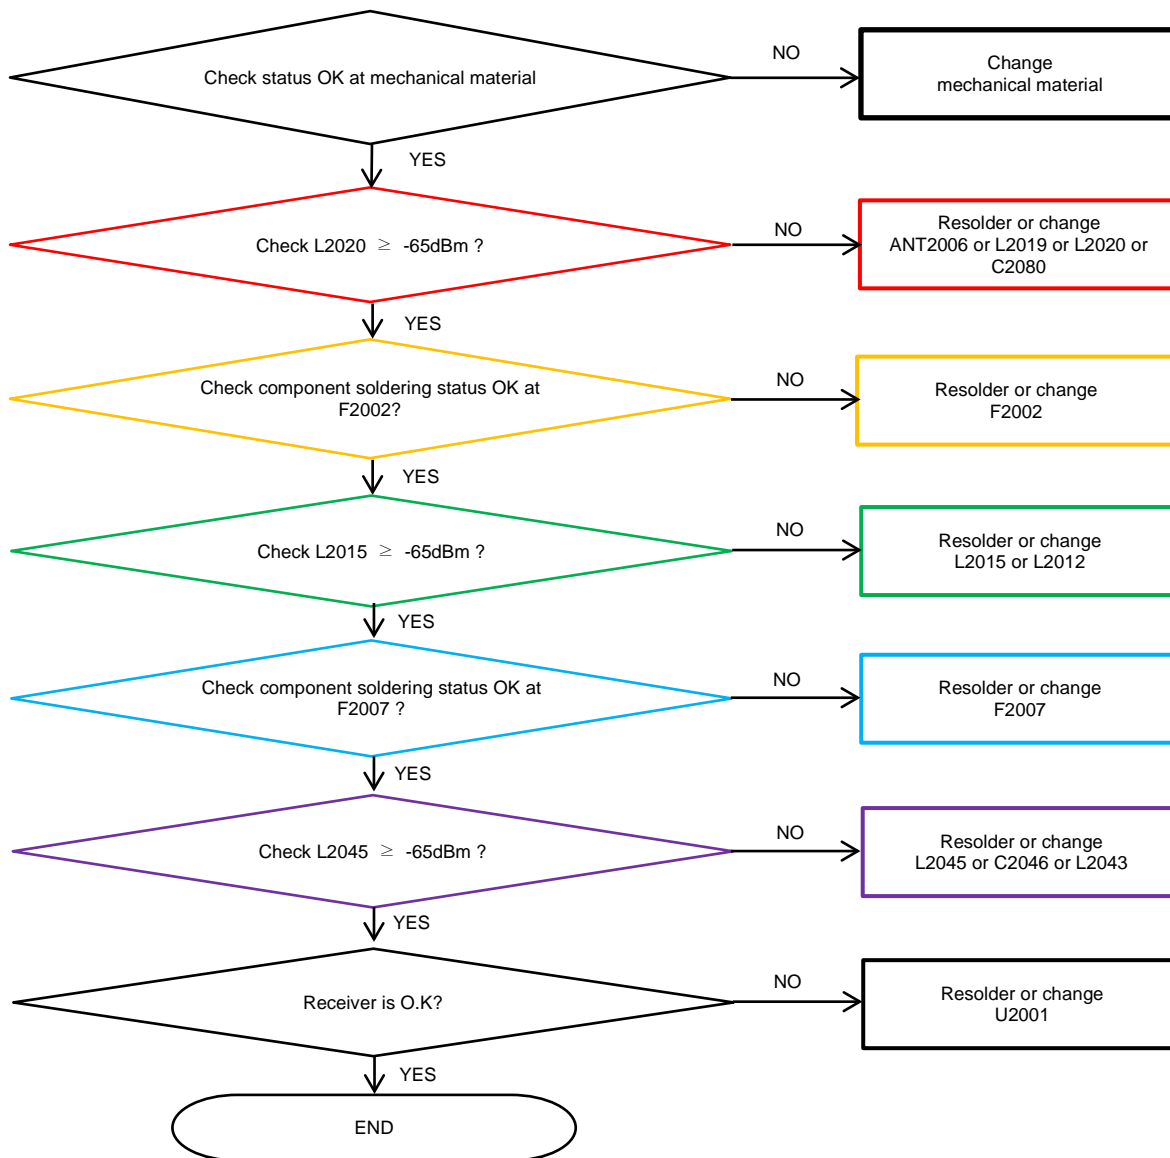

## 8. Level 3 Repair


### 8-4-36. WCDMA B1/4, LTE B1/4/32/66 DRx

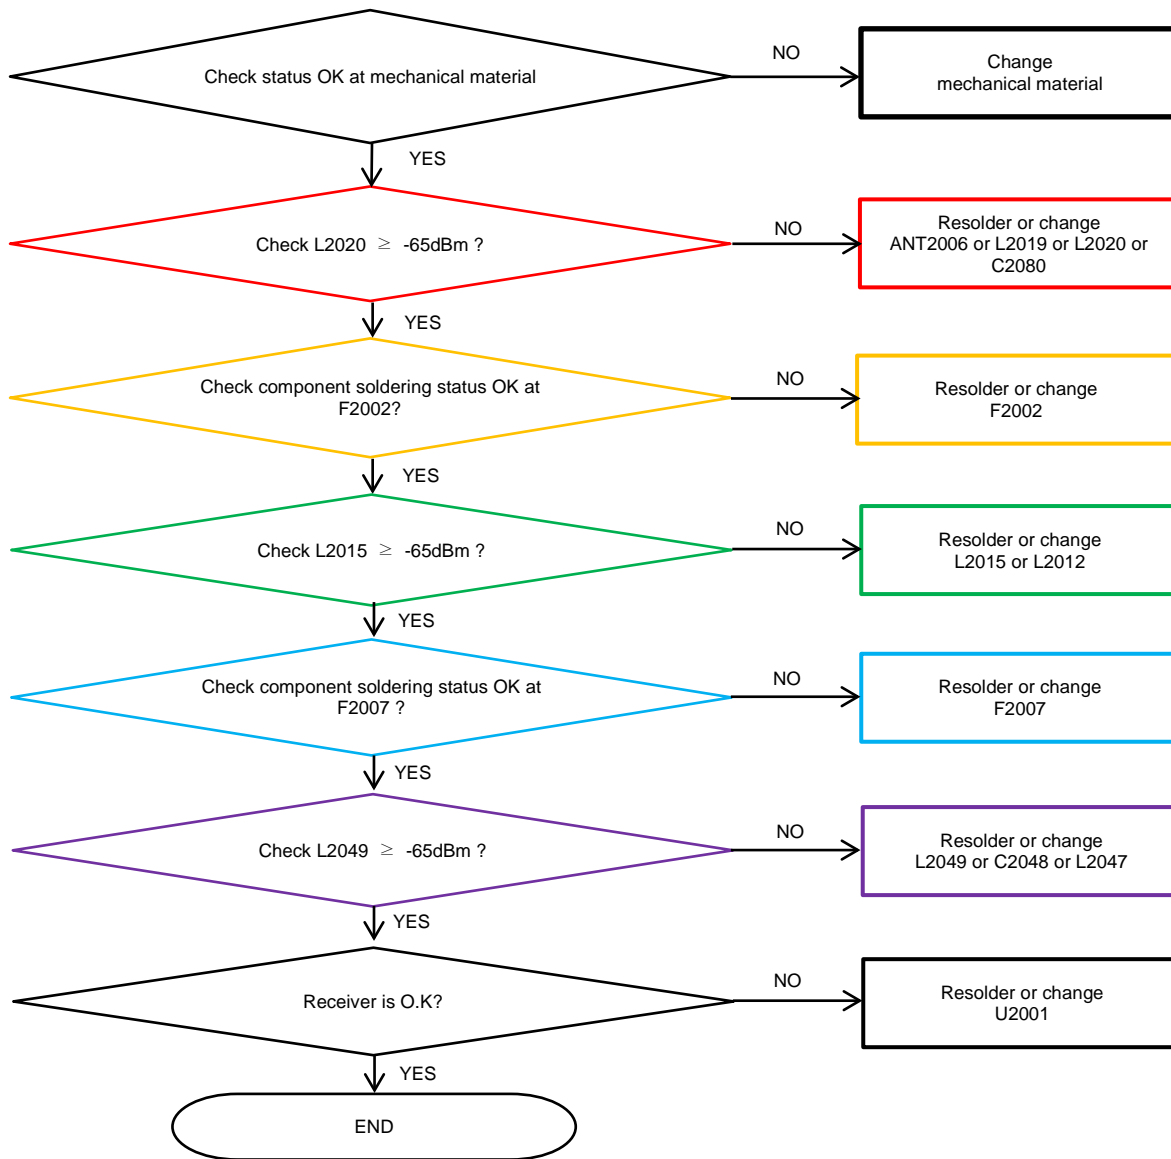

## 8. Level 3 Repair




### 8-4-37. TDSCDMA B38/40/41, LTE B7/38/40/41 DRx

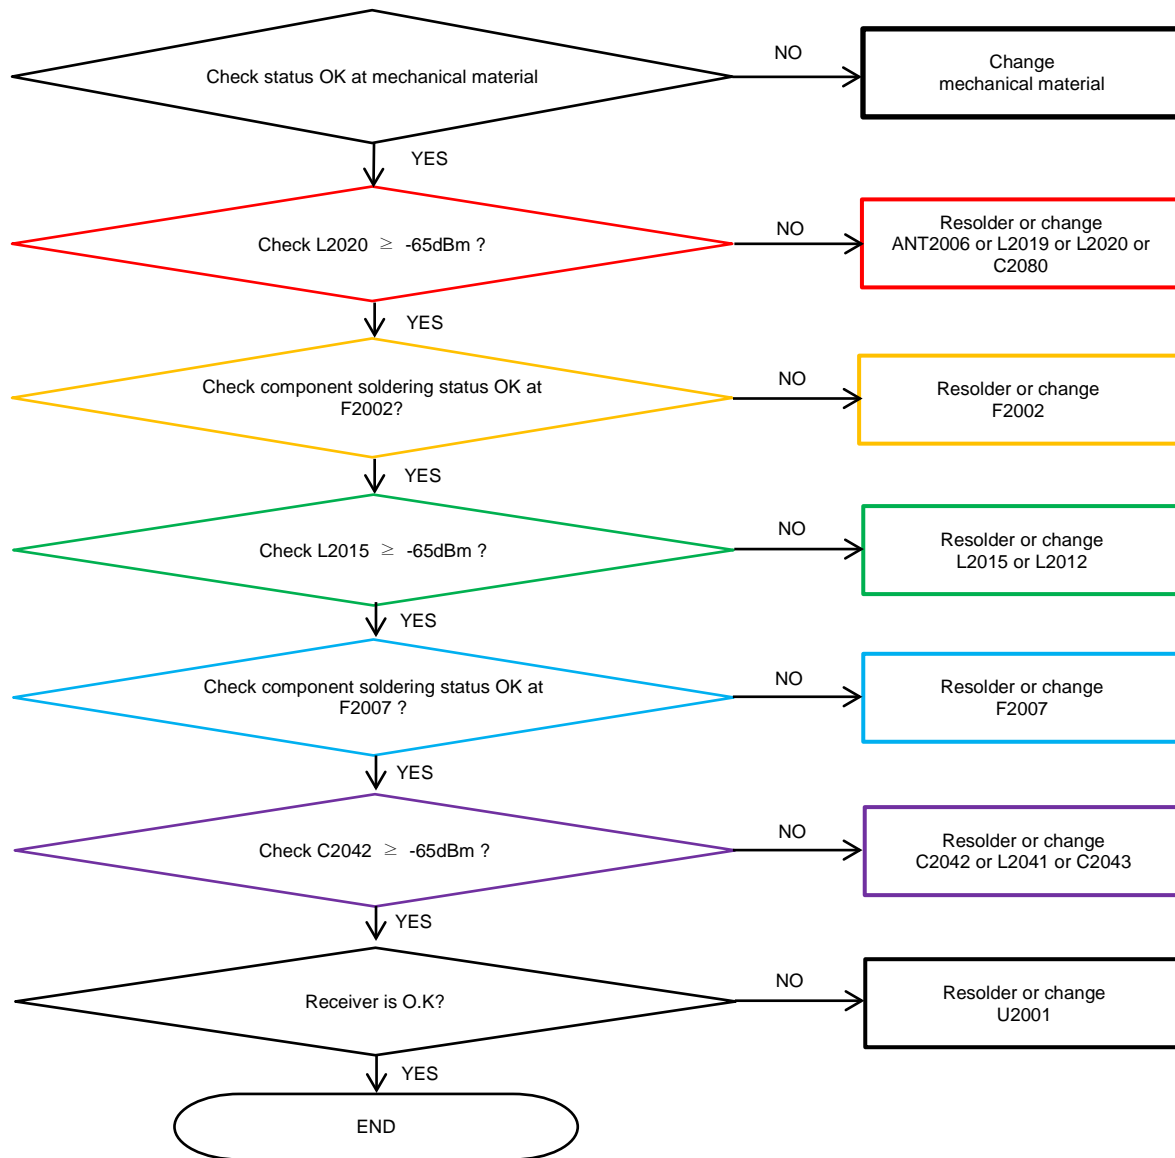

## 8. Level 3 Repair

### 8-4-38. LTE B1/4 4Rx\_DRx

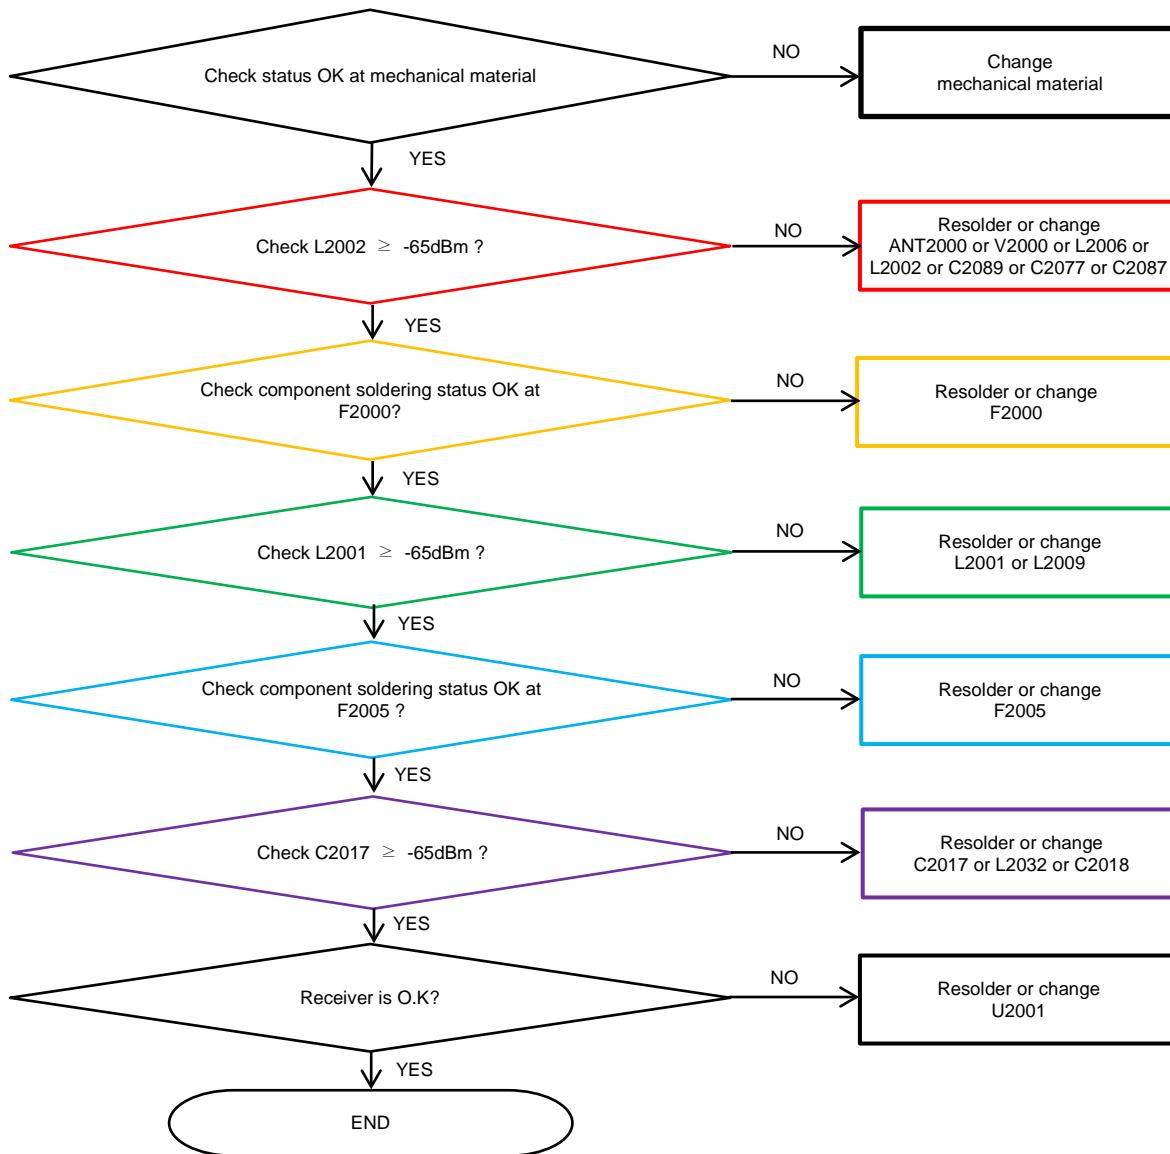




## 8. Level 3 Repair




### 8-4-39. LTE B3 4Rx\_DRx

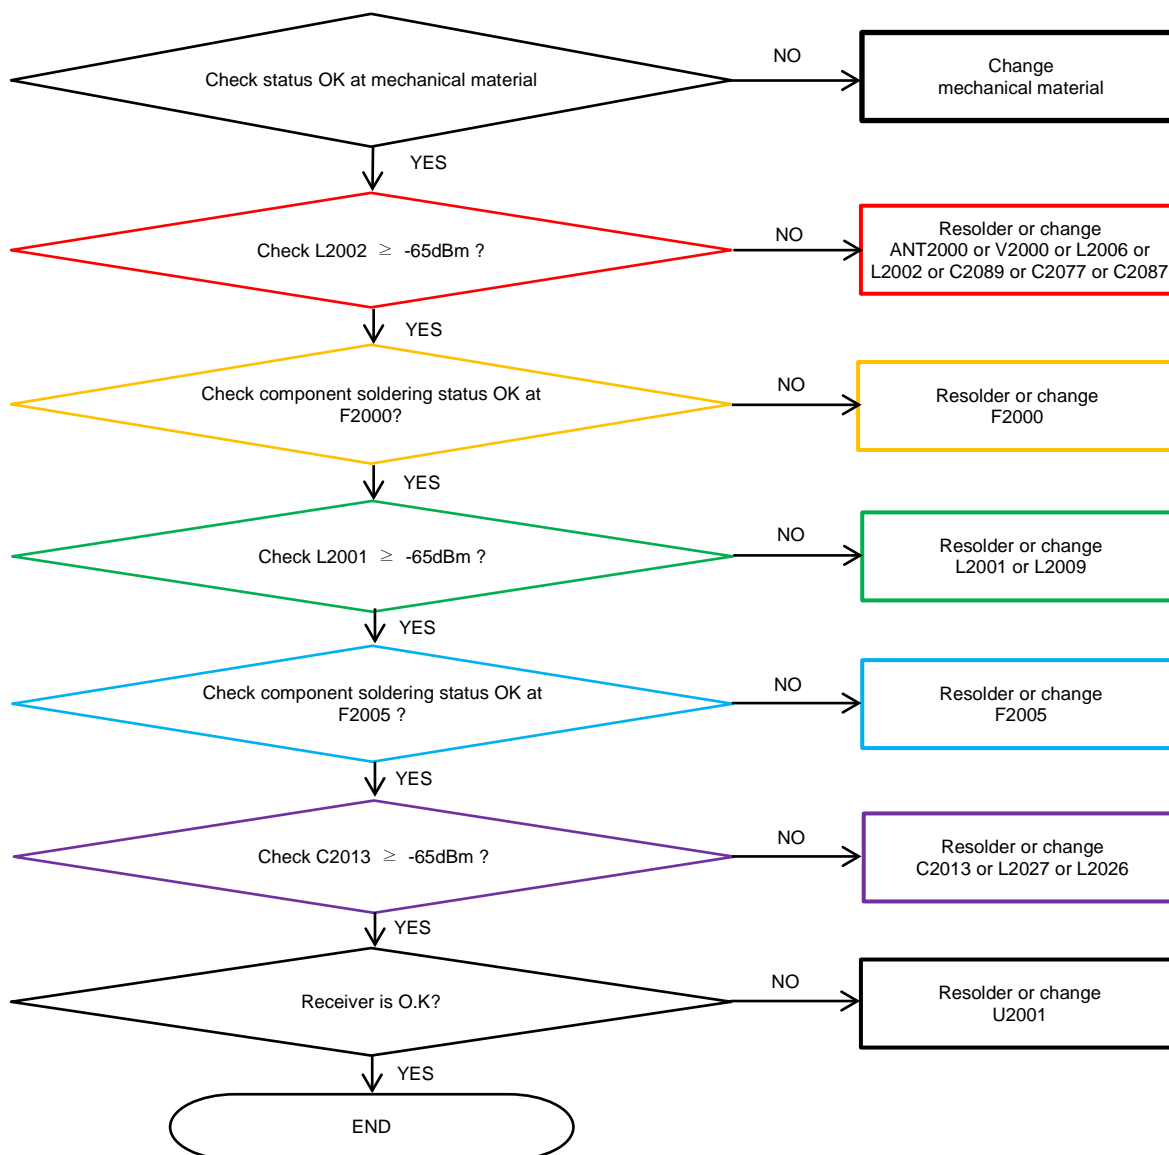

## 8. Level 3 Repair




### 8-4-40. LTE B7 4Rx\_DRx

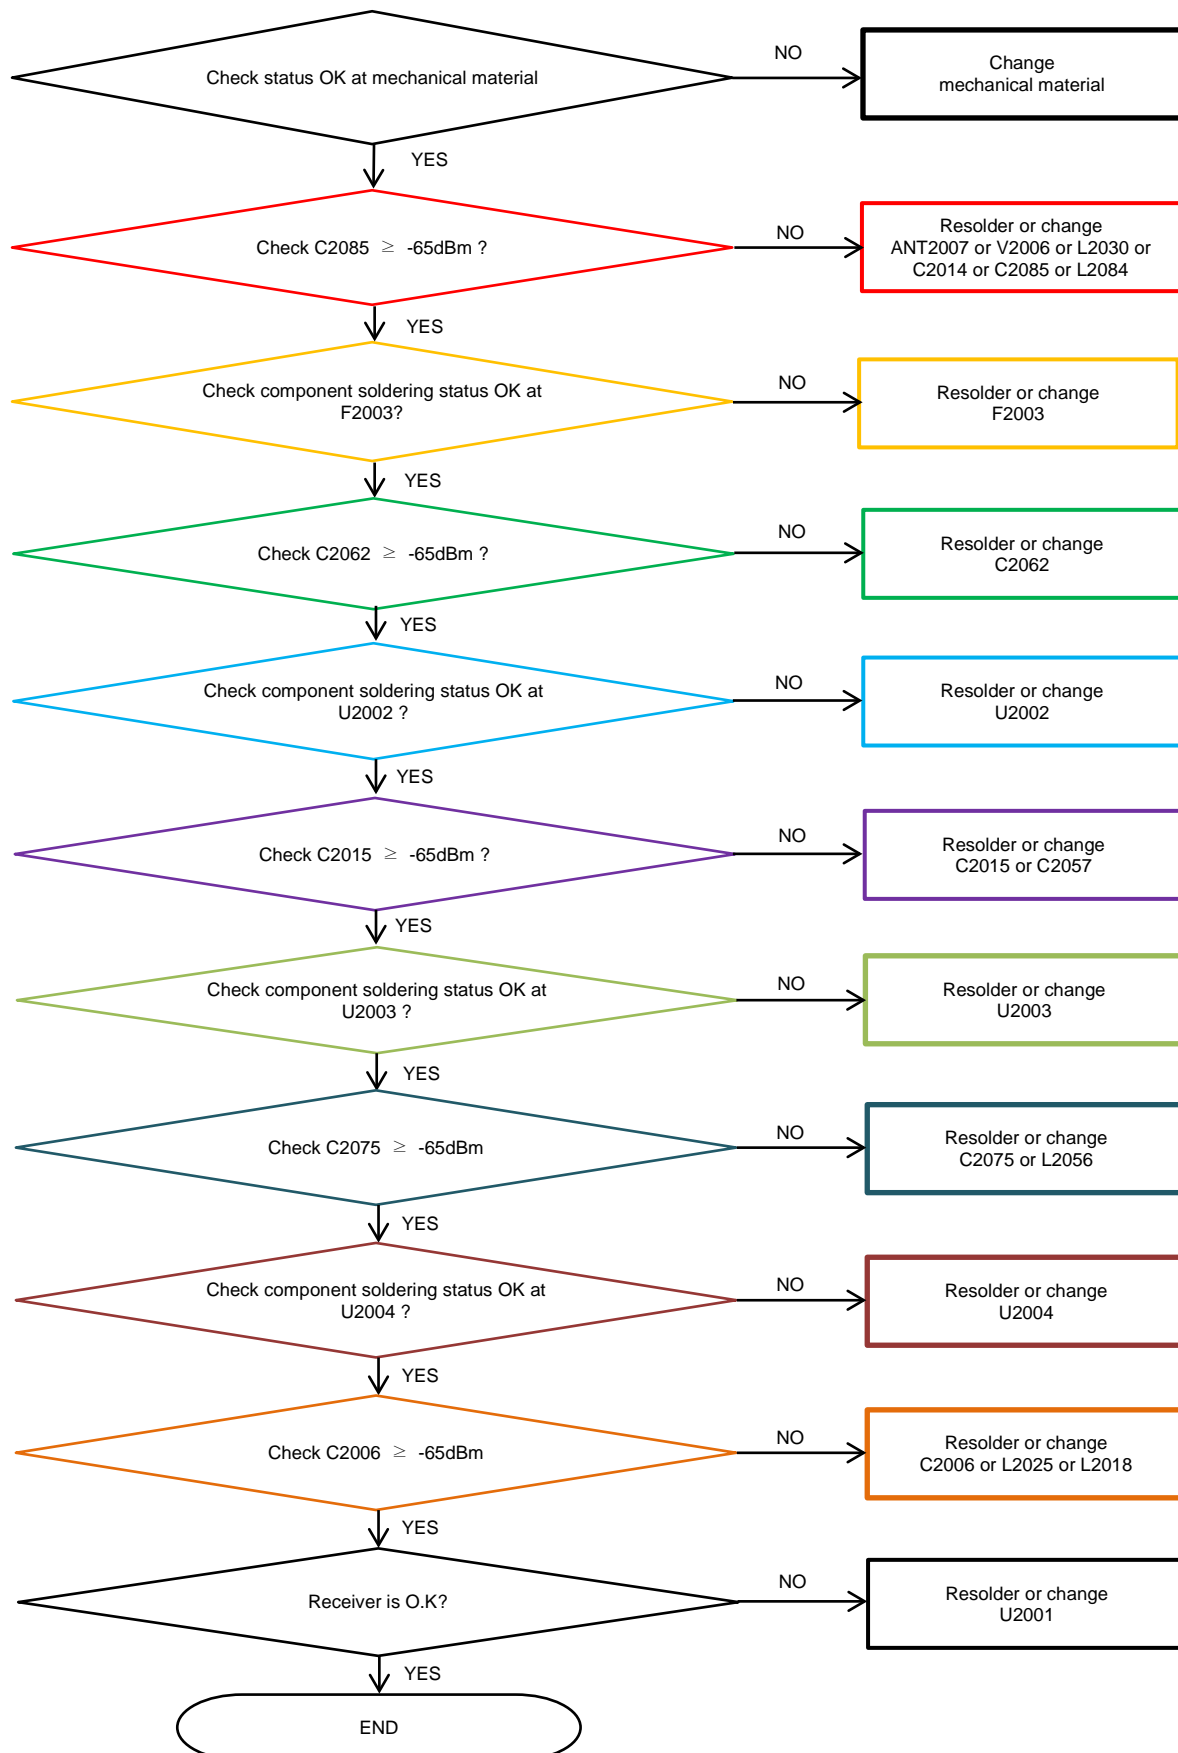

## 8. Level 3 Repair




### 8-4-41. LTE B40 4Rx\_DRx

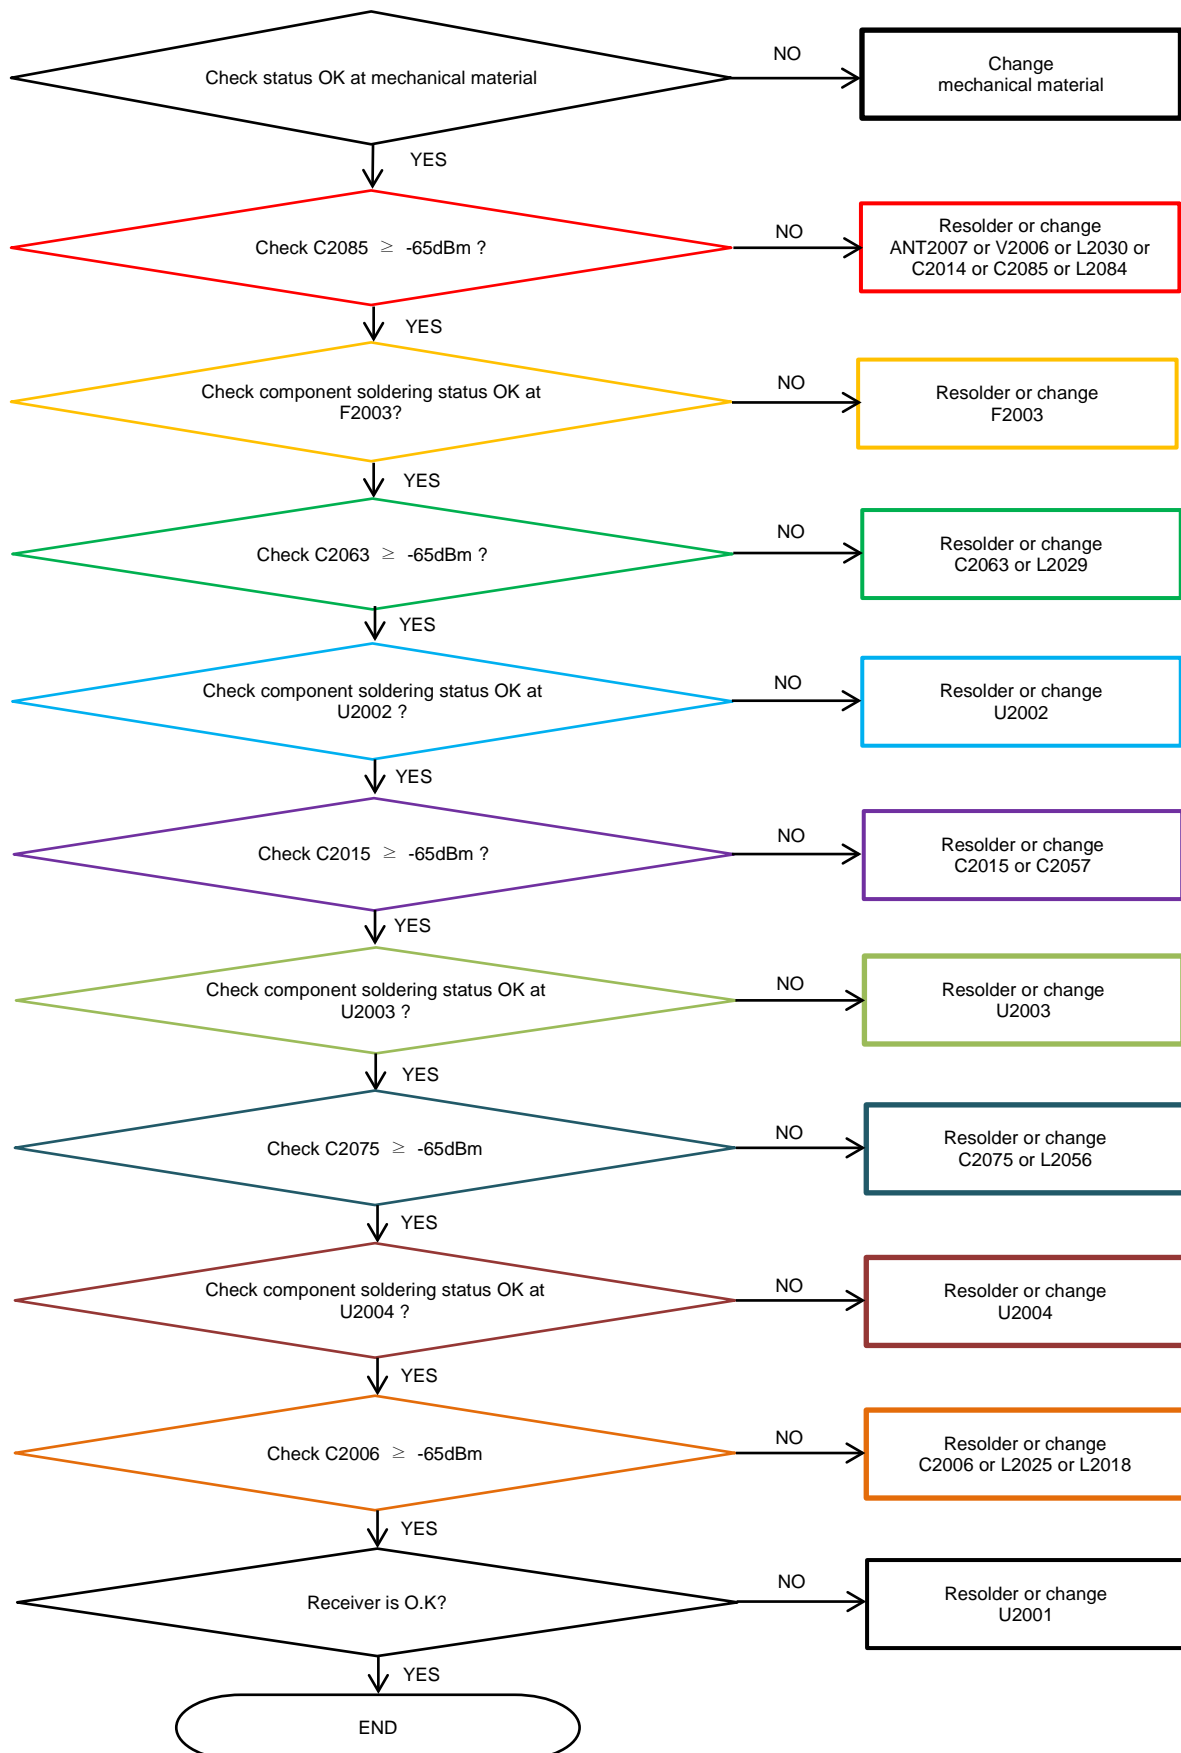


## 8. Level 3 Repair

### 8-4-42. GSM 850/900 Tx

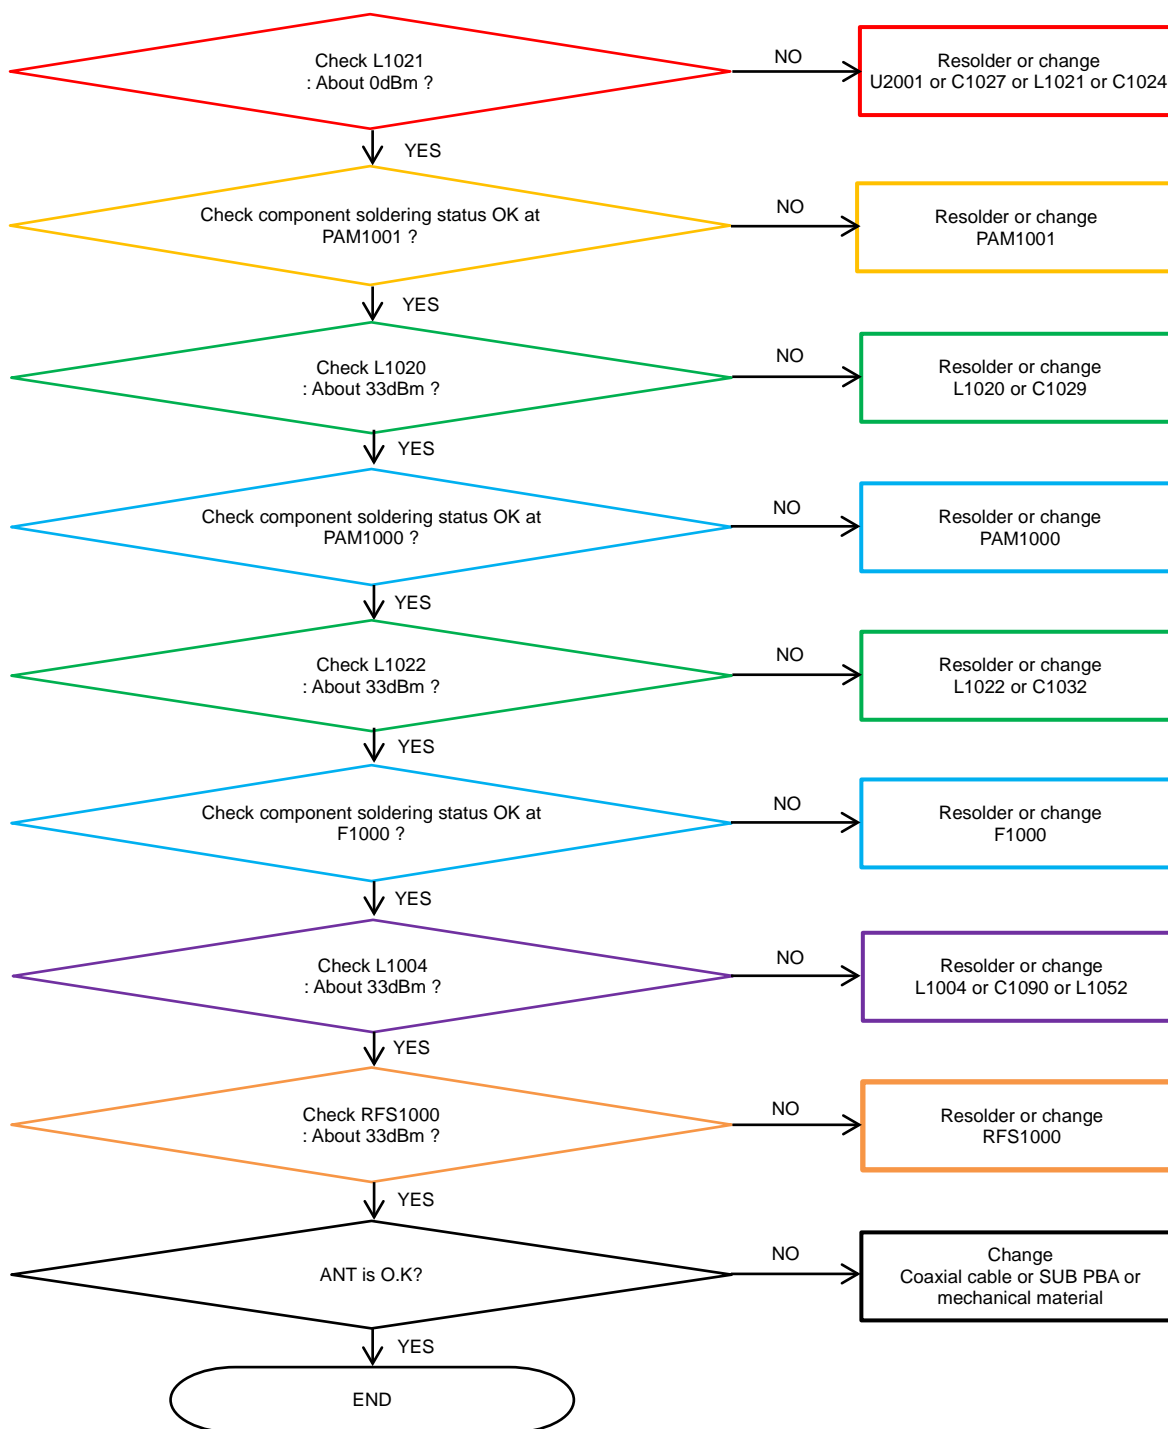


## 8. Level 3 Repair

### 8-4-43. DCS1800/PCS1900 Tx

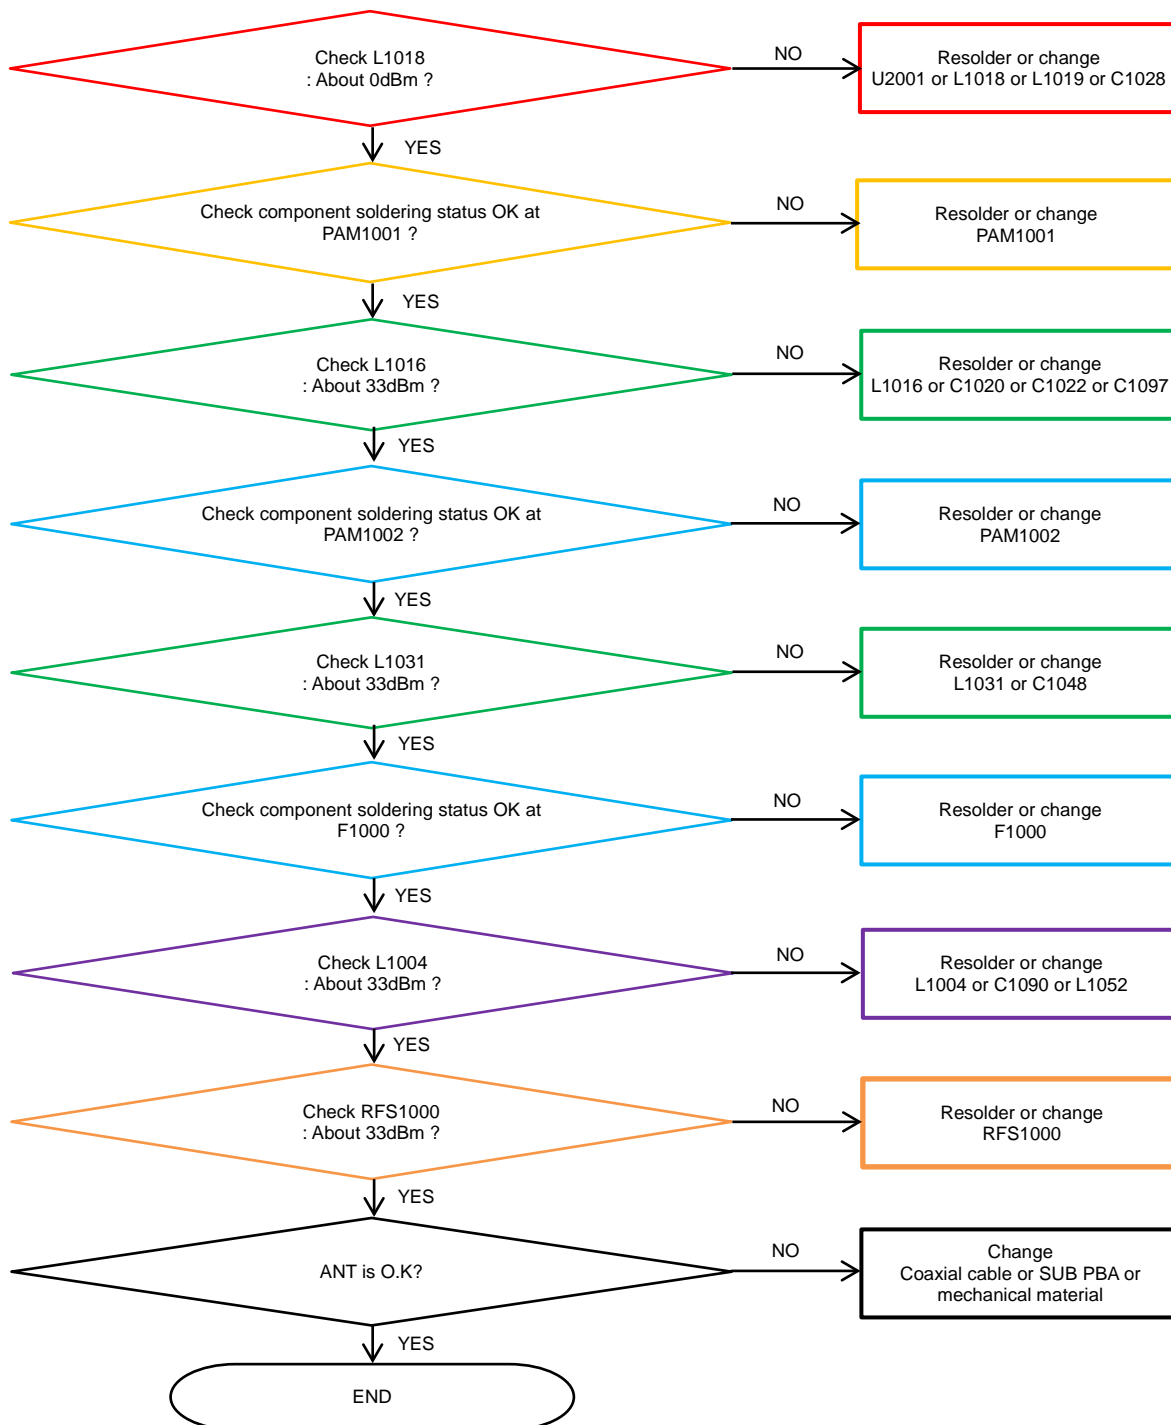

## 8. Level 3 Repair

### 8-4-44. WCDMA B1/2/4, TDSCDMA B34/39, LTE B1/2/3/4/25/34/39 Tx

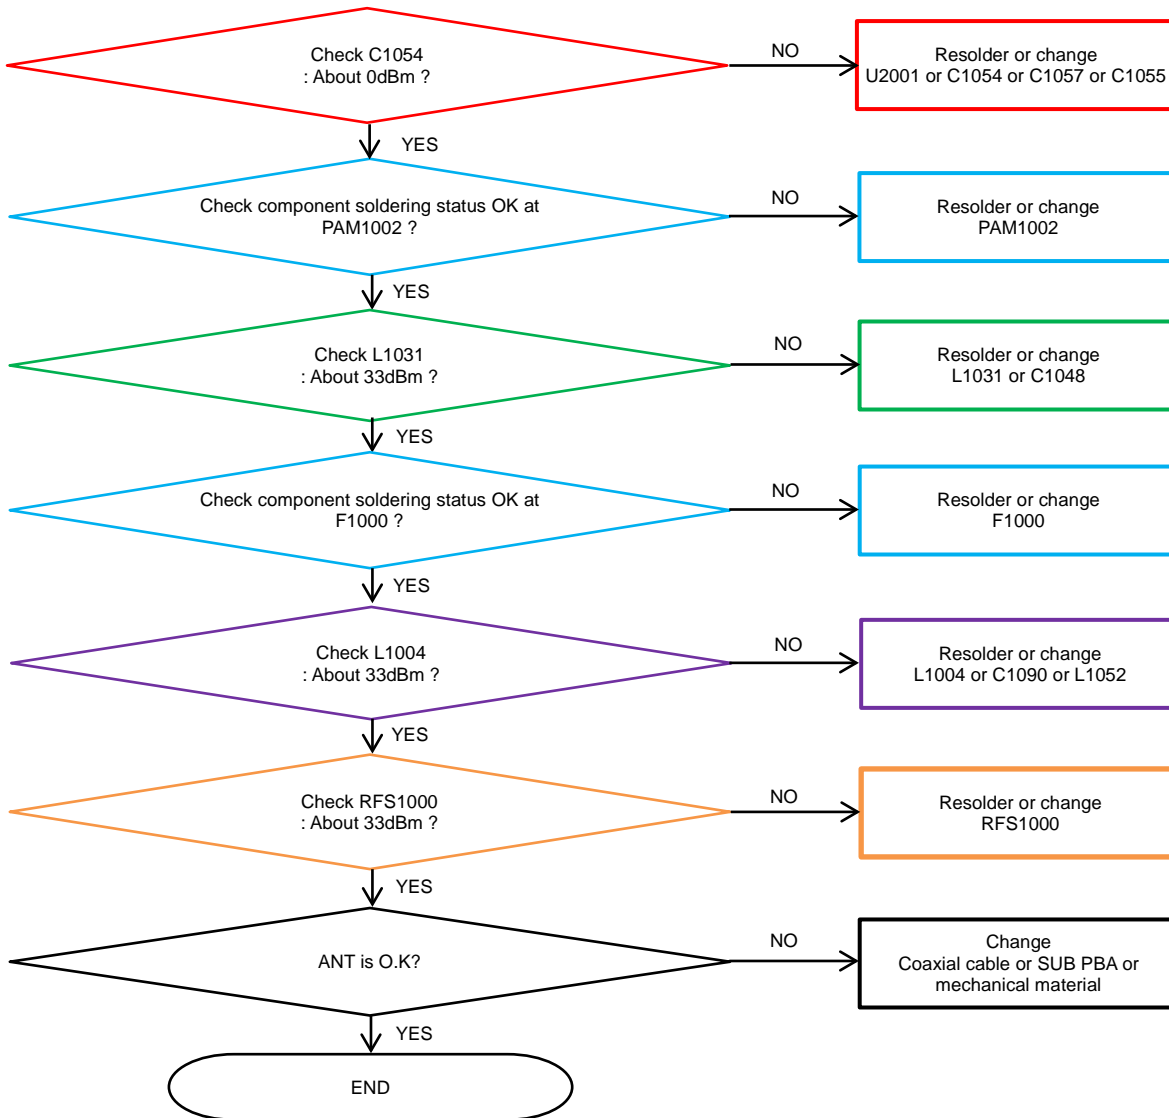


**Mobile1Tech.com**

## 8. Level 3 Repair



### 8-4-45. TDSCDMA B38/40/41, LTE B7/38/40/41 Tx

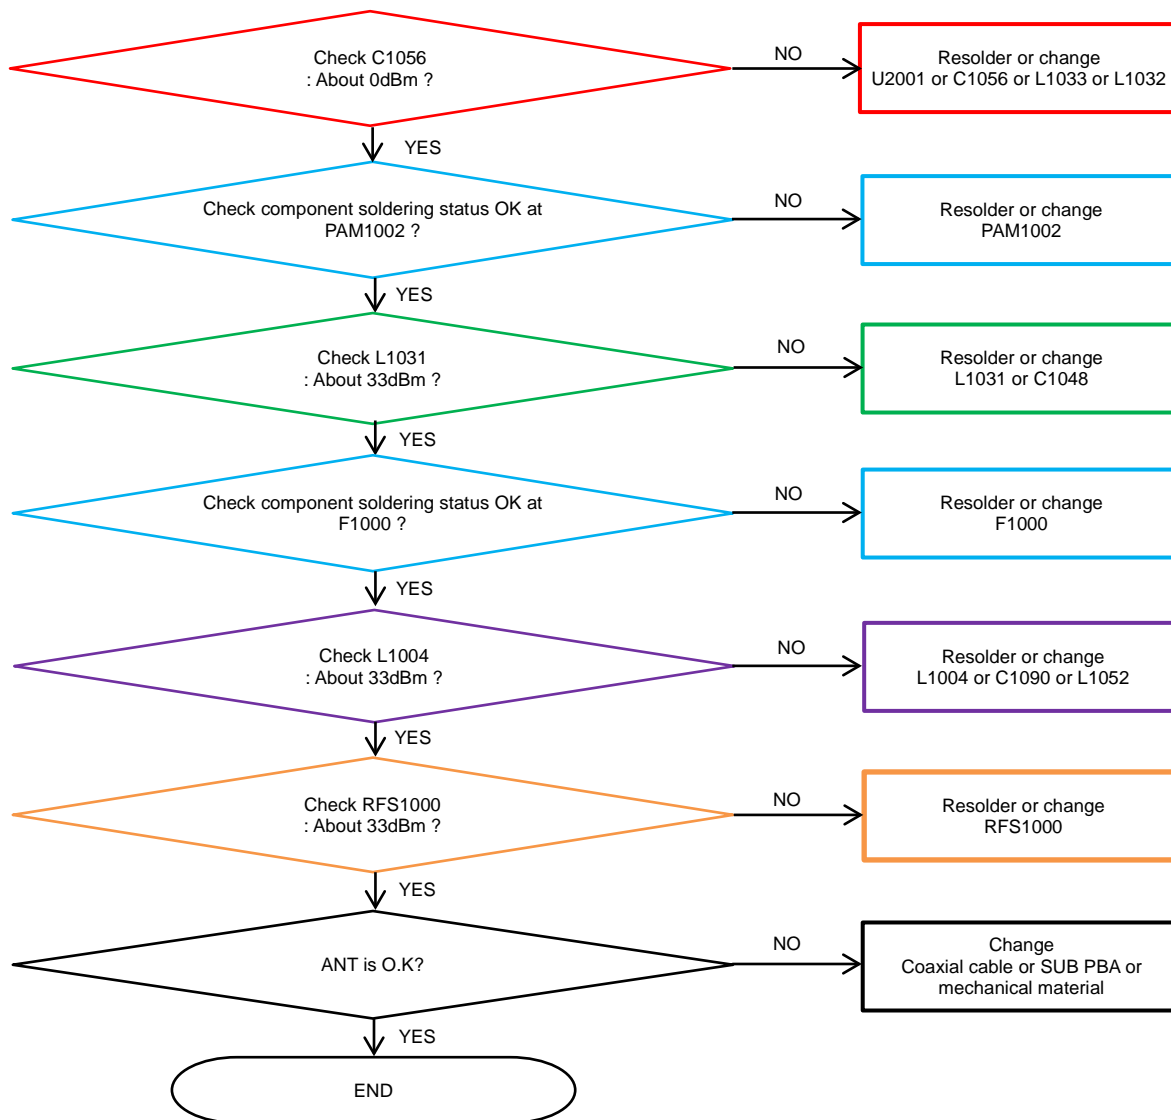


**Mobile1Tech.com**

## 8. Level 3 Repair



### 8-4-46. WCDMA B5/8, LTE B5/8/12/13/17/18/19/20/26/28 Tx

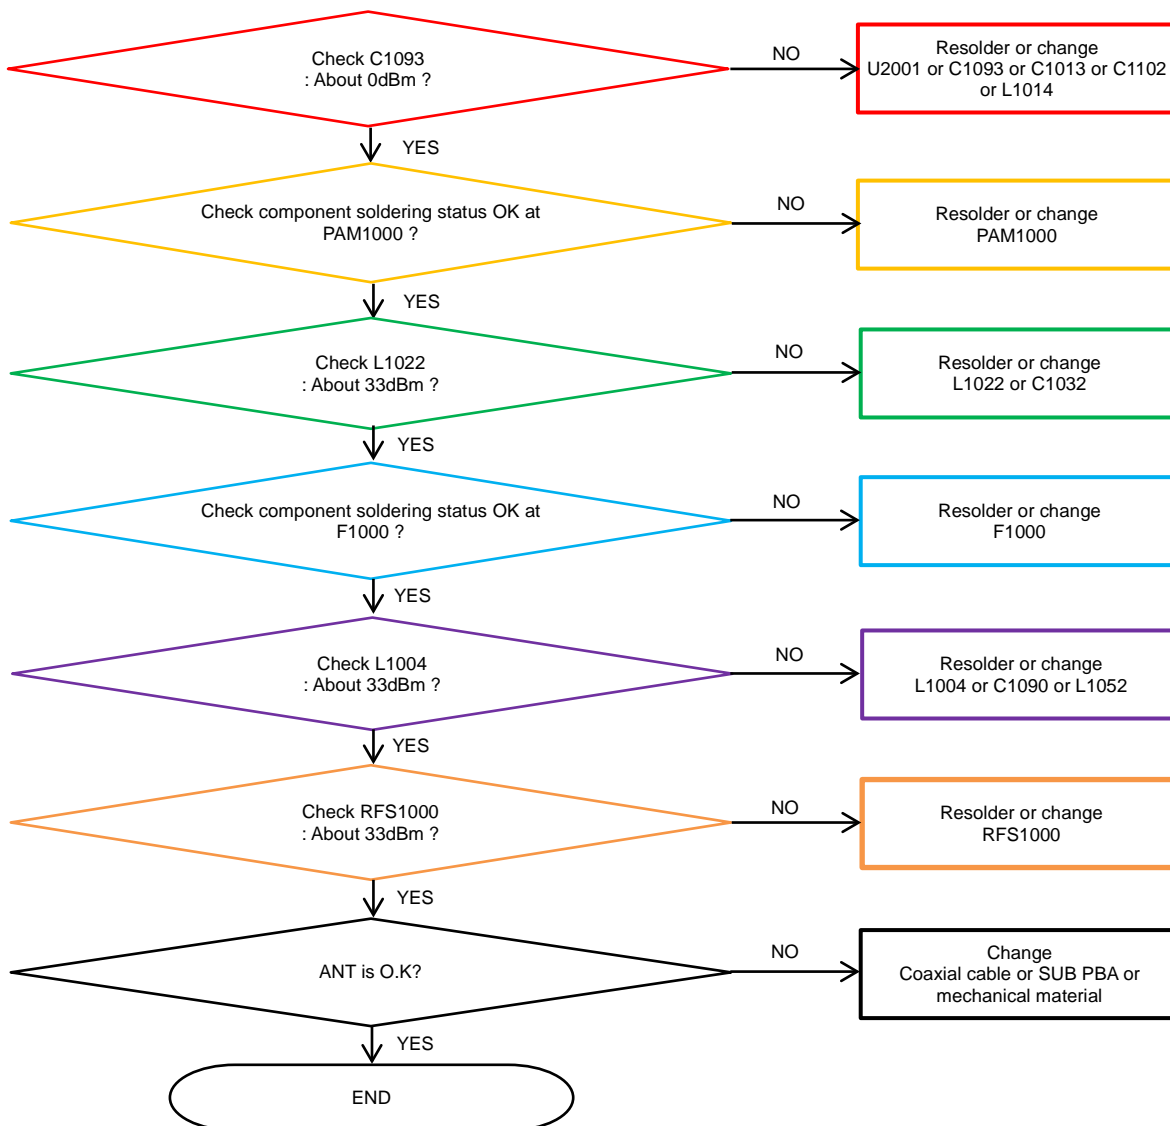

**Mobile1Tech.com**