


PLAYER SET screen

You can fast forward or rewind while playing back.
You can change the skip time in the PLAYER SET screen.


1. Open the QSO RECORDER screen.

MENU » **RECORD**


2. Select "Player Set."

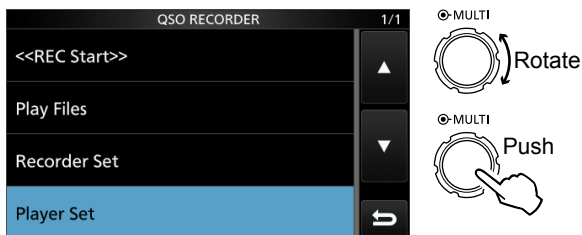

3. Select "Skip Time."

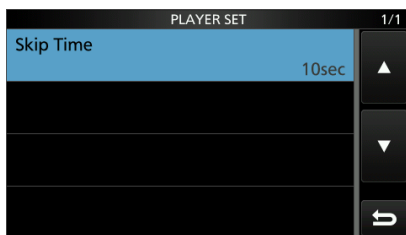

4. Select your desired option.
• Options: 3sec, 5sec, 10sec, or 30sec.

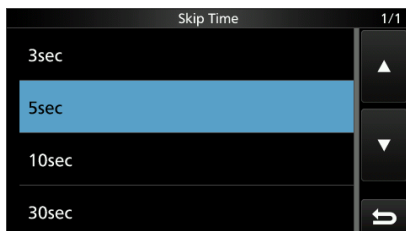

5. To close the RECORD screen, push **EXIT** several times.

TIP: How to reset to the default setting

Touching the item or its option for 1 second displays the Quick menu, and then touch "Default" to reset to the default setting.