

Entering a recording name

You can assign a name of up to 16 characters to each of the Voice memories “T1” ~ “T8.”

You can use upper case letters, lower case letters, numbers, some symbols and spaces.

[Example: Entering “Contest” in Memory T1]

1. Open the VOICE TX screen in a Voice mode.
① (Voice mode: SSB, AM or FM modes).


MENU » **VOICE**

2. Touch [REC/SET].




• Opens the REC/SET screen.

3. Touch the “REC” item.

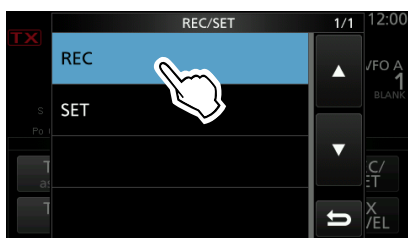



• Opens the VOICE TX RECORD screen.

4. Touch [▲] or [▼] to display the desired Voice memories “T1” ~ “T4” or “T5” ~ “T8,” and then touch the memory for 1 second.

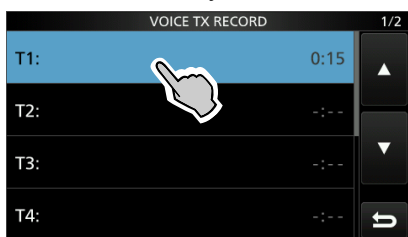


• Opens the QUICK MENU screen.

5. Touch “Edit Name.”

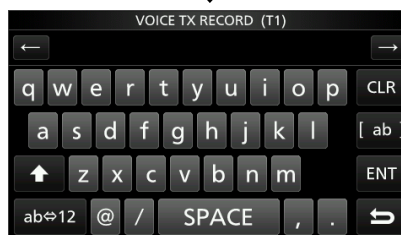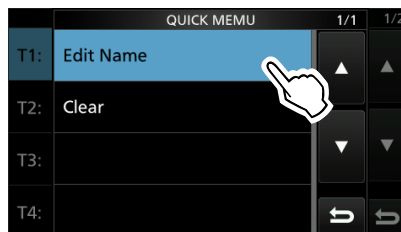

• Opens the Name editing screen.

6. Enter a name of up to 16 characters.
① See “Keyboard entering and editing” (p. 1-8) for details.
7. Touch [ENT] to save the entered name.
• The Name editing screen closes and returns to the VOICE TX RECORD screen.
• The entered name is displayed.

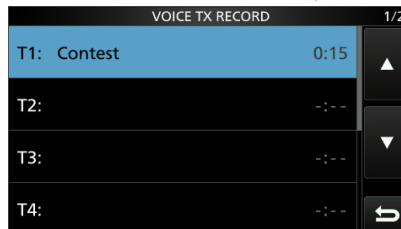

8. To close the VOICE TX RECORD screen, push **EXIT**.



① The memory name is also displayed on the VOICE TX screen.