

VOICE TX SET screen

This Set screen is used to set the Automatic Monitor function and the Transmit Repeat Interval.

1. Open the VOICE TX screen in a Voice mode.
① (Voice mode: SSB, AM or FM modes).


MENU » **VOICE**

2. Touch [REC/SET].




- Opens the REC/SET screen.

3. Touch the "SET" item.

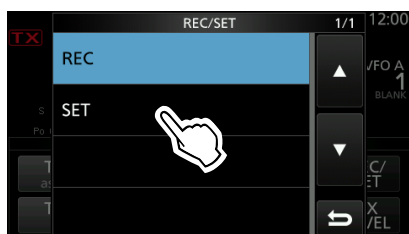


- Opens the VOICE TX SET screen.

4. Touch the desired item.
5. Select the option or set the time.

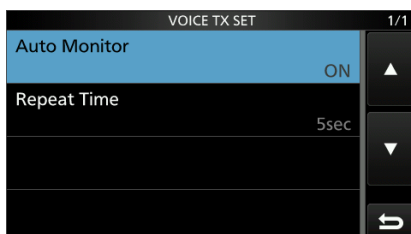

- ① See to the upper right for details of the setting items and their options.

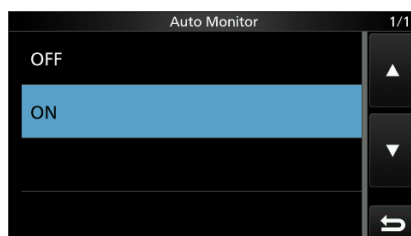

6. To close the VOICE TX screen, push **EXIT** several times.

Auto Monitor (Default: ON)

Turn the Automatic Monitor function for recorded audio contents transmission, ON or OFF.

- ON: Automatically monitors transmit audio when sending a recorded audio.
- OFF: Monitors transmit audio only when the Monitor function is ON.

Repeat Time (Default: 5sec)

Set the repeat interval to repeat the voice transmission.

The transceiver repeatedly transmits the recorded content at this interval.

- ① Repeatedly transmits the recorded content for up to 10 minutes.
 - ① After 10 minutes have passed, and all of the recorded content in the memory is transmitted, the transceiver automatically returns to receive.
- Range: Between 1 and 15 seconds

TIP: How to reset to the default setting

Touching the item or its option for 1 second displays the Quick menu, and then touch "Default" to reset to the default setting.