


Remote control (CI-V) information (Continued)

◆ Data content description

• Operating frequency


Command: 00, 03, 05, 1C 03

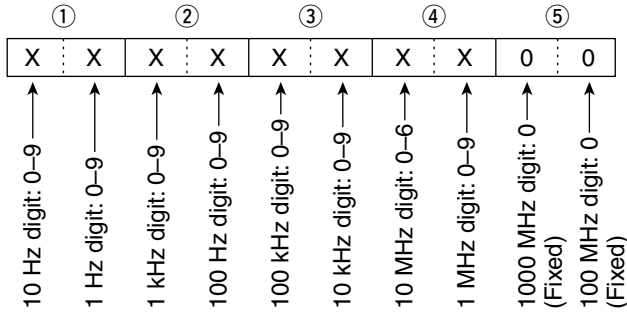

• Operating mode

Command: 01, 04, 06


Filter setting (②) can be skipped with command 01 and 06. In that case, "FIL1" is selected with command 01 and the default filter setting of the operating mode is automatically selected with command 06.



① Operating mode	② Filter setting
00: LSB	05: FM
01: USB	07: CW-R
02: AM	08: RTTY-R
03: CW	03: FIL3
04: RTTY	


• SSB transmission passband width settings

Command : 1A 050014, 050015, 050016

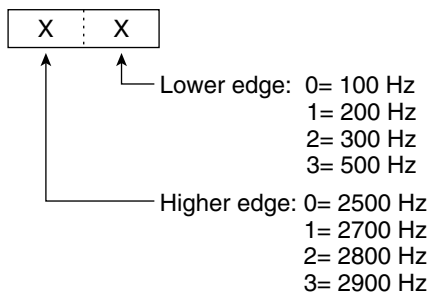

• RX HPF/LPF setting for each operating mode

Command : 1A 050001, 050004, 050007, 050010, 050011




HPF	LPF
00: Through	05~24: 500~2400 Hz
01~20: 100~2000 Hz	25: Through

\*The value of the HPF should be smaller than the LPF.


• Bandscope edge frequency settings

Command: 1A 050112~050150

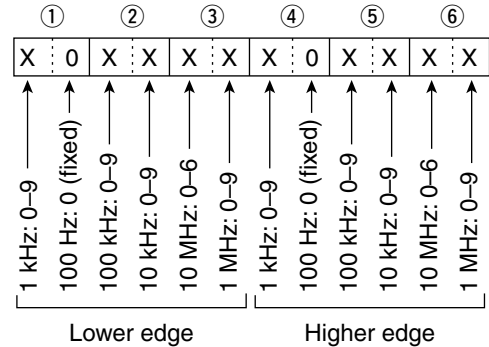

• Color settings

Command : 1A 050104, 050105, 050106, 050152, 050154, 050167, 050171, 050172

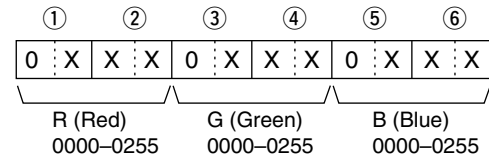

• Band edge frequency settings

Command : 02\*, 1E 01, 1E 03

