

## 4 RECEIVING AND TRANSMITTING

### Operating CW (Continued)

#### ◇ Contest number menu (001 SET)


You can set the number style, count up trigger and preset number.

##### Setting

1. Open the KEYER 001 menu in the CW mode.

**MENU** » **KEYER > EDIT/SET > 001 SET**

2. Select the setting item.  
(Example: Number Style)

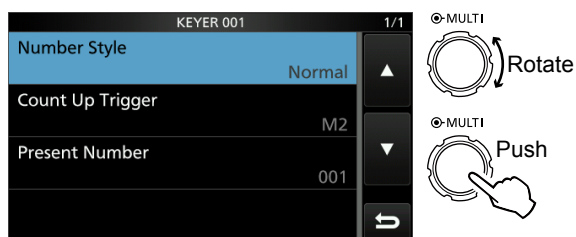

KEYER 001 menu

3. Select the desired setting option.



- Returns to the KEYER 001 menu.

4. To close the “Number Style” screen, push **EXIT** several times.

##### **TIP: How to reset to the default setting**

Touching the item or its option for 1 second displays the Quick menu, and then touch “Default” to reset to the default setting.

#### **Number Style** (Default: Normal)

Set the numbering system used for contest (serial) numbers— normal or short morse numbers.

- Select Normal, 190→ANO, 190→ANT, 90→NO or 90→NT.

#### **Count Up Trigger** (Default: Normal)

Select which of the 8 memories will contain the contest serial number exchange.

- Select between M1 and M8.

#### **Present Number** (Default: 001)

Set the current number for the Count Up Trigger.

- Set to between 001 and 9999.