

Deleting a data file


Deleting an unnecessary data file shortens the period of time needed to recognize the SD card.

NOTE: Deleted data from a card cannot be recalled. Before deleting any data, back up the card data onto your PC.

1. Open the SAVE SETTING screen.

MENU » **SET > SD Card > Save Setting**

2. Touch the desired file to be deleted for 1 second.

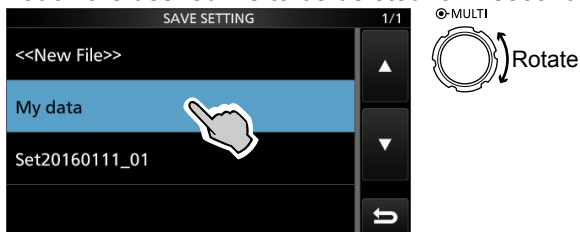


SAVE SETTING screen

3. Touch "Delete."


① To delete all files, touch "Delete All."

② To cancel deleting, push **EXIT**.

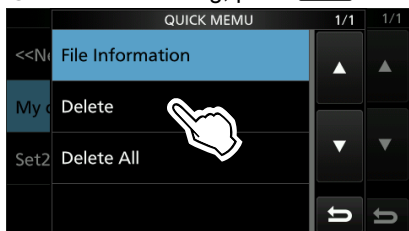

• Opens the confirmation window.

4. Touch [YES].

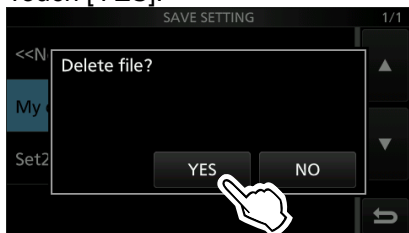

• Deletes the selected file.

① After deleting, returns to the SAVE SETTING screen.

5. To close the SET screen, push **EXIT** several times.


Displaying the information

You can display the SD card capacity and the time remaining for voice recording.


1. Open the SD CARD set screen.

MENU » **SET > SD Card**

2. Select "SD Card Info."

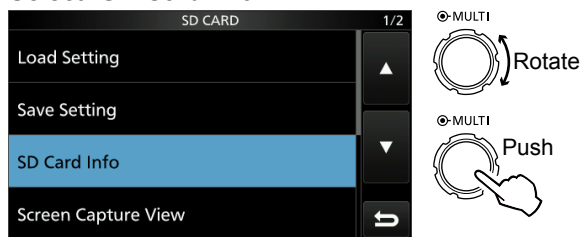

SD CARD set screen

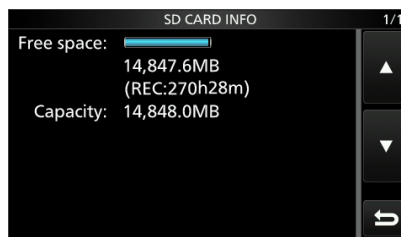

SD CARD INFO screen

• Opens the SD CARD INFO screen.

3. To close the SET screen, push **EXIT** several times.