

## 4 RECEIVING AND TRANSMITTING

### Operating RTTY (FSK) (Continued)


#### ◇ Editing an RTTY memory

You can edit the characters in the RTTY memories.  
You can save and transmit 8 RTTY memories for often-used RTTY messages.  
Each RTTY memory contains up to 70 characters.

1. Open the RTTY MEMORY screen.


**MENU** » **DECODE > TX MEM > EDIT**

2. Touch the memory for 1 second.  
(Example: RT3)

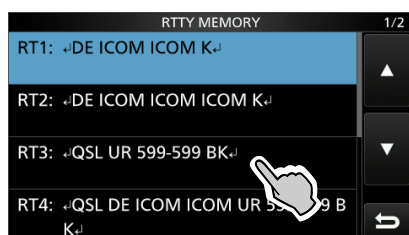


RTTY MEMORY screen

3. Touch "Edit."

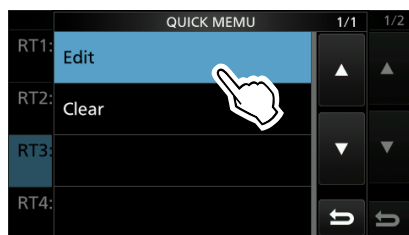


QUICK MENU screen

4. Touch [CLR] until the characters are cleared.

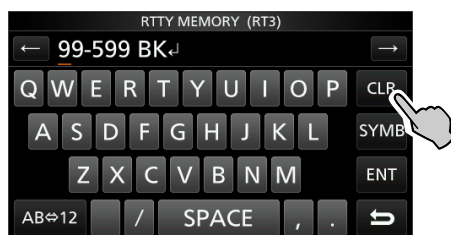

5. Enter the desired characters, and then touch [ENT] to save.

① See "Keyboard entering and editing" (p. 1-8) for details.

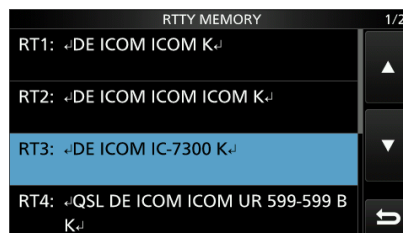

6. To close the RTTY DECODE screen, push **EXIT** several times.