

### Saving the setting data onto an SD card (Continued)

#### ◇ Saving with a different file name

You can change the file name to one of up to 15 characters. You can use upper case letters, lower case letters, numbers, some symbols and spaces.

\*You cannot enter symbols: \ / : ; \* ? " < > |


If you enter those symbols, an error message is displayed and you cannot save the file.

(Example: Changing a file name to "My data.")

1. Open the SAVE SETTING screen.

**[MENU]** » **SET > SD Card > Save Setting**

2. Select "<<New File>>".

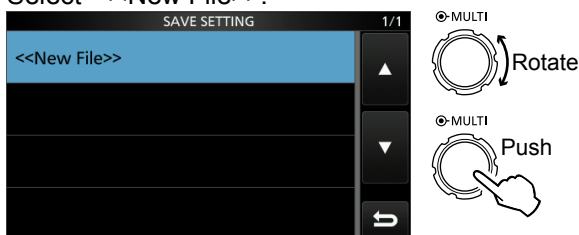


SAVE SETTING screen

3. Touch [CLR] to delete the previously entered character.  
① If you continuously touch [CLR], all the characters are deleted.




• The character to the left of the cursor is deleted.

4. Touch the keyboard to enter a desired name, and then touch [ENT].  
① See "Keyboard entering and editing" (p. 1-8) for details.

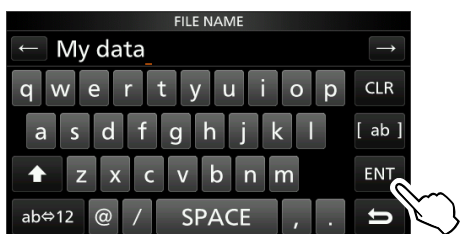

5. Touch [YES].

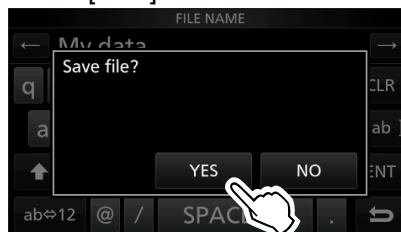

• Saves the data settings.

① While saving, the SD card icon blinks.

① After saving, automatically returns to the SD CARD set screen.

6. To close the SET screen, push **[EXIT]** several times.