

7 VOICE TX MEMORY OPERATION

Transmitting a Voice TX memory (Continue)

◇ Adjusting the output level


Adjusts the Transmit voice level.

1. Open the VOICE TX screen in a Voice mode.

① (Voice mode: SSB, AM or FM modes).

MENU » **VOICE**

2. Touch [TX LEVEL].

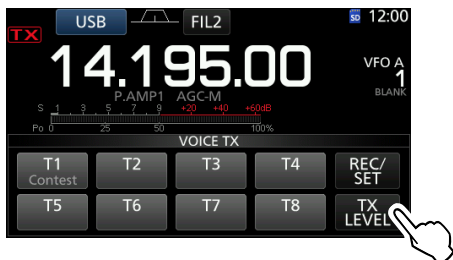

• Opens the “TX LEVEL” window.


3. Touch any desired Voice memory key other than [T4] or [T8]. ([T1], [T2], [T3], [T5], [T6] or [T7])

• The transceiver automatically transmits.

① To adjust the Transmit voice level using [T4] or [T8], reverse steps 2 and 3.

4. While transmitting, rotate **MAIN DIAL** to adjust the transmit voice level.

Touch for 1 second to
reset to the default setting

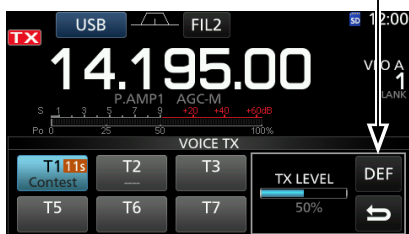

Rotate **MAIN DIAL**

① The transceiver automatically returns to receive when all of the recorded content in the memory is transmitted.

① Adjusting TX LEVEL too high may result in an over modulation and transmit signal distortion.

5. To close the VOICE TX screen, push **EXIT** several times.

TIP: How to cancel a Voice TX transmittion

- Touch any keys other than [TX LEVEL] on the VOICE TX screen
- Push **EXIT**, **V/M**, **▲**, or **▼**
- Touch the frequency's MHz digits or the Memory channel number
- Turn OFF the transceiver