


# 1 PANEL DESCRIPTION

## Touch screen (Continued)

### ◇ Multi-function menus

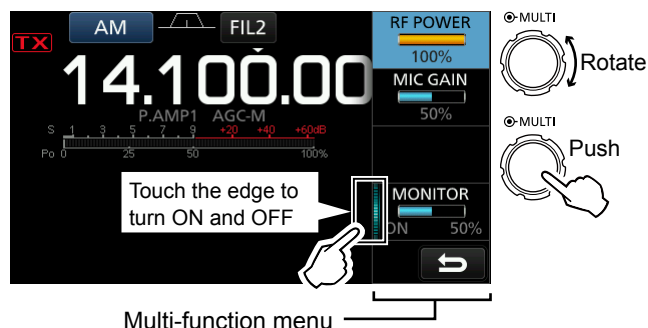


- Open the Multi-function menu by pushing **(MULTI)** (Multi-function control).
- Open different types of menus by holding down **(VOX/BK-IN)**, **(NB)**, **(NR)**, or **(NOTCH)** for 1 second.
- While the Multi-function menu is opened, touch the desired item and rotate **(MULTI)** to set the desired value.

#### Multi-function menu items

SSB	SSB-D	CW	RTTY
RF POWER	RF POWER	RF POWER	RF POWER
MIC GAIN	MIC GAIN	KEY SPEED	TPF*
COMP*		CW PITCH	
MONITOR*	MONITOR*		MONITOR*
FM	AM	NB	NR
RF POWER	RF POWER	LEVEL	LEVEL
MIC GAIN	MIC GAIN	DEPTH	
		WIDTH	
MONITOR*	MONITOR*		
NOTCH	VOX	BK-IN	
POSITION	GAIN	DELAY	
WIDTH*	ANTI VOX		
	DELAY		
	VOICE DELAY SHORT*		


\*Touch the edge to turn the function ON or OFF, or adjust.

### ◇ MENU screen

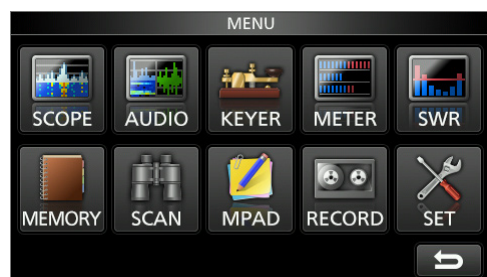

- Open the MENU screen by pushing **(MENU)**.

### ◇ FUNCTION screen

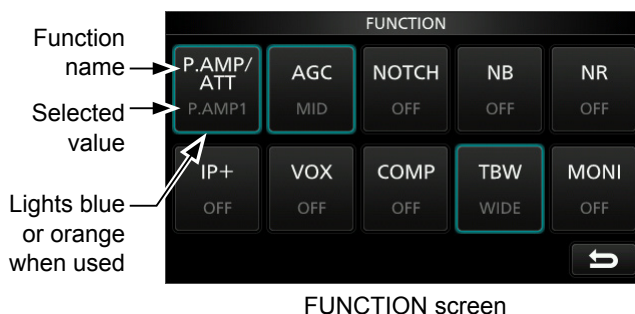

- Open the FUNCTION screen by pushing **(FUNCTION)**.  
① To close the FUNCTION screen, push **(EXIT)**.


#### FUNCTION screen list

P.AMP/ATT	AGC* <sup>2</sup>	NOTCH* <sup>2</sup>	NB* <sup>2</sup>
OFF	FAST	OFF	OFF
P.AMP1	MID	AN	ON
P.AMP2	SLOW	MN	
ATT* <sup>1</sup>			
NR* <sup>2</sup>	IP+	VOX* <sup>2</sup>	BKIN* <sup>2</sup>
OFF	OFF	OFF	OFF
ON	ON	ON	BKIN
			F-BKIN
COMP* <sup>2</sup>	TONE* <sup>2</sup>	TBW	1/4
OFF	OFF	WIDE	OFF
ON	TONE	MID	ON
	TSQL	NAR	
MONI* <sup>2</sup>			
OFF			
ON			

\*1 Touch for 1 second to select the function.

\*2 Touch for 1 second to open its function menu.

### ◇ QUICK MENU

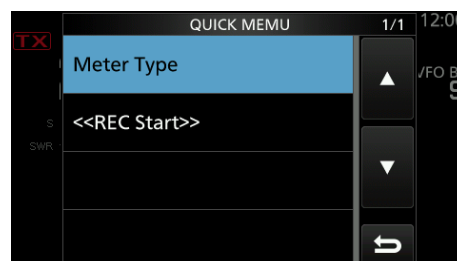

- Open the QUICK MENU by pushing **(QUICK)**.