

90.0mm

130.0mm

130.0mm

JYX

MODEL NO.: JYX-S55

User Manual

POTABLE KARAOKE MACHINE



Please read the manual carefully before using.

2021-03-24



深圳市佳誉祥音响电子有限公司

绘 图:		品 名:	JYX-S55说明书
电子确认:		版 本:	A/0版
业务确认:		规格材质:	105g铜版 130x90mm 12P
核 准:		物料编号:	

ATTENTIONS.....	1
DIRECTIONS FOR USE.....	2-3
OPERATION GUIDES.....	4-5
REMOTE CONTROLLER.....	6
SPECIFICATION	7
PACKING LISTING.....	7
FQA.....	8

Dear users:

Thanks for your purchasing. Please read the directions carefully before using and follow the correct instructions.

Matters needing attention:

To ensure safety, please read carefully and follow the following safety instructions:

1. The equipment is up to The China Compulsory Certification.
2. The equipment should be used in a dry environment.
3. Do not place a fire source near the equipment.
4. Do not use near water source to avoid corrosion of products and accessories.
5. Do not open or disassemble or repair the battery module by yourself. There will be a risk of explosion if the battery is not replaced properly. Do not put the battery into water, fire or any overheated environment.
6. When taking an airplane, please follow the relevant regulations and regulations of the airline company to turn off this product before the airplane takes off to avoid any hidden danger.
7. The charging cable cannot be squeezed, pulled, bent, knotted, or suspended from heavy objects in order to avoid damage to the insulation layer of it and cause electric shock.

Directions For Use

Take the machine out of the package and install the shoulder strap on the both side of the machine. Tie the machine around your waist or over your shoulder through a strap, then adjust the strap to a suitable position, you can carry your machine out easily.

Bluetooth Connection

1. Turn on bluetooth on your mobile device.
2. Press "Mode" key and switch the speaker to BT mode.
3. Select "JYX-S55" from available devices. (If JYX-S55 is unavailable, please switch back to Bluetooth mode and try again)

AUX- IN

Plug the 3.5mm audio cable into the AUX IN jack, the speaker will play the audio from input device automatically.

USB and TF Input

When insert USB or TF card into speaker, the speaker will play the audio from USB/TF card automatically.

FM Radio

1. Pull out the antenna on the top of speaker.
2. Press "Mode" key to switch to radio station.
3. Long press "Play/Pause" key to search and save more available stations automatically.
4. The station searching completed when it no longer switch automatically.
5. Press "Next" or "Previous" to select your own station.

Directions For Use

REC

1. Plug in a TF card or flash card
2. Long press "REC" to start recording, short press to end recording.
3. Short press "REC" to play the recording audio.


TWS Function

To use this feature, two JYX-S55 systems are required. By connecting two stereo systems, you can enjoy the True Wireless Stereo via bluetooth.

Turn on the two JYX-S55 and turn them both into bluetooth mode. Two machines will flash "BLUE" on screen. Then short press the "TWS" button of either of the two machines (Only need to press one button), the TWS function will be activated by then (Screens both stop flash). Long press TWS button to inactivate TWS function.


If the text description is difficult to understand, please contact customer service team to send a video tutorial: reward@szjyx.com.cn

Operation Guide

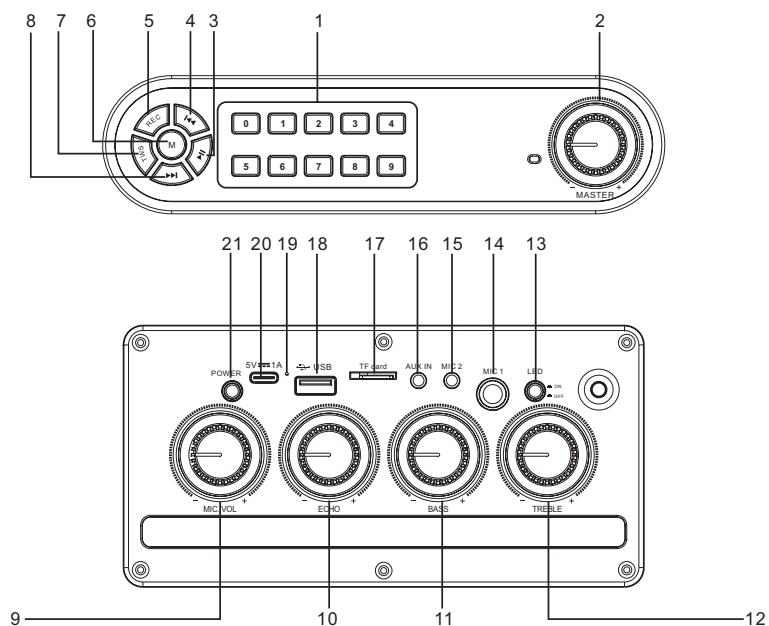

1. Number Key: Press to choose the song(Only work for USB/TF/FM mode)
2. Master: Main volume control knob
3. Play/Pause: Short press to play/pause; In radio mode, long press for automatic radio station search; In bluetooth mode, long press for TWS(only valid for the same model)
4. Previous: Short press to switch to the last program; long press to fast backward.
5. REC: Long press to record audio, during this process, short press to stop recording. When there is a recording file in the storage device, short press is to play the recording file. (The recording function is only available when a storage device is plugged in)
6. Mode: short press to switch between bluetooth, flash card, TF card and FM radio. When bluetooth has already connected, long press to eliminate the original voice.
7. TWS: Short press for TWS connection, long press for disconnection (Under Bluetooth mode)
8. Next: Short press to switch to the next program; long press to fast forward.
9. MIC VOL: Adjust microphone volume
10. Reverb: Adjust reverb.
11. Bass: Adjust bass sound.
12. Treble: Adjust treble sound
13. LED: Press to turn on/off the LED light.
14. Dynamic Microphone jack(6.35mm)
15. Condenser Microphone jack(3.55mm)
16. AUX IN Jack
17. TF Card Port
18. USB Port
19. Sound Receiving Hole
20. 5V Charging Port
21. Power

Remote controller

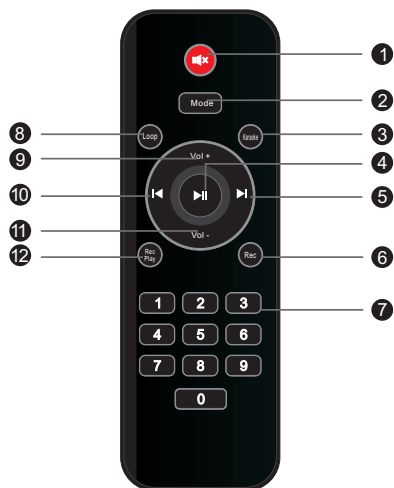

- 1.Silent
- 2.Mode:Press to switch the system between USB,TF card,FM Radio,AUX IN and Bluetooth mode.
- 3.Karaoke:Press to eliminate the original voice.Press again to restore the original voice.
- 4.Play/Pause: Short press to play/pause(USB/TF card mode); Short press to silent ON,long press is for searching radio stations(FM radio mode).
- 5.Next: Short press to switch to the next program; long press to fast forward.
- 6.REC:short press for recording;Short press to stop and play the recording during the record process.(The USB flash dish or TF card needed during recording)
- 7.Number Key: Press to choose the song(Only work for USB/TF/FM mode)
- 8.Loop:Press to switch between single cycle and all cycle
- 9.Vol+
- 10.PREV.
- 11.Vol-
- 12.REC Play:Press to play recording file.

Specification:

Model NO: JYX-S55
Bluetooth: 5.0
Output Power: 10W
Input Voltage: 5V \approx 1A
Speaker: 5.25 inch bass + 2 inch treble

Packing list:

Speaker.....	1PC
Microphone.....	2PC
Strap.....	1PC
USB cable.....	1PC
Controller.....	1PC
Manual.....	1PC
AUX cable.....	1PC

FAQ

Q:The system can not start up.

A:Charging the built-in battery;
Check if the adapter is connected securely.

Q:The system provides no sound.

A:Check if the system is power on.
Adjust the volume.

Q:The Bluetooth connection is not available.

A:Move your device closer to the system.
Check to see if the Bluetooth is engaged.

Q:Unable to connect two system with TWS feature.

A:Make sure the two systems are within one meter of each other.

Please feel free to contact JYX customer service team if you have any question of the speaker.
After-sales service email address: reward@szjyx.com.cn. We will reply you within 24 hours.
Your satisfaction is our ultimate pursuit!