



# JYX-S55 Karaoke Machine User Manual: Comprehensive Guide

[Home](#) » [JYX](#) » **JYX-S55 Karaoke Machine User Manual: Comprehensive Guide**

The JYX-S55 Portable Karaoke Machine User Manual is a comprehensive guide that provides detailed instructions on how to operate the karaoke machine. This manual is essential for any user who has recently purchased the JYX-S55 Portable Karaoke Machine. The manual provides detailed information on how to use the remote control, speaker, and microphone. Additionally, the manual includes instructions on how to charge the device and how to reduce microphone noise. The manual also includes a FAQ section that answers common questions about the product, such as how to charge the device and where to get karaoke versions of songs. Overall, this user manual is a valuable resource for anyone who wants to get the most out of their JYX-S55 Portable Karaoke Machine.

## Contents [ [hide](#) ]

- [1 JYX-S55 Portable Karaoke Machine](#)
- [2 Instructions](#)
- [3 Operation Guide-Speaker Operation Guide-Remote control](#)
- [4 Operation Guide-Remote control](#)
- [5 Specifications](#)
- [6 FAQs](#)
- [7 VIDEO](#)
- [8 Documents / Resources](#)
- [9 Related Posts](#)




**JYX-S55 Portable Karaoke Machine**




## Instructions

Thanks for your purchase. Please read the directions carefully before using and follow the correct instructions

## Operation Guide

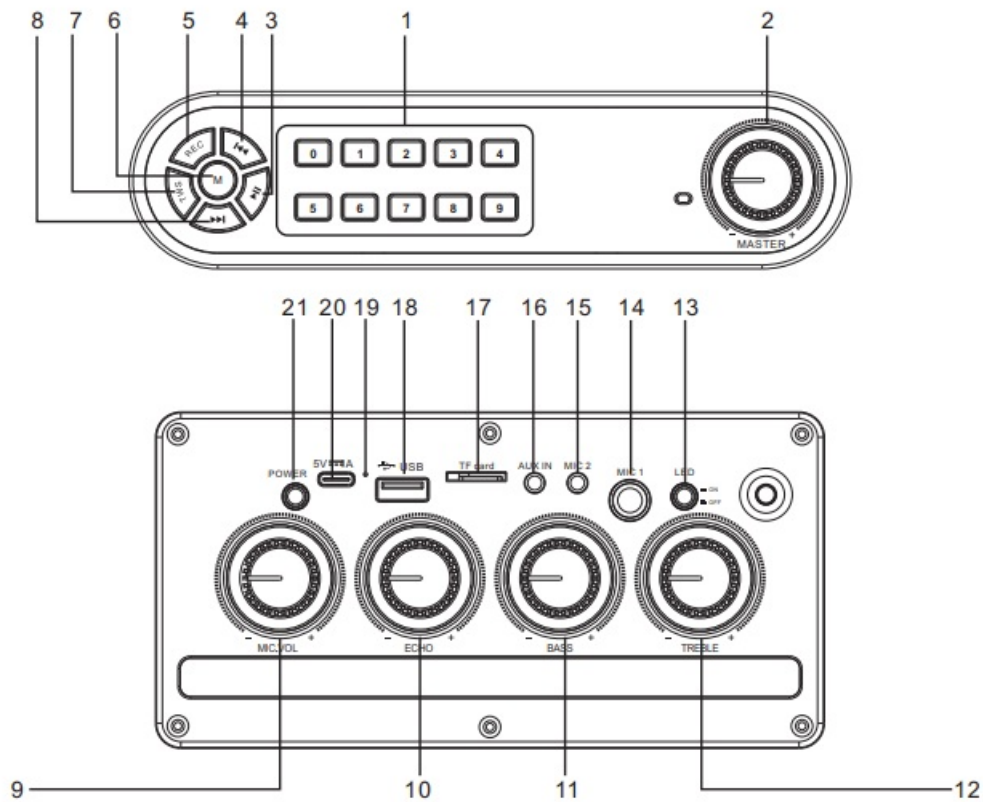

## Operation Guide-Remote control

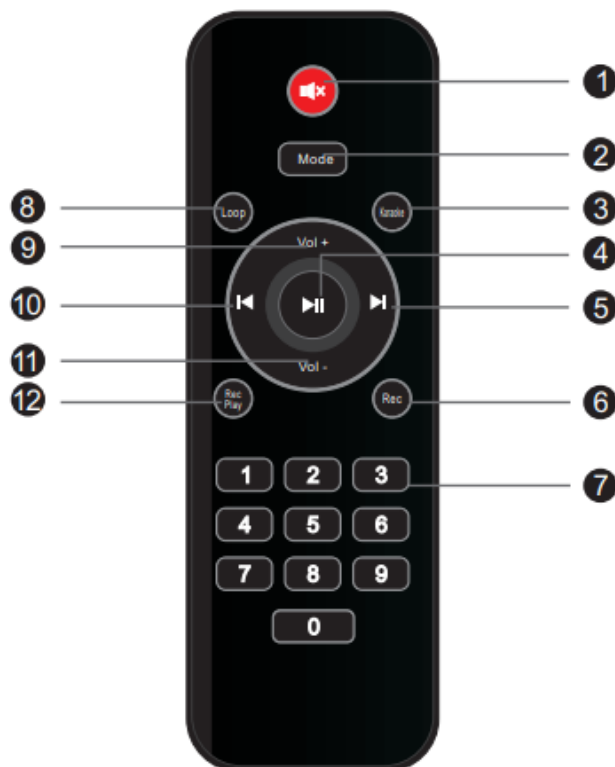

## Operation Guide-Speaker Operation Guide-Remote control

1. Number Key: Press to choose the song(Only work for USB/TF/FM mode)
2. Master: Main volume control knob
3. Play/Pause: Short press to play/pause; In radio mode,long press for automatic radio station search; In bluetooth mode,long press for TWS(only valid for the same model)

4. Previous: Short press to switch to the last program; long press to fast backward.
5. REC: Long press to record audio,during this process, short press to stop recording.When there is a recording file in the storage device,short press is to play the recording file.(The recording function is only available when a storage device is plugged in)
6. Mode: short press to switch between bluetooth,flash card,TF card and FM radio.When bluetooth has already connected,long press to eliminate the original voice.
7. TWS: Short press for TWS connection,long press for disconnection(Under Bluetooth mode)
8. Next: Short press to switch to the next program; long press to fast forward.
9. MIC VOL: Adjust microphone volume
10. Reverb: Adjust reverb.
11. Bass: Adjust bass sound.
12. Treble: Adjust treble sound
13. LED: Press to turn on/off the LED light.
14. Dynamic Microphone jack(6.35mm)
15. Condenser Microphone jack(3.55mm)
16. AUX IN Jack
17. TF Card Port
18. USB Port
19. Sound Receiving Hole
20. 5V Charging Port
21. Power ON/OFF

## **Operation Guide-Remote control**

1. Silent
2. Mode:Press to switch the system between USB,TF card,FM Radio,AUX IN and Bluetooth mode.
3. Karaoke:Press to eliminate the original voice.Press again to restore the original voice.
4. Play/Pause: Short press to play/pause(USB/TF card mode); Short press to silent ON,long press is for searching radio stations(FM radio mode).
5. Next: Short press to switch to the next program; long press to fast forward.
6. REC:short press for recording;Short press to stop and play the recording during the record process.(The USB flash dish or TF card needed during recording)
7. Number Key: Press to choose the song(Only work for USB/TF/FM mode)
8. Loop:Press to switch between single cycle and all cycle
9. Vol+
10. PREV.
11. Vol12.REC Play:Press to play recording file

## **USB and TF Input**

When insert USB or TF card into speaker,the speaker will play the audio from USB/TF card automatically.

## **REC**

1.Plug in a TF card or flash card. 2.Long press "REC to start recording,short press to end recording. 3.Short press "REC to play the recording audio.

## TWS Function

Two speakers of the same model are required for TWS mode. Turn on the two karaoke machines and the (Blue) will start flashing. Press the TWS button on one of the machines, then a sound would be heard to indicate the successful connection. (the Blue on the screen of this one will stop flashing while the other one will continues to flash). Then connect the flashing speaker to a Bluetooth device and the music should be played normally.

## The way to reduce the noise of the microphone:

Turn off the "ECHO", "BASS" and "TREBLE" button, then turn on the microphone, Keep a distance of 2 meters from the speaker. Do not let the microphone face the speaker.

## Specifications

Product Specifications	Description
Model	JYX-S55 Portable Karaoke Machine
Remote Control	Allows users to control the device from a distance
Speaker	Produces sound output for karaoke and music playback
Microphone	Allows users to sing along with the music and record audio
Charging	Can be charged using a USB type charger
Noise Reduction	Users can reduce microphone noise by turning off the "ECHO", "BASS" and "TREBLE" buttons and keeping the microphone 2 meters away from the speaker
FAQs	Answers common questions about the product, including charging, karaoke versions of songs, microphone connectivity, and more
Video	A video is available to demonstrate product usage

## FAQS

### Is this can be plug 220? (I'm planning to bring in the Philippine )

It plugs into 110v with a USB type charger similar to an android phone charger. You can charge it up for about 3 hours of play time without it being plugged in. You may be able to buy an adapter that converts to European type plug. Mine did not come with an actual wall plug (block) just a cord so I use my cell phone charger.

### How do I charge it ?

A charger comes with it..you just need a charge plug

### Where do I get the karaoke version of the songs for the machine?

Later this month, there will be a new feature on Apple Music for Karaoke which sounds awesome. Can't wait to check it out. You can Google it!

### One of the microphones stopped connecting to the speaker. It turns on but doesn't connect. It is on 638.80 and ch 168. What can be done to fix it?

Please contact us via amazon to ask to replacement, if confirm the mic can't connect and can't work. We provided replacement, pls contact us asap

### Can you use this with just the microphone, no music; for a conference?

Yes, you can. The machine statics alot but you have to push it far away from you.

### Can we use it just for music and not karaoke?

The machine plays music in mp3 format. You can record music in mp3 format onto USB flash memory stick or MicroSD card also called TF card and play it with the machine. It's just like a music player. And you DON'T have to sing with the included wireless microphones.

### What is change of voice, does it mean a key control on the voice when use as karaoke?

It alters the voice sound.

### Can I have specific details on how to charge? Where do I plug it in?

Look at the manual comes with the machine. If your model is JYX-55S, find the number 20 in its chart showing "5V charging Port". Or find 21 in its chart showing "Type C Charging Port 5V 2A" for model JYX-69BT.

### does it record?

the recording function needs via the mic and insert the TF card/Micro card which under 32G into the speaker. Then you can start to record.

### Support dvd?

No it doesn't come with a support DVD. We've been very happy with ours. Im sure there may be online assistance if you search.


### How far out will the microphone reach??

It says 30 feet but I have not tried itnryat far yet. I did try it once when I was about 20 feet away and it worked.

### VIDEO



<Documents/Resources/content/uploads/2022/08/Untitled-4.mp4>

	<b><a href="#">JYX JYX-S55 Portable Karaoke Machine</a></b> [pdf] User Manual JYX-S55, JYXS55, 2A75LJYX-S55, 2A75LJYXS55, JYX-S55 Portable Karaoke Machine, JYX-S55, Portable Karaoke Machine
---	--