



NetApp Trident Overview

NetApp Solutions

NetApp
August 03, 2021

This PDF was generated from https://docs.netapp.com/us-en/netapp-solutions/containers/rh-os-n_trident_ontap_nfs.html on August 03, 2021. Always check docs.netapp.com for the latest.

Table of Contents

- NetApp Trident Overview: Red Hat OpenShift with NetApp. 1
 - Download NetApp Trident 1
 - Install the Trident Operator with Helm 3
 - Manually install the Trident Operator 5
 - Prepare worker nodes for storage 8
 - Create storage-system backends 12
 - NetApp ONTAP NFS Configuration 12
 - NetApp ONTAP iSCSI Configuration 14
 - NetApp Element iSCSI configuration 17


NetApp Trident Overview: Red Hat OpenShift with NetApp

NetApp Trident is an open-source and fully-supported storage orchestrator for containers and Kubernetes distributions, including Red Hat OpenShift.

Trident works with the entire NetApp storage portfolio, including the NetApp ONTAP and Element storage systems, and it also supports NFS and iSCSI connections.

Trident accelerates the DevOps workflow by allowing end users to provision and manage storage from their NetApp storage systems without requiring intervention from a storage administrator.

An administrator can configure a number of storage backends based on project needs and storage system models that enable advanced storage features, including compression, specific disk types, or QoS levels that guarantee a certain level of performance. After they are defined, these backends can be used by developers in their projects to create persistent volume claims (PVCs) and to attach persistent storage to their containers on demand.

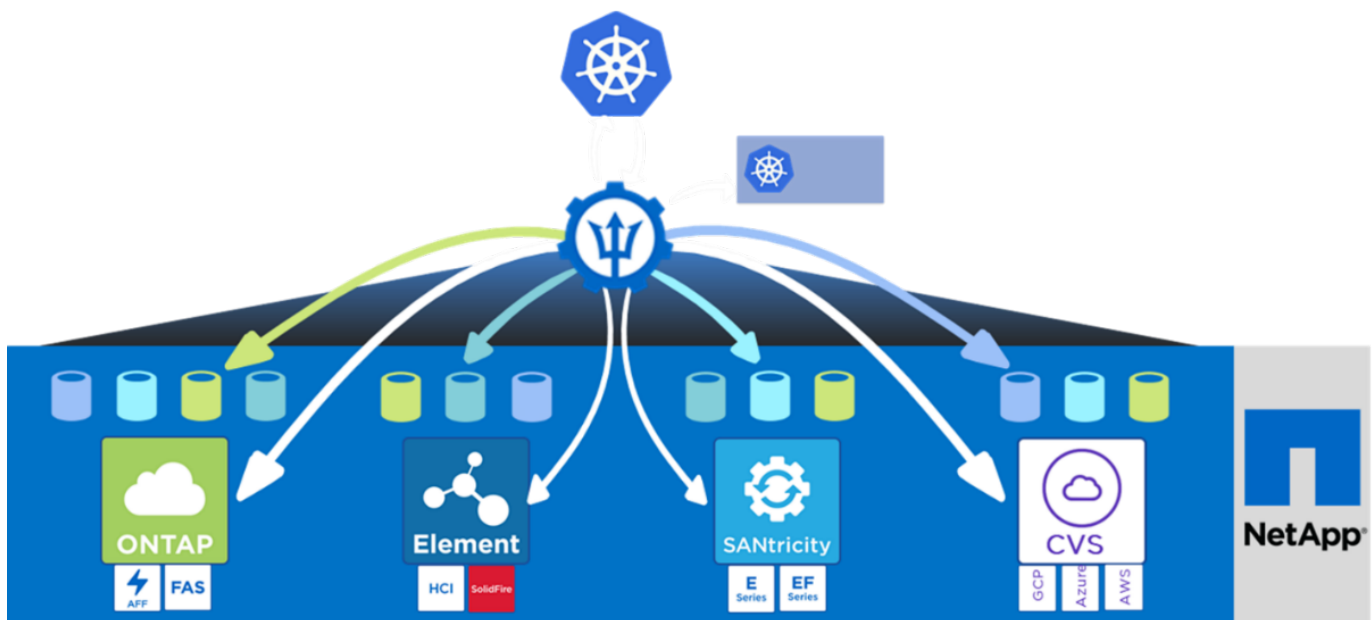

NetApp Trident has a rapid development cycle, and, just like Kubernetes, is released four times per year.

The latest version of NetApp Trident, 21.04, was released in April 2021. A support matrix for what version of Trident has been tested with which Kubernetes distribution can be found [here](#).

Starting with the 20.04 release, Trident setup is performed by the Trident operator. The operator makes large scale deployments easier and provides additional support including self healing for pods that are deployed as a part of the Trident install.

With the 21.01 release, a Helm chart was made available to ease the installation of the Trident Operator.

Download NetApp Trident

To install Trident on the deployed user cluster and provision a persistent volume, complete the following steps:

1. Download the installation archive to the admin workstation and extract the contents. The current version of Trident is 21.01, which can be downloaded [here](#).

```
[netapp-user@rhel7 ~]$ wget
https://github.com/NetApp/trident/releases/download/v21.04.0/trident-
installer-21.04.0.tar.gz
--2021-05-06 15:17:30--
https://github.com/NetApp/trident/releases/download/v21.04.0/trident-
installer-21.04.0.tar.gz
Resolving github.com (github.com)... 140.82.114.3
Connecting to github.com (github.com)|140.82.114.3|:443... connected.
HTTP request sent, awaiting response... 302 Found
Location: https://github-
releases.githubusercontent.com/77179634/a4fa9f00-a9f2-11eb-9053-
98e8e573d4ae?X-Amz-Algorithm=AWS4-HMAC-SHA256&X-Amz-
Credential=AKIAIWNJYAX4CSVEH53A%2F20210506%2Fus-east-
1%2Fs3%2Faws4_request&X-Amz-Date=20210506T191643Z&X-Amz-Expires=300&X-
Amz-
Signature=8a49a2a1e08c147d1ddd8149ce45a5714f9853fee19bb1c507989b9543eb36
30&X-Amz-
SignedHeaders=host&actor_id=0&key_id=0&repo_id=77179634&response-
content-disposition=attachment%3B%20filename%3Dtrident-installer-
21.04.0.tar.gz&response-content-type=application%2Foctet-stream
[following]
--2021-05-06 15:17:30-- https://github-
releases.githubusercontent.com/77179634/a4fa9f00-a9f2-11eb-9053-
98e8e573d4ae?X-Amz-Algorithm=AWS4-HMAC-SHA256&X-Amz-
Credential=AKIAIWNJYAX4CSVEH53A%2F20210506%2Fus-east-
1%2Fs3%2Faws4_request&X-Amz-Date=20210506T191643Z&X-Amz-Expires=300&X-
Amz-
Signature=8a49a2a1e08c147d1ddd8149ce45a5714f9853fee19bb1c507989b9543eb36
30&X-Amz-
SignedHeaders=host&actor_id=0&key_id=0&repo_id=77179634&response-
content-disposition=attachment%3B%20filename%3Dtrident-installer-
21.04.0.tar.gz&response-content-type=application%2Foctet-stream
Resolving github-releases.githubusercontent.com (github-
releases.githubusercontent.com)... 185.199.108.154, 185.199.109.154,
185.199.110.154, ...
Connecting to github-releases.githubusercontent.com (github-
releases.githubusercontent.com)|185.199.108.154|:443... connected.
HTTP request sent, awaiting response... 200 OK
Length: 38349341 (37M) [application/octet-stream]
Saving to: 'trident-installer-21.04.0.tar.gz'

100%[=====
=====>] 38,349,341 88.5MB/s
```

```
in 0.4s
```

```
2021-05-06 15:17:30 (88.5 MB/s) - 'trident-installer-21.04.0.tar.gz'  
saved [38349341/38349341]
```

2. Extract the Trident install from the downloaded bundle.

```
[netapp-user@rhel7 ~]$ tar -xzf trident-installer-21.01.0.tar.gz  
[netapp-user@rhel7 ~]$ cd trident-installer/  
[netapp-user@rhel7 trident-installer]$
```

Install the Trident Operator with Helm

1. First set the location of the user cluster's `kubeconfig` file as an environment variable so that you don't have to reference it, because Trident has no option to pass this file.

```
[netapp-user@rhel7 trident-installer]$ export KUBECONFIG=~/.ocp-  
install/auth/kubeconfig
```

2. Run the Helm command to install the Trident operator from the tarball in the helm directory while creating the trident namespace in your user cluster.

```
[netapp-user@rhel7 trident-installer]$ helm install trident
helm/trident-operator-21.04.0.tgz --create-namespace --namespace trident
NAME: trident
LAST DEPLOYED: Fri May  7 12:54:25 2021
NAMESPACE: trident
STATUS: deployed
REVISION: 1
TEST SUITE: None
NOTES:
Thank you for installing trident-operator, which will deploy and manage
NetApp's Trident CSI
storage provisioner for Kubernetes.

Your release is named 'trident' and is installed into the 'trident'
namespace.
Please note that there must be only one instance of Trident (and
trident-operator) in a Kubernetes cluster.

To configure Trident to manage storage resources, you will need a copy
of tridentctl, which is
available in pre-packaged Trident releases. You may find all Trident
releases and source code
online at https://github.com/NetApp/trident.

To learn more about the release, try:

$ helm status trident
$ helm get all trident
```

3. You can verify that Trident is successfully installed by checking the pods that are running in the namespace or by using the tridentctl binary to check the installed version.

```
[netapp-user@rhel7 trident-installer]$ oc get pods -n trident
```

NAME	READY	STATUS	RESTARTS	AGE
trident-csi-5z45l	1/2	Running	2	30s
trident-csi-696b685cf8-htdb2	6/6	Running	0	30s
trident-csi-b74p2	2/2	Running	0	30s
trident-csi-lrw4n	2/2	Running	0	30s
trident-operator-7c748d957-gr2gw	1/1	Running	0	36s


```
[netapp-user@rhel7 trident-installer]$ ./tridentctl -n trident version
```

```
+-----+-----+
| SERVER VERSION | CLIENT VERSION |
+-----+-----+
| 21.04.0       | 21.04.0       |
+-----+-----+
```



In some cases, customer environments might require the customization of the Trident deployment. In these cases, it is also possible to manually install the Trident operator and update the included manifests to customize the deployment.

Manually install the Trident Operator

1. First, set the location of the user cluster's `kubeconfig` file as an environment variable so that you don't have to reference it, because Trident has no option to pass this file.

```
[netapp-user@rhel7 trident-installer]$ export KUBECONFIG=~/.ocp-
install/auth/kubeconfig
```

2. The `trident-installer` directory contains manifests for defining all the required resources. Using the appropriate manifests, create the `TridentOrchestrator` custom resource definition.

```
[netapp-user@rhel7 trident-installer]$ oc create -f
deploy/crds/trident.netapp.io_tridentorchestrators_crd_post1.16.yaml
customresourcedefinition.apiextensions.k8s.io/tridentorchestrators.tride
nt.netapp.io created
```

3. If one does not exist, create a Trident namespace in your cluster using the provided manifest.

```
[netapp-user@rhel7 trident-installer]$ oc apply -f deploy/namespace.yaml
namespace/trident created
```

4. Create the resources required for the Trident operator deployment, such as a `ServiceAccount` for the operator, a `ClusterRole` and `ClusterRoleBinding` to the `ServiceAccount`, a dedicated

`PodSecurityPolicy`, or the operator itself.

```
[netapp-user@rhel7 trident-installer]$ oc create -f deploy/bundle.yaml
serviceaccount/trident-operator created
clusterrole.rbac.authorization.k8s.io/trident-operator created
clusterrolebinding.rbac.authorization.k8s.io/trident-operator created
deployment.apps/trident-operator created
podsecuritypolicy.policy/tridentoperatorpods created
```

5. You can check the status of the operator after it's deployed with the following commands:

```
[netapp-user@rhel7 trident-installer]$ oc get deployment -n trident
NAME                READY    UP-TO-DATE    AVAILABLE    AGE
trident-operator    1/1      1             1            23s
[netapp-user@rhel7 trident-installer]$ oc get pods -n trident
NAME                                READY    STATUS    RESTARTS    AGE
trident-operator-66f48895cc-lzczk    1/1     Running    0           41s
```

6. With the operator deployed, we can now use it to install Trident. This requires creating a `TridentOrchestrator`.

```
[netapp-user@rhel7 trident-installer]$ oc create -f
deploy/crds/tridentorchestrator_cr.yaml
tridentorchestrator.trident.netapp.io/trident created
[netapp-user@rhel7 trident-installer]$ oc describe torc trident
Name:                trident
Namespace:
Labels:               <none>
Annotations:          <none>
API Version:          trident.netapp.io/v1
Kind:                 TridentOrchestrator
Metadata:
  Creation Timestamp:  2021-05-07T17:00:28Z
  Generation:          1
  Managed Fields:
    API Version:        trident.netapp.io/v1
    Fields Type:         FieldsV1
    fieldsV1:
      f:spec:
        .:
        f:debug:
        f:namespace:
  Manager:             kubectl-create
  Operation:            Update
```



```
Time:          2021-05-07T17:00:28Z
API Version:   trident.netapp.io/v1
Fields Type:   FieldsV1
fieldsV1:
  f:status:
    .:
    f:currentInstallationParams:
      .:
      f:IPv6:
      f:autosupportHostname:
      f:autosupportImage:
      f:autosupportProxy:
      f:autosupportSerialNumber:
      f:debug:
      f:enableNodePrep:
      f:imagePullSecrets:
      f:imageRegistry:
      f:k8sTimeout:
      f:kubeletDir:
      f:logFormat:
      f:silenceAutosupport:
      f:tridentImage:
    f:message:
    f:namespace:
    f:status:
    f:version:
  Manager:      trident-operator
  Operation:    Update
  Time:         2021-05-07T17:00:28Z
Resource Version: 931421
Self Link:
/apis/trident.netapp.io/v1/tridentorchestrators/trident
UID:           8a26a7a6-dde8-4d55-9b66-a7126754d81f
Spec:
  Debug:        true
  Namespace:    trident
Status:
  Current Installation Params:
    IPv6:                false
    Autosupport Hostname:
    Autosupport Image:    netapp/trident-autosupport:21.01
    Autosupport Proxy:
    Autosupport Serial Number:
    Debug:                true
    Enable Node Prep:     false
    Image Pull Secrets:
```

```

Image Registry:
k8sTimeout:      30
Kubelet Dir:     /var/lib/kubelet
Log Format:      text
Silence Autosupport: false
Trident Image:   netapp/trident:21.04.0
Message:         Trident installed
Namespace:       trident
Status:          Installed
Version:         v21.04.0

Events:
  Type    Reason          Age   From                                Message
  ----    -
Normal    Installing      80s   trident-operator.netapp.io         Installing
Trident
Normal    Installed       68s   trident-operator.netapp.io         Trident
installed

```

7. You can verify that Trident is successfully installed by checking the pods that are running in the namespace or by using the `tridentctl` binary to check the installed version.

```

[netapp-user@rhel7 trident-installer]$ oc get pods -n trident
NAME                                READY   STATUS    RESTARTS   AGE
trident-csi-bb64c6cb4-lmd6h        6/6     Running   0           82s
trident-csi-gn59q                  2/2     Running   0           82s
trident-csi-m4szj                  2/2     Running   0           82s
trident-csi-sb9k9                  2/2     Running   0           82s
trident-operator-66f48895cc-lzczk   1/1     Running   0           2m39s

[netapp-user@rhel7 trident-installer]$ ./tridentctl -n trident version
+-----+-----+
| SERVER VERSION | CLIENT VERSION |
+-----+-----+
| 21.04.0        | 21.04.0        |
+-----+-----+

```

Prepare worker nodes for storage

Most Kubernetes distributions come with the packages and utilities to mount NFS backends installed by default, including Red Hat OpenShift.

To prepare worker nodes to allow for the mapping of block storage volumes through the iSCSI protocol, you must install the necessary packages to support that functionality.

In Red Hat OpenShift, this is handled by applying an MCO (Machine Config Operator) to your cluster after it is deployed.

To configure the worker nodes to run storage services, complete the following steps:

1. Log into the OCP web console and navigate to Compute > Machine Configs. Click Create Machine Config. Copy and paste the YAML file and click Create.

When not using multipathing:

```
apiVersion: machineconfiguration.openshift.io/v1
kind: MachineConfig
metadata:
  labels:
    machineconfiguration.openshift.io/role: worker
  name: 99-worker-element-iscsi
spec:
  config:
    ignition:
      version: 3.2.0
    systemd:
      units:
        - name: iscsid.service
          enabled: true
          state: started
  osImageURL: ""
```

When using multipathing:

```

apiVersion: machineconfiguration.openshift.io/v1
kind: MachineConfig
metadata:
  name: 99-worker-ontap-iscsi
  labels:
    machineconfiguration.openshift.io/role: worker
spec:
  config:
    ignition:
      version: 3.2.0
    storage:
      files:
      - contents:
          source: data:text/plain;charset=utf-
8;base64,ZGVmYXVsdHMgewogICAgICAgIHVzZXJfZnJpZW5kbHlfbmFtZXMgeWVzCiAgICAgI
CAgZmluZGF9tdWx0aXBhdGhzIHllcwp9CgpbGFja2xpc3RfZXhjZXB0aW9ucyB7CiAgICAgICA
gcHJvcGVydHkgIihTQ1NjX01ERU5UX3xJRF9XV04pIgp9CgpbGFja2xpc3Qgewp9Cgo=
          verification: {}
        filesystem: root
        mode: 400
        path: /etc/multipath.conf
    systemd:
      units:
      - name: iscsid.service
        enabled: true
        state: started
      - name: multipathd.service
        enabled: true
        state: started
  osImageURL: ""

```

2. After the configuration is created, it takes approximately 20 to 30 minutes to apply the configuration to the worker nodes and reload them. Verify whether the machine config is applied by using `oc get mcp` and make sure that the machine config pool for workers is updated. You can also log into the worker nodes to confirm that the `iscsid` service is running (and the `multipathd` service is running if using multipathing).

```
[netapp-user@rhel7 openshift-deploy]$ oc get mcp
NAME          CONFIG                                UPDATED    UPDATING
DEGRADED
master    rendered-master-a520ae930e1d135e0dee7168    True      False
False
worker    rendered-worker-de321b36eeba62df41feb7bc    True      False
False

[netapp-user@rhel7 openshift-deploy]$ ssh core@10.61.181.22 sudo
systemctl status iscsid
● iscsid.service - Open-iSCSI
   Loaded: loaded (/usr/lib/systemd/system/iscsid.service; enabled;
   vendor preset: disabled)
   Active: active (running) since Tue 2021-05-26 13:36:22 UTC; 3 min ago
     Docs: man:iscsid(8)
           man:iscsiadm(8)
  Main PID: 1242 (iscsid)
    Status: "Ready to process requests"
     Tasks: 1
   Memory: 4.9M
      CPU: 9ms
   CGroup: /system.slice/iscsid.service
           └─1242 /usr/sbin/iscsid -f

[netapp-user@rhel7 openshift-deploy]$ ssh core@10.61.181.22 sudo
systemctl status multipathd
● multipathd.service - Device-Mapper Multipath Device Controller
   Loaded: loaded (/usr/lib/systemd/system/multipathd.service; enabled;
   vendor preset: enabled)
   Active: active (running) since Tue 2021-05-26 13:36:22 UTC; 3 min ago
  Main PID: 918 (multipathd)
    Status: "up"
     Tasks: 7
   Memory: 13.7M
      CPU: 57ms
   CGroup: /system.slice/multipathd.service
           └─918 /sbin/multipathd -d -s
```



It is also possible to confirm that the MachineConfig has been successfully applied and services have been started as expected by running the `oc debug` command with the appropriate flags.

Create storage-system backends

After completing the NetApp Trident Operator install, you must configure the backend for the specific NetApp storage platform you are using. Follow the links below in order to continue the setup and configuration of NetApp Trident.

- [NetApp ONTAP NFS](#)
- [NetApp ONTAP iSCSI](#)
- [NetApp Element iSCSI](#)

Next: [Solution Validation/Use Cases: Red Hat OpenShift with NetApp](#).

NetApp ONTAP NFS Configuration

To enable Trident integration with the NetApp ONTAP storage system, you must create a backend that enables communication with the storage system.

1. There are sample backend files available in the downloaded installation archive in the `sample-input` folder hierarchy. For NetApp ONTAP systems serving NFS, copy the `backend-ontap-nas.json` file to your working directory and edit the file.

```
[netapp-user@rhel7 trident-installer]$ cp sample-input/backends-samples/ontap-nas/backend-ontap-nas.json ./
[netapp-user@rhel7 trident-installer]$ vi backend-ontap-nas.json
```

2. Edit the `backendName`, `managementLIF`, `dataLIF`, `svm`, `username`, and `password` values in this file.

```
{
  "version": 1,
  "storageDriverName": "ontap-nas",
  "backendName": "ontap-nas+10.61.181.221",
  "managementLIF": "172.21.224.201",
  "dataLIF": "10.61.181.221",
  "svm": "trident_svm",
  "username": "cluster-admin",
  "password": "password"
}
```



Best practice is to define the custom `backendName` value as a combination of the `storageDriverName` and the `dataLIF` that is serving NFS for easy identification.

3. With this backend file in place, run the following command to create your first backend.

```
[netapp-user@rhel7 trident-installer]$ ./tridentctl -n trident create
backend -f backend-ontap-nas.json
```

NAME	STATE	VOLUMES	STORAGE DRIVER	UUID
ontap-nas+10.61.181.221	online	0	ontap-nas	be7a619d-c81d-445c-b80c-5c87a73c5b1e

4. With the backend created, you must next create a storage class. Just as with the backend, there is a sample storage class file that can be edited for the environment available in the sample-inputs folder. Copy it to the working directory and make necessary edits to reflect the backend created.

```
[netapp-user@rhel7 trident-installer]$ cp sample-input/storage-class-
samples/storage-class-csi.yaml.templ ./storage-class-basic.yaml
[netapp-user@rhel7 trident-installer]$ vi storage-class-basic.yaml
```

5. The only edit that must be made to this file is to define the `backendType` value to the name of the storage driver from the newly created backend. Also note the name-field value, which must be referenced in a later step.

```
apiVersion: storage.k8s.io/v1
kind: StorageClass
metadata:
  name: basic-csi
provisioner: csi.trident.netapp.io
parameters:
  backendType: "ontap-san"
```



There is an optional field called `fsType` that is defined in this file. This line can be deleted in NFS backends.

6. Run the `oc` command to create the storage class.

```
[netapp-user@rhel7 trident-installer]$ oc create -f storage-class-
basic.yaml
storageclass.storage.k8s.io/basic-csi created
```

7. With the storage class created, you must then create the first persistent volume claim (PVC). There is a sample `pvc-basic.yaml` file that can be used to perform this action located in `sample-inputs` as well.

```
[netapp-user@rhel7 trident-installer]$ cp sample-input/pvc-samples/pvc-basic.yaml ./
[netapp-user@rhel7 trident-installer]$ vi pvc-basic.yaml
```

8. The only edit that must be made to this file is ensuring that the `storageClassName` field matches the one just created. The PVC definition can be further customized as required by the workload to be provisioned.

```
kind: PersistentVolumeClaim
apiVersion: v1
metadata:
  name: basic
spec:
  accessModes:
    - ReadWriteOnce
  resources:
    requests:
      storage: 1Gi
  storageClassName: basic-csi
```

9. Create the PVC by issuing the `oc` command. Creation can take some time depending on the size of the backing volume being created, so you can watch the process as it completes.

```
[netapp-user@rhel7 trident-installer]$ oc create -f pvc-basic.yaml
persistentvolumeclaim/basic created

[netapp-user@rhel7 trident-installer]$ oc get pvc
NAME          STATUS    VOLUME                                     CAPACITY
ACCESS MODES  STORAGECLASS  AGE
basic         Bound        pvc-b4370d37-0fa4-4c17-bd86-94f96c94b42d  1Gi
RWO           basic-csi     7s
```

[Next: Solution Validation / Use Cases: Red Hat OpenShift with NetApp.](#)

NetApp ONTAP iSCSI Configuration

To enable Trident integration with the NetApp ONTAP storage system you must create a backend that enables communication with the storage system.

1. There are sample backend files available in the downloaded installation archive in the `sample-input` folder hierarchy. For NetApp ONTAP systems serving iSCSI, copy the `backend-ontap-san.json` file to your working directory and edit the file.


```
[netapp-user@rhel7 trident-installer]$ cp sample-input/backends-
samples/ontap-san/backend-ontap-san.json ./
[netapp-user@rhel7 trident-installer]$ vi backend-ontap-san.json
```

2. Edit the managementLIF, dataLIF, svm, username, and password values in this file.

```
{
  "version": 1,
  "storageDriverName": "ontap-san",
  "managementLIF": "172.21.224.201",
  "dataLIF": "10.61.181.240",
  "svm": "trident_svm",
  "username": "admin",
  "password": "password"
}
```

3. With this backend file in place, run the following command to create your first backend.

```
[netapp-user@rhel7 trident-installer]$ ./tridentctl -n trident create
backend -f backend-ontap-san.json
+-----+-----+
+-----+-----+-----+-----+
|          NAME          | STORAGE DRIVER |          UUID          |
| STATE | VOLUMES | |          |
+-----+-----+-----+-----+
+-----+-----+-----+-----+
| ontapsan_10.61.181.241 | ontap-san      | 6788533c-7fea-4a35-b797-
fb9bb3322b91 | online |      0 |
+-----+-----+-----+-----+
+-----+-----+-----+-----+
```

4. With the backend created, you must next create a storage class. Just as with the backend, there is a sample storage class file that can be edited for the environment available in the sample-inputs folder. Copy it to the working directory and make necessary edits to reflect the backend created.

```
[netapp-user@rhel7 trident-installer]$ cp sample-input/storage-class-
samples/storage-class-csi.yaml.templ ./storage-class-basic.yaml
[netapp-user@rhel7 trident-installer]$ vi storage-class-basic.yaml
```

5. The only edit that must be made to this file is to define the `backendType` value to the name of the storage driver from the newly created backend. Also note the name-field value, which must be referenced in a later step.

```
apiVersion: storage.k8s.io/v1
kind: StorageClass
metadata:
  name: basic-csi
provisioner: csi.trident.netapp.io
parameters:
  backendType: "ontap-san"
```



There is an optional field called `fsType` that is defined in this file. In iSCSI backends, this value can be set to a specific Linux filesystem type (XFS, ext4, etc) or can be deleted to allow OpenShift to decide what filesystem to use.

6. Run the `oc` command to create the storage class.

```
[netapp-user@rhel7 trident-installer]$ oc create -f storage-class-basic.yaml
storageclass.storage.k8s.io/basic-csi created
```

7. With the storage class created, you must then create the first persistent volume claim (PVC). There is a sample `pvc-basic.yaml` file that can be used to perform this action located in `sample-inputs` as well.

```
[netapp-user@rhel7 trident-installer]$ cp sample-input/pvc-samples/pvc-basic.yaml ./
[netapp-user@rhel7 trident-installer]$ vi pvc-basic.yaml
```

8. The only edit that must be made to this file is ensuring that the `storageClassName` field matches the one just created. The PVC definition can be further customized as required by the workload to be provisioned.

```
kind: PersistentVolumeClaim
apiVersion: v1
metadata:
  name: basic
spec:
  accessModes:
    - ReadWriteOnce
  resources:
    requests:
      storage: 1Gi
  storageClassName: basic-csi
```

9. Create the PVC by issuing the `oc` command. Creation can take some time depending on the size of the backing volume being created, so you can watch the process as it completes.

```
[netapp-user@rhel7 trident-installer]$ oc create -f pvc-basic.yaml
persistentvolumeclaim/basic created

[netapp-user@rhel7 trident-installer]$ oc get pvc
NAME      STATUS    VOLUME                                     CAPACITY
ACCESS MODES   STORAGECLASS  AGE
basic        Bound        pvc-7ceac1ba-0189-43c7-8f98-094719f7956c  1Gi
RWO           basic-csi     3s
```

Next: [Solution Validation / Use Cases: Red Hat OpenShift with NetApp.](#)

NetApp Element iSCSI configuration

To enable Trident integration with the NetApp Element storage system you must create a backend that enables communication with the storage system using the iSCSI protocol.

1. There are sample backend files available in the downloaded installation archive in the `sample-input` folder hierarchy. For NetApp Element systems serving iSCSI, copy the `backend-solidfire.json` file to your working directory, and edit the file.

```
[netapp-user@rhel7 trident-installer]$ cp sample-input/backends-
samples/solidfire/backend-solidfire.json ./
[netapp-user@rhel7 trident-installer]$ vi ./backend-solidfire.json
```

- a. Edit the user, password, and MVIP value on the `EndPoint` line.
- b. Edit the `SVIP` value.

```
{
  "version": 1,
  "storageDriverName": "solidfire-san",
  "Endpoint": "https://trident:password@172.21.224.150/json-
rpc/8.0",
  "SVIP": "10.61.180.200:3260",
  "TenantName": "trident",
  "Types": [{"Type": "Bronze", "Qos": {"minIOPS": 1000, "maxIOPS":
2000, "burstIOPS": 4000}},
            {"Type": "Silver", "Qos": {"minIOPS": 4000, "maxIOPS":
6000, "burstIOPS": 8000}},
            {"Type": "Gold", "Qos": {"minIOPS": 6000, "maxIOPS":
8000, "burstIOPS": 10000}}]
}
```

2. With this back-end file in place, run the following command to create your first backend.

```
[netapp-user@rhel7 trident-installer]$ ./tridentctl -n trident create
backend -f backend-solidfire.json
```

NAME	STATE	VOLUMES	STORAGE DRIVER	UUID
solidfire_10.61.180.200	online	0	solidfire-san	b90783ee-e0c9-49af-8d26-3ea87ce2efdf

3. With the backend created, you must next create a storage class. Just as with the backend, there is a sample storage class file that can be edited for the environment available in the sample-inputs folder. Copy it to the working directory and make necessary edits to reflect the backend created.

```
[netapp-user@rhel7 trident-installer]$ cp sample-input/storage-class-
samples/storage-class-csi.yaml.templ ./storage-class-basic.yaml
[netapp-user@rhel7 trident-installer]$ vi storage-class-basic.yaml
```

4. The only edit that must be made to this file is to define the `backendType` value to the name of the storage driver from the newly created backend. Also note the name-field value, which must be referenced in a later step.

```
apiVersion: storage.k8s.io/v1
kind: StorageClass
metadata:
  name: basic-csi
provisioner: csi.trident.netapp.io
parameters:
  backendType: "solidfire-san"
```



There is an optional field called `fsType` that is defined in this file. In iSCSI backends, this value can be set to a specific Linux filesystem type (XFS, ext4, etc) or can be deleted to allow OpenShift to decide what filesystem to use.

5. Run the `oc` command to create the storage class.

```
[netapp-user@rhel7 trident-installer]$ oc create -f storage-class-
basic.yaml
storageclass.storage.k8s.io/basic-csi created
```

6. With the storage class created, you must then create the first persistent volume claim (PVC). There is a sample `pvc-basic.yaml` file that can be used to perform this action located in sample-inputs as well.

```
[netapp-user@rhel7 trident-installer]$ cp sample-input/pvc-samples/pvc-basic.yaml ./
[netapp-user@rhel7 trident-installer]$ vi pvc-basic.yaml
```

7. The only edit that must be made to this file is ensuring that the `storageClassName` field matches the one just created. The PVC definition can be further customized as required by the workload to be provisioned.

```
kind: PersistentVolumeClaim
apiVersion: v1
metadata:
  name: basic
spec:
  accessModes:
    - ReadWriteOnce
  resources:
    requests:
      storage: 1Gi
  storageClassName: basic-csi
```

8. Create the PVC by issuing the `oc` command. Creation can take some time depending on the size of the backing volume being created, so you can watch the process as it completes.

```
[netapp-user@rhel7 trident-installer]$ oc create -f pvc-basic.yaml
persistentvolumeclaim/basic created

[netapp-user@rhel7 trident-installer]$ oc get pvc
NAME      STATUS    VOLUME                                     CAPACITY
ACCESS MODES  STORAGECLASS  AGE
basic      Bound       pvc-3445b5cc-df24-453d-a1e6-b484e874349d  1Gi
RWO                basic-csi          5s
```

[Next: Solution Validation / Use Cases: Red Hat OpenShift with NetApp.](#)

Copyright Information

Copyright © 2021 NetApp, Inc. All rights reserved. Printed in the U.S. No part of this document covered by copyright may be reproduced in any form or by any means-graphic, electronic, or mechanical, including photocopying, recording, taping, or storage in an electronic retrieval system-without prior written permission of the copyright owner.

Software derived from copyrighted NetApp material is subject to the following license and disclaimer:

THIS SOFTWARE IS PROVIDED BY NETAPP "AS IS" AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE HEREBY DISCLAIMED. IN NO EVENT SHALL NETAPP BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

NetApp reserves the right to change any products described herein at any time, and without notice. NetApp assumes no responsibility or liability arising from the use of products described herein, except as expressly agreed to in writing by NetApp. The use or purchase of this product does not convey a license under any patent rights, trademark rights, or any other intellectual property rights of NetApp.

The product described in this manual may be protected by one or more U.S. patents, foreign patents, or pending applications.

RESTRICTED RIGHTS LEGEND: Use, duplication, or disclosure by the government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.277-7103 (October 1988) and FAR 52-227-19 (June 1987).

Trademark Information

NETAPP, the NETAPP logo, and the marks listed at <http://www.netapp.com/TM> are trademarks of NetApp, Inc. Other company and product names may be trademarks of their respective owners.