


Front Floor Mat/Carpet Replacement


Removal Procedure

1. Remove the front seats. Refer to [Driver or Passenger Seat Replacement](#).
2. Remove the engine cover. Refer to [Engine Cover Replacement](#).
3. Remove the hinge pillar trim panel. Refer to [Body Hinge Pillar Trim Panel Replacement](#).

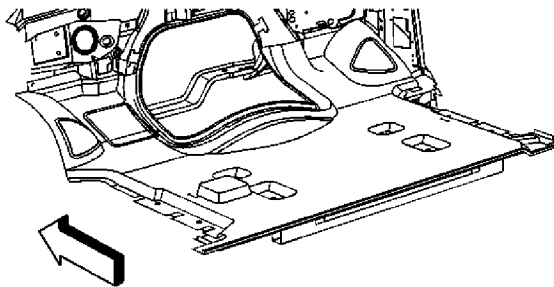

4. Remove the front door stepwell mat. Refer to [Front Side Door Step Mat Replacement](#).
5. Remove the front floor mat/carpet from the vehicle.

Installation Procedure

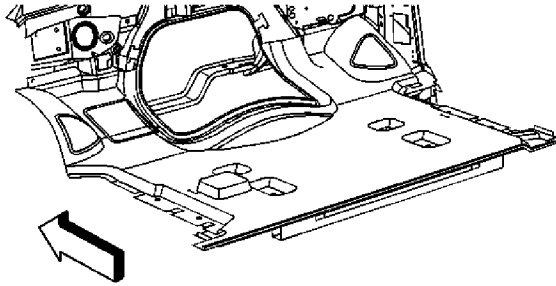


Warning: In order to avoid personal injury or vehicle damage when you repair or replace the carpet, use the same thickness and material size as the original installation. Always return the carpet to the original location.

1. Install the front floor mat/carpet to the vehicle.
2. Install the front door stepwell mat. Refer to [Front Side Door Step Mat Replacement](#).
3. Install the hinge pillar trim panel. Refer to [Body Hinge Pillar Trim Panel Replacement](#).
4. Install the engine cover. Refer to [Engine Cover Replacement](#).
5. Install the front seats. Refer to [Driver or Passenger Seat Replacement](#).

Rear Floor Mat/Carpet Replacement (Cargo Models)

Removal Procedure

1. Remove the rear passenger seats. Refer to [Rear Bench Seat Replacement](#).
2. Remove the driver side body side trim panel. Refer to [Body Side Trim Panel Replacement - Left Side](#).
3. Remove the passenger side body side trim panel. Refer to [Body Side Trim Panel Replacement - Right Side](#).
4. Remove the rear floor carpet trim plate. Refer to [Rear Floor Trim Plate Replacement](#).
5. Remove the rear side door step mat. Refer to [Rear Side Door Step Mat Replacement](#).

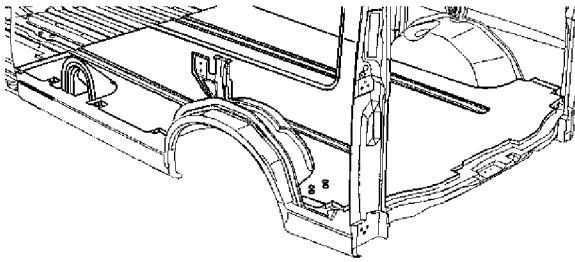


6. Remove the rear floor mat/carpet from the vehicle.

Installation Procedure

Warning: In order to avoid personal injury or vehicle damage when you repair or replace the carpet, use the same thickness and material size as the original installation. Always return the carpet to the original location.

1. Install the rear floor mat/carpet to the vehicle.

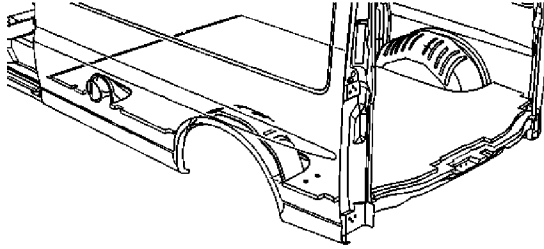


2. Install the rear side door step mat. Refer to [Rear Side Door Step Mat Replacement](#).
3. Install the rear floor carpet trim plate. Refer to [Rear Floor Trim Plate Replacement](#).
4. Install the passenger side body side trim panel. Refer to [Body Side Trim Panel Replacement - Right Side](#).
5. Install the driver side body side trim panel. Refer to [Body Side Trim Panel Replacement - Left Side](#).
6. Install the rear passenger seats. Refer to [Rear Bench Seat Replacement](#).

Rear Floor Mat/Carpet Replacement (Passenger Models)


Removal Procedure

1. Remove the rear passenger seats. Refer to [Rear Bench Seat Replacement](#).
2. Remove the driver side body side trim panel. Refer to [Body Side Trim Panel Replacement - Left Side](#).
3. Remove the passenger side body side trim panel. Refer to [Body Side Trim Panel Replacement - Right Side](#).
4. Remove the rear floor carpet trim plate. Refer to [Rear Floor Trim Plate Replacement](#).
5. Remove the rear side door step mat. Refer to [Rear Side Door Step Mat Replacement](#).

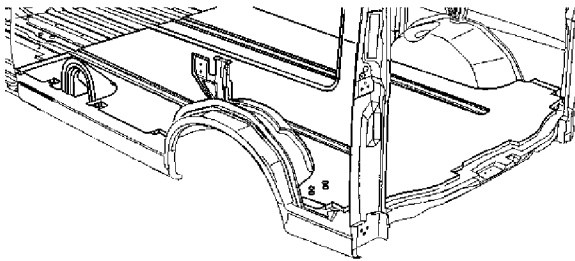

6. Remove the rear floor mat/carpet from the vehicle.


Installation Procedure

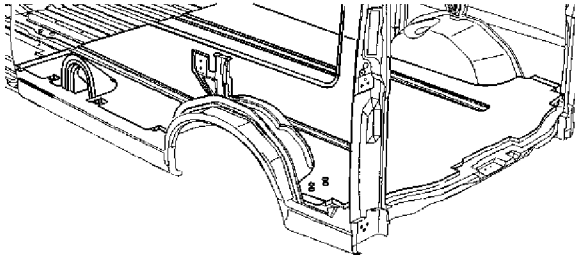

Warning: In order to avoid personal injury or vehicle damage when you repair or replace the carpet, use the same thickness and material size as the original installation. Always return the carpet to the original location.

1. Install the rear floor mat/carpet to the vehicle.
2. Install the rear side door step mat. Refer to [Rear Side Door Step Mat Replacement](#).
3. Install the rear floor carpet trim plate. Refer to [Rear Floor Trim Plate Replacement](#).
4. Install the passenger side body side trim panel. Refer to [Body Side Trim Panel Replacement - Right Side](#).
5. Install the driver side body side trim panel. Refer to [Body Side Trim Panel Replacement - Left Side](#).
6. Install the rear passenger seats. Refer to [Rear Bench Seat Replacement](#).

Rear Side Door Step Mat Replacement

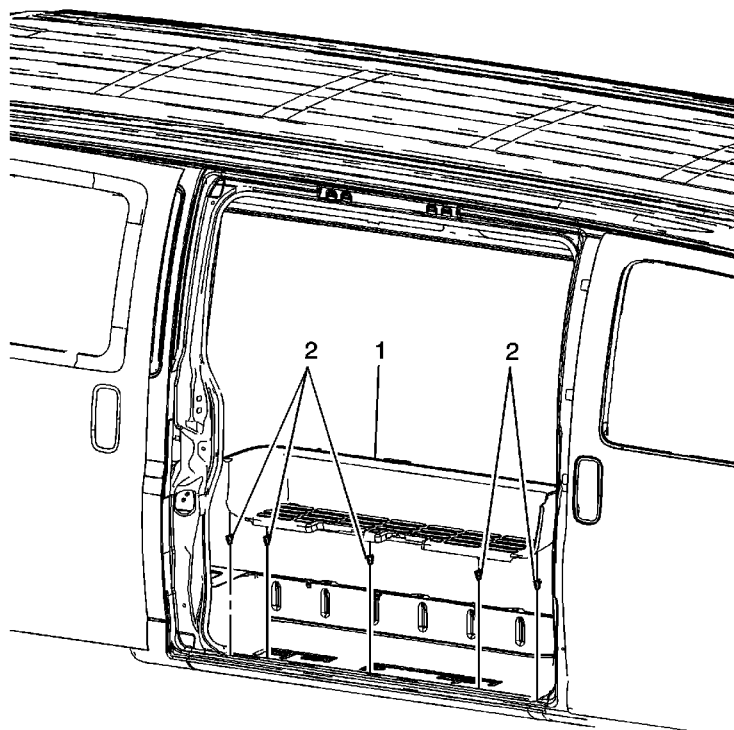


Callout	Component Name
1	Rear Side Door Step Mat
2	Retainer Clips (Qty: 5)

Headlining Front Trim Panel Replacement


Removal Procedure

Warning: Do not attempt to repair or alter the head impact energy-absorbing material glued to the headliner or to the garnish trims. If the material is damaged, replace the headliner and/or the garnish trim. Failure to do so could result in personal injury.

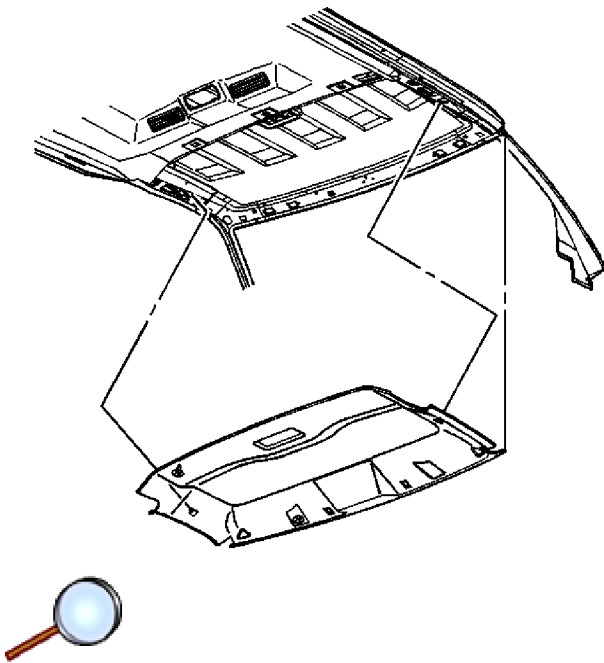

1. Remove the windshield garnish molding. Refer to [Windshield Garnish Molding Replacement](#).
2. Disconnect the headliner electrical connectors.
3. Remove the sunshades. Refer to [Sunshade Replacement](#).
4. Remove the sunshade support retainer. Refer to [Sunshade Anchor Replacement](#).
5. Remove the front door upper pillar garnish molding. Refer to [Upper Pillar Garnish Molding Replacement](#).
6. Partially remove the upper part of the front door opening weather strips. Refer to [Front Door Opening Weatherstrip Replacement](#).
7. Remove the front headliner retainers.
8. Remove the front headliner from the vehicle.

Installation Procedure

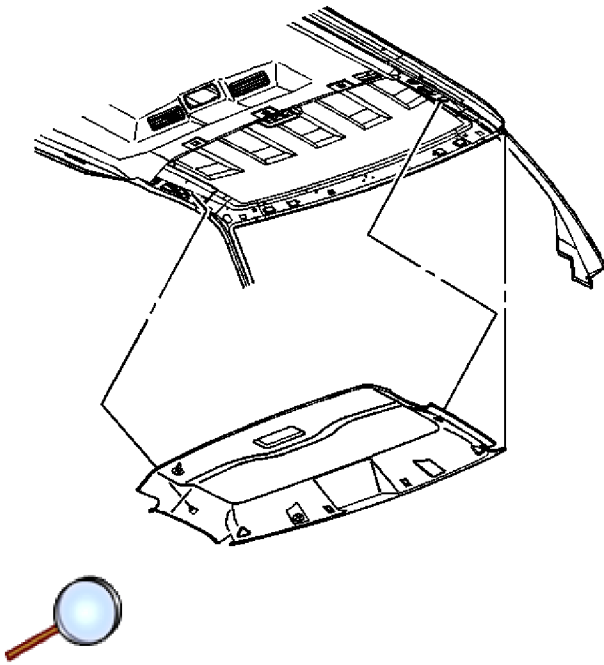


1. Install the front headliner to the vehicle.
2. Install the front headliner retainers.
3. Connect the headliner electrical connectors.
4. Install the sunshade support retainer. Refer to [Sunshade Anchor Replacement](#).
5. Install the sunshades. Refer to [Sunshade Replacement](#).
6. Install the windshield garnish molding. Refer to [Windshield Garnish Molding Replacement](#).
7. Install the front door upper pillar garnish molding. Refer to [Upper Pillar Garnish Molding Replacement](#).
8. Install the front door opening weather strips. Refer to [Front Door Opening Weatherstrip Replacement](#).

Headlining Rear Trim Panel Replacement

Removal Procedure

Warning: Do not attempt to repair or alter the head impact energy-absorbing material glued to the headliner or to the garnish trims. If the material is damaged, replace the headliner and/or the garnish trim. Failure to do so could result in personal injury.

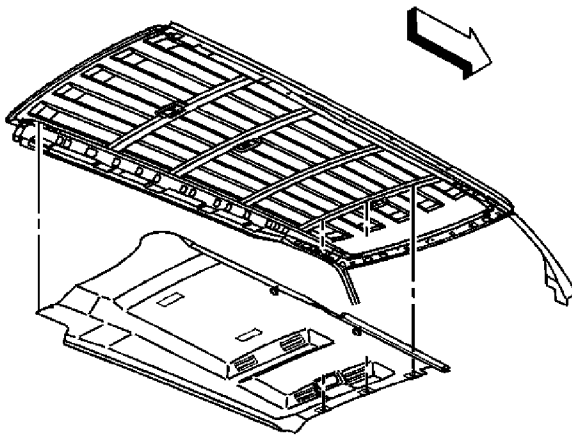

1. Remove the rear passenger seats. Refer to [Rear Bench Seat Replacement](#).
2. Remove the front headliner. Refer to [Headlining Front Trim Panel Replacement](#).
3. Remove the coat hooks. Refer to [Coat Hook Replacement](#).
4. Remove the left rear upper garnish molding. Refer to [Body Side Rear Garnish Molding Replacement](#).
5. Remove the rear door garnish molding. Refer to [Rear Door Upper Garnish Molding Replacement](#).
6. Remove the left roof side rail garnish molding. Refer to [Roof Side Rail Garnish Molding Replacement - Left Side](#).
7. Remove the right roof side rail garnish molding. Refer to [Roof Side Rail Garnish Molding Replacement - Right Side](#).
8. Remove the rear corner garnish molding. Refer to [Body Rear Corner Garnish Molding Replacement](#).
9. Remove the upper seat belt anchor bolts.

Refer to the following:


- [Seat Belt Retractor Replacement - No. 2 Left Rear](#)
- [Seat Belt Retractor Replacement - No. 2 Right Rear](#)
- [Seat Belt Retractor Replacement - No. 3 Left Rear](#)

© 2010 General Motors Corporation. All rights reserved.

- [Seat Belt Retractor Replacement - No. 3 Right Rear](#)

10. Disconnect the electrical connectors.
11. Remove the headliner from the vehicle through the rear doors.

Installation Procedure

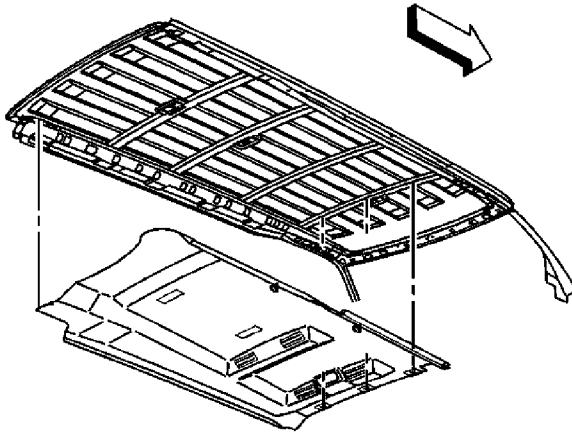

1. Install the headliner to the vehicle.
2. Connect the electrical connectors.
3. Install the coat hooks. Refer to [Coat Hook Replacement](#).
4. Install the left rear upper garnish molding. Refer to [Body Side Rear Garnish Molding Replacement](#).
5. Install the rear door garnish molding. Refer to [Rear Door Upper Garnish Molding Replacement](#).
6. Install the left roof side rail garnish molding. Refer to [Roof Side Rail Garnish Molding Replacement - Left Side](#).
7. Install the right roof side rail garnish molding. Refer to [Roof Side Rail Garnish Molding Replacement - Right Side](#).
8. Install the rear corner garnish molding. Refer to [Body Rear Corner Garnish Molding Replacement](#).
9. Install the upper seat belt anchor bolts.

Refer to the following:

- [Seat Belt Retractor Replacement - No. 2 Left Rear](#)
 - [Seat Belt Retractor Replacement - No. 2 Right Rear](#)
 - [Seat Belt Retractor Replacement - No. 3 Left Rear](#)
 - [Seat Belt Retractor Replacement - No. 3 Right Rear](#)
10. Install the front headliner. Refer to [Headlining Front Trim Panel Replacement](#).
 11. Install the rear passenger seats. Refer to [Rear Bench Seat Replacement](#).