


**Blue Bird**  
**VISION**  
S E R V I C E

2006

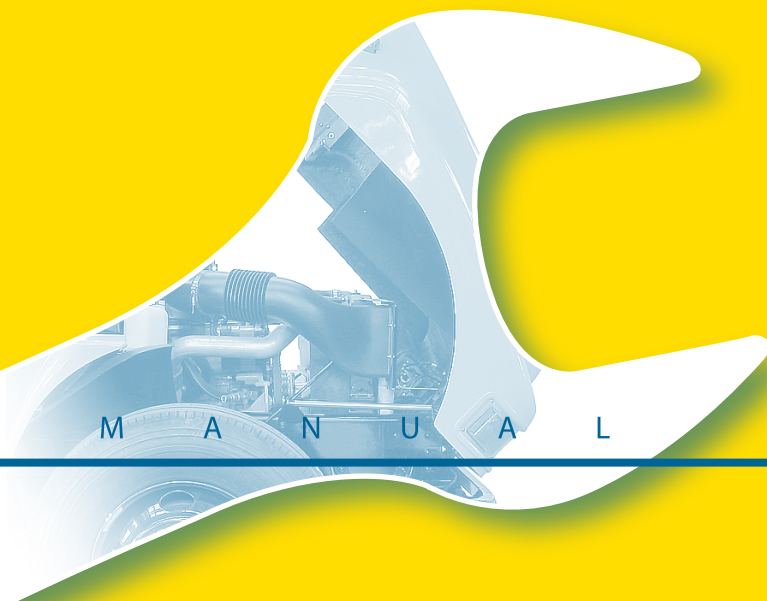





© 2004 Blue Bird Corporation. All rights reserved.

The Blue Bird Vision complies with all applicable federal and state regulations. These include, but are not be limited to, Federal ADA as well as state accessibility, safety and security requirements.

The Blue Bird Vision meets all applicable Federal Motor Vehicle Safety Standards (FMVSS) rules and regulations.

In the event of any conflict between the requirements of this publication and any applicable legal requirement, the legal requirement prevails. Technical requirements that exceed the legal requirements are not considered to conflict.

The material presented in this manual is accurate at the time of publication. Blue Bird Corporation continually endeavors to improve its product and reserves the right to change without notice.

# CONTENTS

<b>Introduction / 13</b>	<b>13</b>
Contacts and Regulatory Matter / 15	
National Highway Transportation & Safety Administration (NHTSA) / 15	<b>21</b>
About This Manual / 16	
About the TechReference CD / 18	<b>47</b>
<b>specs &amp; maintenance / 21</b>	<b>53</b>
General Specification, Chassis (Standard) / 21	
General Specification, Body (Standard) / 24	
Dimensions / 30	
Fastener Grades / 31	
Service Precautions / 34	
Jacking and Towing / 36	
Jack Points / 36	
Towing / 36	
Fluids & Filters / 39	
General Maintenance Schedules / 40	<b>159</b>
<b>Chassis Frame / 47</b>	
Chassis Frame Overview / 47	
Maintenance Overview / 47	
Huck Fasteners / 47	
Body Tie-down Clamps and Angles / 50	
Rubber Mounting Pads / 50	
Body Mount Isolators / 51	
<b>Front Axle &amp; Suspension / 53</b>	
Overview / 53	
Maintenance / 53	
SofTek Front Suspension / 55	
Torque Requirements / 55	
AirTek Front Suspension / 57	
Torque Requirements / 57	
<b>Rear Axle &amp; Suspension / 159</b>	
Overview / 159	
Maintenance / 161	
Rear Suspension & Axle Removal / 161	
Air Rear Suspension / 167	



SERVICE MANUAL

**Power / Drivetrain / 201**

- Overview / 201
- Engine/Transmission Removal / 201
- Transmission / 208
- Transmission Maintenance / 209
- Transmission Removal / 213
- Shifter Removal / 216
- Shift Cable Removal / 217
- Drive Line / 219

**Hydraulic Brakes / 221**

- Overview / 221
- Maintenance / 223
- Master Cylinder / 224
- Booster / 225
- ABS Modulator / 227
- Wheel Speed Sensors / 228
- ECU (Electronic Control Unit) / 230
- Calipers / 231
- Brake Pads / 232
- Brake Rotors / 233
- Brake Interlock, Hydraulic / 239
- Parking Brake / 245

**Air Brakes / 337**

- Overview / 337
- Brake Interlock / 342
- Maintenance Overview / 344
- Air Compressor / 345
- Air Compressor Governor (D-2) / 345
- Air Dryer (Optional) / 347
- Air Tanks / 350
- Treadle Valve (E-8P) / 352
- Relay Valve (R-12H) / 354
- Quick Release Valve (QR-1H) / 355
- Park Control Valve (PP-DC) / 356
- Spring Brake Modulating Valve (SR-7) / 358
- ABS Modulator Valves (M-32QR) / 360
- ABS Wheel Speed Sensors (WS-20) / 362
- ABS Controller (EC-30) / 364
- Brake Chambers, Front / 365
- Brake Chambers, Rear / 366
- Slack Adjusters / 370
- Brake Shoes & Drums / 372

201

221

337



SERVICE MANUAL





<b>Cooling / 549</b>	
Overview / 549	
Maintenance / 551	
Cooling System Maintenance Schedule / 551	
Coolant Filter / 553	
Radiator / 554	
Fan Clutch / 557	
Troubleshooting / 557	
Shutters / 560	
<b>Intake &amp; Exhaust / 563</b>	
Air Intake Assembly / 563	
Intake System Maintenance / 564	
Exhaust Assembly / 569	
Muffler Removal / 569	
<b>Fuel System / 571</b>	
Overview / 571	
Fuel Filters / 572	
Fuel Tank / 573	
Accelerator Control, Electronic / 577	
Throttle Position Sensor / 577	
Auto Calibration / 579	
Testing And Troubleshooting / 579	
<b>Instrumentation / 581</b>	
Overview / 581	
Instrument Panel Removal / 582	
Testing a Gauge By Substitution / 583	
<b>Multiplex System / 623</b>	
Overview / 623	
MPX Module / 624	
Sleep Mode / 627	
Diagnostic Mode / 627	
Multiplex References / 628	
Input / Output Tables / 632	
Ladder Logic Diagrams / 634	
Troubleshooting In Diagnostic Mode / 637	
<b>Body Electrical / 645</b>	
Doran Warning Light Monitor / 645	
Doran Troubleshooting / 645	
Body Wiring Schematics / 647	

549

563

571

581

623

645



SERVICE MANUAL

**Chassis Electrical / 653**

- Charging System / 653
- Maintenance / 653
- Troubleshooting / 654
- Alternator Removal / 657
- Automatic Belt Tensioner / 659
- Starter / 660
- Preventative Maintenance / 660
- Troubleshooting / 660
- Starter Motor Removal / 666
- Chassis Wiring Schematics / 667
- Hydraulic Brake Booster Harness / 668

**Steering / 721**

- Overview / 721
- Steering System Maintenance / 722
- Steering Wheel & Switches / 724
- Steering Column & Intermediate Steering Shaft / 726
- Steering Gear / 727
- Pitman Arm / 729
- Drag Link / 729
- Tie Rods / 730
- Steering Pump / 732

**Body Structure / 795**

- Body Glass / 795
- Windshield Glass Replacement / 795
- Split Sash Window and Glass Replacement / 796
- Rear Vision Glass Replacement / 797
- Transit Sliding Window Removal / 798
- Transit Window Glass Replacement / 798
- Outward Opening Entrance Door / 800
- Interlink Adjustment / 800
- Manual Door Control / 802
- Pneumatic Door Opener / 803
- Electric Door Opener / 804
- Door Panels / 805
- Stop Arms / 808

653

721

795



SERVICE MANUAL

**Seating / REstraints / Handrails / 809**

- Overview / 809
- Driver's Seat / 809
- Manually Operated Driver's Seat / 810
- Seat Care and Cleaning Tips / 810
- Passenger DOT Seats / 811
- Track Mounted Passenger Seats / 812
- Seat Belts & Shoulder Harnesses / 813

**Index / 817****809****817**



SERVICE MANUAL