


## Fastener Tightening Specifications

Application	Specification	
	Metric	English
Coat Hook Screws	1 N·m	9 lb in
Door Handle Bezel Screws	1.9 N·m	17 lb in
Door Pull Handle Screws	1.9 N·m	17 lb in
Door Trim Panel Screws	2 N·m	18 lb in
Door Trim Plate Screws	1.9 N·m	17 lb in
Garnish Molding Screws	2 N·m	18 lb in
Sunshade Screws	2 N·m	18 lb in


## Front Side Door Inside Handle Bezel Replacement

### Removal Procedure

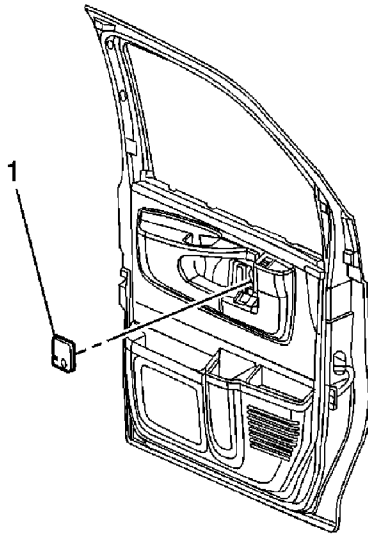

1. Press the retaining tab on the inside door handle bezel (1) in order to release the inside door handle bezel (1) from the front door trim plate.
2. Remove the inside door handle bezel (1) from the vehicle.

### Installation Procedure

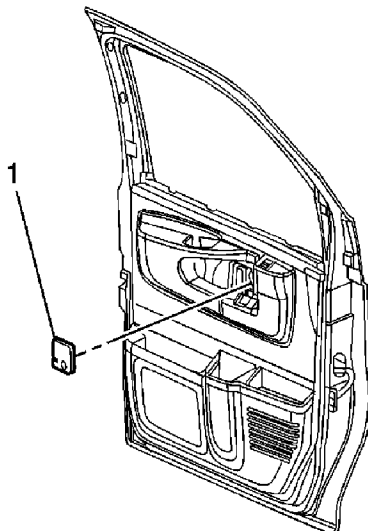


© 2010 General Motors Corporation. All rights reserved.



1. Align the inside door handle bezel (1) to the front door trim plate.
2. Press the door handle bezel towards the door trim panel in order to engage the retaining tab.


## Rear Door Inside Handle Bezel Replacement

### Removal Procedure

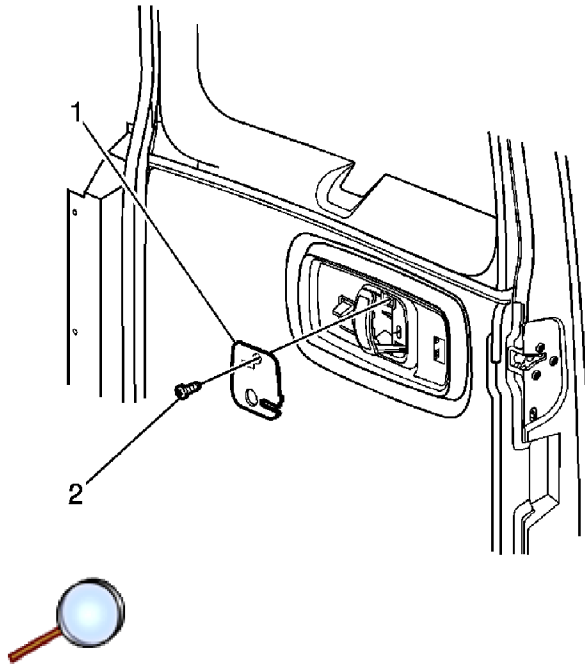

1. Remove the screw (2) from the inside door handle bezel.
2. Press the retaining tab on the inside door handle bezel (1) in order to release the inside door handle bezel (1) from the front door trim plate.
3. Remove the inside door handle bezel (1) from the vehicle.

### Installation Procedure

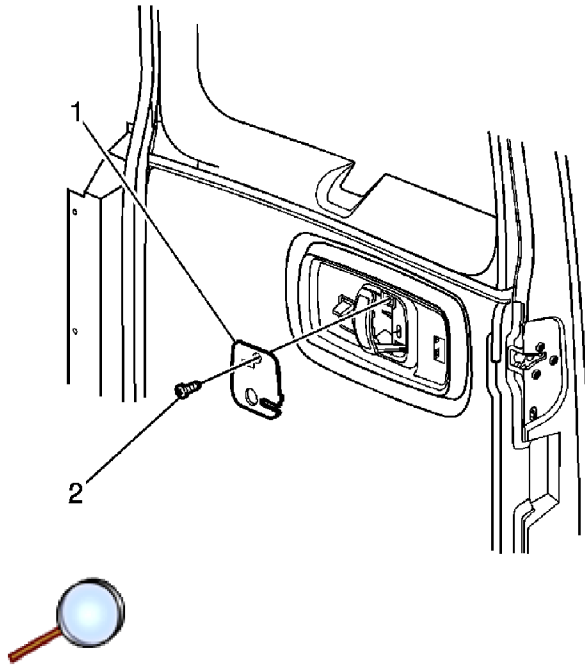


1. Align the inside door handle bezel (1) to the front door trim plate.
2. Press the door handle bezel towards the door trim panel in order to engage the retaining tab.

**Caution:** Refer to [Fastener Caution](#) in the Preface section.

3. Install the bezel screw (2) and tighten to **1.9 N·m (17 lb in)**.


## Rear Door Trim Plate Replacement

### Removal Procedure

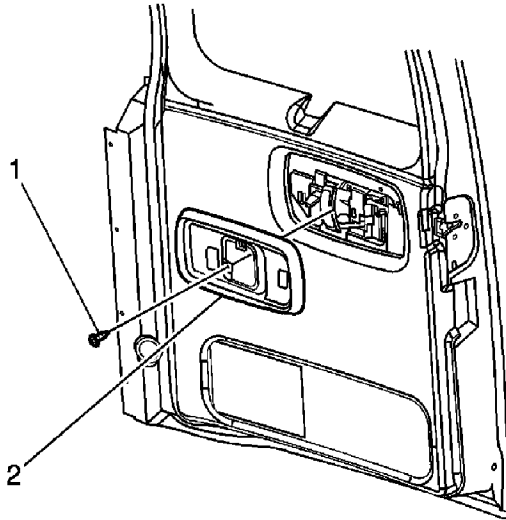

1. Remove the inside door handle bezel. Refer to [Rear Door Inside Handle Bezel Replacement](#).
2. Remove the screw (1) from the door trim plate (2).
3. Partially remove the trim plate (2) from the door trim panel.
4. Disconnect the electrical connectors from the door lock switch, if equipped.
5. Remove the front door trim plate (2) from the vehicle.

### Installation Procedure

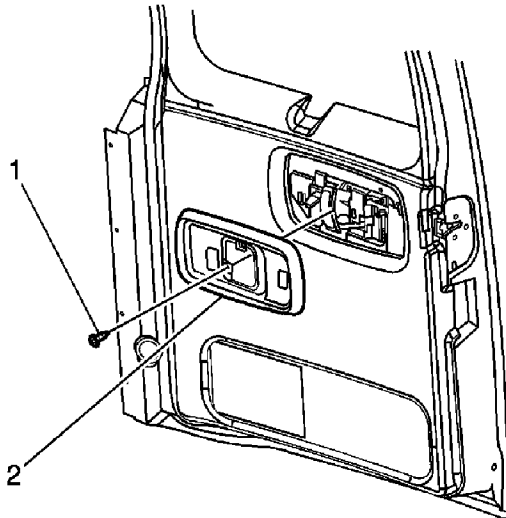

1. Partially install the door trim plate (2) to the door trim panel.
2. Connect the electrical connector to the door lock switch, if equipped.
3. Align the door trim plate (2) to the door trim panel

**Caution:** Refer to [Fastener Caution](#) in the Preface section.


4. Install the screw (1) and tighten to **1.9 N·m (17 lb in)**.
5. Install the inside door handle bezel. Refer to [Rear Door Inside Handle Bezel Replacement](#).

# Front Side Door Trim Panel Replacement

## Special Tools

[J 38778](#) Door Trim Pad and Garnish Clip Remover


## Removal Procedure

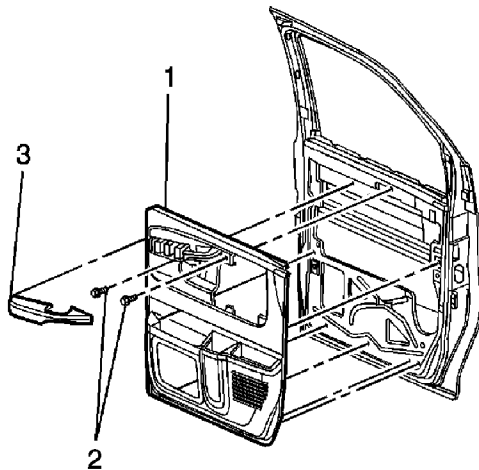

1. Remove the front door garnish molding. Refer to [Front Side Door Front Garnish Molding Replacement](#).
2. Remove the front door trim plate. Refer to [Front Door Trim Plate Replacement](#).
3. Remove the armrest (3). Refer to [Armrest Replacement](#).
4. Remove the door trim panel screws (2), located behind the armrest.
5. Use the [J 38778](#) to disengage the retainers around the outside edges of the door trim panel (1).
6. Slide the door trim panel (1) upwards to release the door panel from the door.
7. Remove the front door panel (1) from the vehicle.

## Installation Procedure



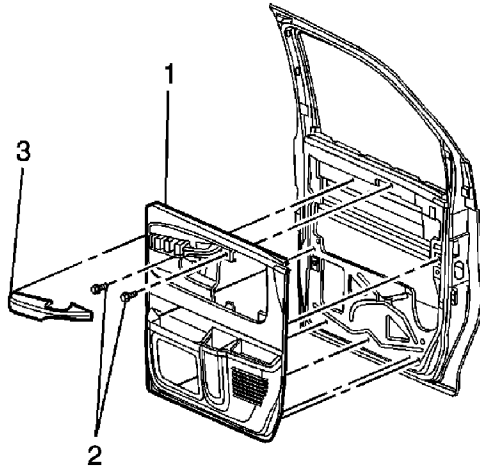

1. Install the door trim panel (1), by hooking the top of the door trim panel (1) to the door belt line.
2. Align the door trim panel retainers to the door.
3. Push towards the door to engage the retainers to the sheet metal.

**Caution:** Refer to [Fastener Caution](#) in the Preface section.


4. Install the door trim panel screws (2) and tighten to **2.0 N·m (18 lb in)**.
5. Install the armrest (3). Refer to [Armrest Replacement](#).
6. Install the front door trim plate. Refer to [Front Door Trim Plate Replacement](#).
7. Install the front door garnish molding. Refer to [Front Side Door Front Garnish Molding Replacement](#).

## Rear Side 60/40 Door Trim Panel Replacement - Left Side (E26, 40 Door)

### Special Tools

[J 38778](#) Door Trim Pad and Garnish Clip Remover

### Removal Procedure

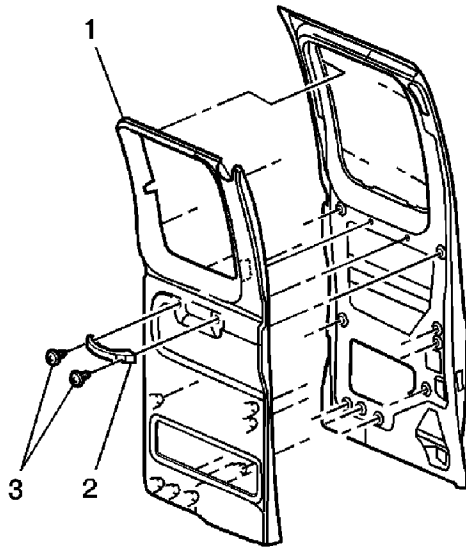


1. Remove the side door pull handle screws (3).
2. Remove the side door pull handle (2).
3. Use the [J 38778](#) to disengage the retainers around the outside edges of the lower portion of the door trim panel (1).
4. Carefully pull the door trim panel (1) out of the retainers around the window opening.

A long flat bladed tool may be necessary to aid in releasing the door trim panel (1) from the window opening retainers.

5. Remove the front door panel (1) from the vehicle.

### Installation Procedure

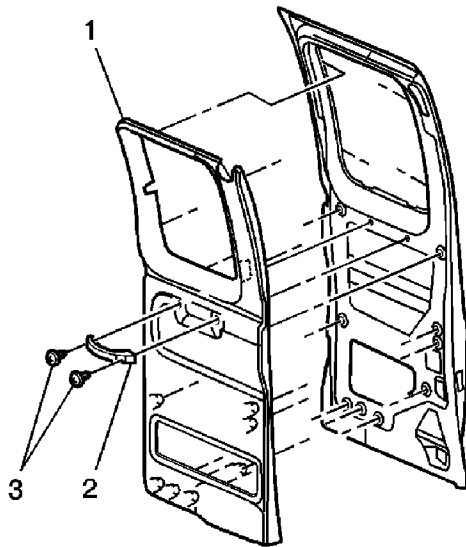

1. Install the door trim panel (1) to the door by performing the following:
  - Align the door trim panel (1) to the retainers in the window opening.
  - Push towards the door to engage the retainers.
  - Align the retainers on the edges of the lower portion of the door trim (1).
  - Push towards the door to engage the retainers.

**Caution:** Refer to [Fastener Caution](#) in the Preface section.


2. Install the pull handle (2) and screws (2) and tighten to **1.9 N·m (17 lb in)**.

## Rear Side 60/40 Door Trim Panel Replacement - Left Side (E26, 60 Door)

### Special Tools


[J 38778](#) Door Trim Pad and Garnish Clip Remover

### Removal Procedure

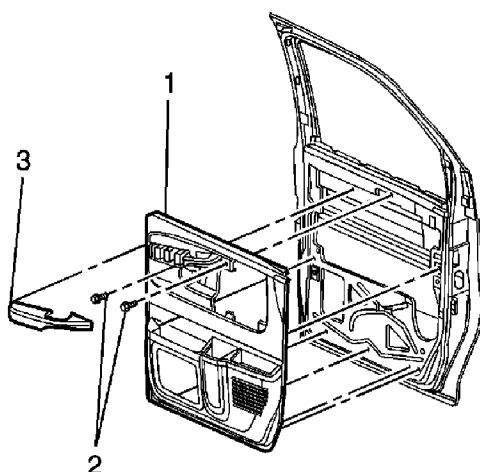

1. Remove the rear side door trim plate. Refer to [Rear Door Trim Plate Replacement](#).
2. Remove the armrest (3). Refer to [Armrest Replacement](#).
3. Remove the door trim panel screws (2), located behind the armrest.
4. Use the [J 38778](#) to disengage the retainers around the outside edges of the door trim panel (1).
5. Slide the door trim panel (1) upwards to release the door panel from the door.
6. Remove the rear side door panel (1) from the vehicle.

### Installation Procedure

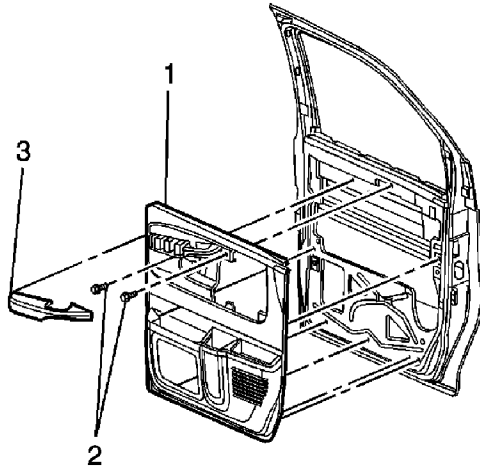

1. Install the rear side door trim panel (1), by hooking the top of the door trim panel (1) to the door belt line.
2. Align the door trim panel retainers to the door.
3. Push towards the door to engage the retainers to the sheet metal.

**Caution:** Refer to [Fastener Caution](#) in the Preface section.


4. Install the door trim panel screws (2) and tighten to **2.0 N·m (18 lb in)**.
5. Install the armrest (3). Refer to [Armrest Replacement](#).
6. Install the rear side door trim plate. Refer to [Front Door Trim Plate Replacement](#).

## Rear Side 60/40 Door Trim Panel Replacement - Right Side (E24, 40 Door)

### Tools Required

[J 38778](#) Door Trim Pad and Garnish Clip Remover

### Removal Procedure

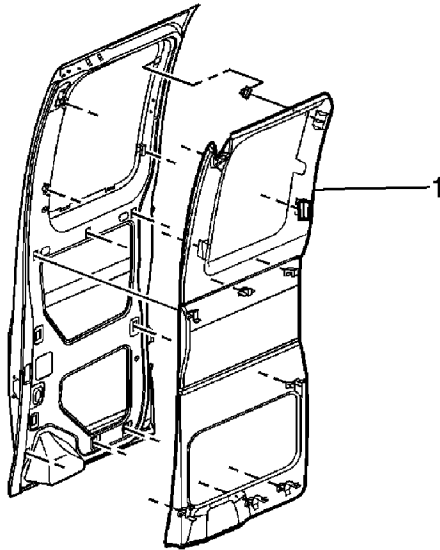


1. Use the [J 38778](#) to disengage the retainers around the outside edges of the lower portion of the door trim panel (1).
2. Carefully pull the door trim panel (1) out of the retainers around the window opening.

A long flat bladed tool may be necessary to aid in releasing the door trim panel (1) from the window opening retainers.

3. Remove the front door panel (1) from the vehicle.

### Installation Procedure

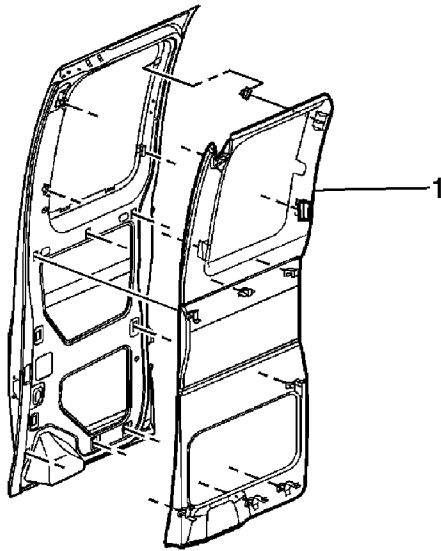

1. Install the door trim panel (1) to the door by performing the following:

Align the door trim panel (1) to the retainers in the window opening.


2. Push towards the door to engage the retainers.
3. Align the retainers on the edges of the lower portion of the door trim (1).
4. Push towards the door to engage the retainers.

## Rear Side 60/40 Door Trim Panel Replacement - Right Side (E24, 60 Door)

### Special Tools

[J 38778](#) Door Trim Pad and Garnish Clip Remover

### Removal Procedure

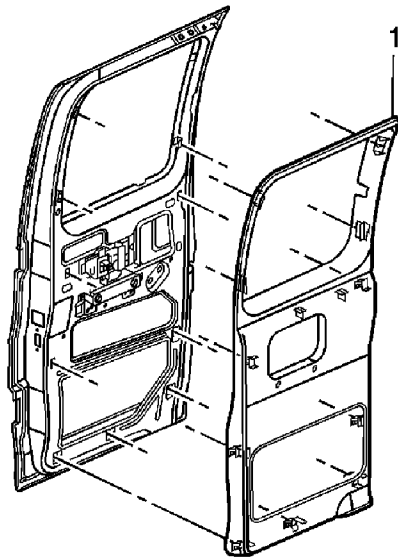


1. Remove the rear side door trim plate. Refer to [Rear Door Trim Plate Replacement](#).
2. Remove the side door pull handle screws.
3. Remove the side door pull handle.
4. Use the [J 38778](#) to disengage the retainers around the outside edges of the lower portion of the door trim panel (1)
5. Carefully pull the door trim panel (1) out of the retainers around the window opening.

A long flat bladed tool may be necessary to aid in releasing the door trim panel (1) from the window opening retainers.

6. Remove the door panel (1) from the vehicle.

### Installation Procedure



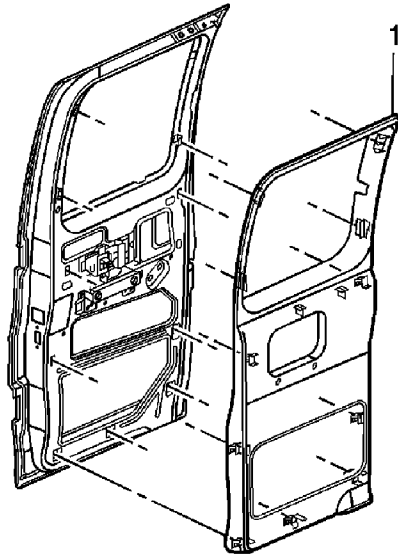


1. Install the door trim panel (1) to the door by performing the following:
  - Align the door trim panel (1) to the retainers in the window opening.
  - Push towards the door to engage the retainers.
  - Align the retainers on the edges of the lower portion of the door trim (1).
  - Push towards the door to engage the retainers.

**Caution:** Refer to [Fastener Caution](#) in the Preface section.

2. Install the pull handle and screws and tighten to **1.9 N·m (17 lb in)**.
3. Install the rear side door trim plate. Refer to [Rear Door Trim Plate Replacement](#).


## Sliding Rear Side Door Trim Panel Replacement

### Removal Procedure

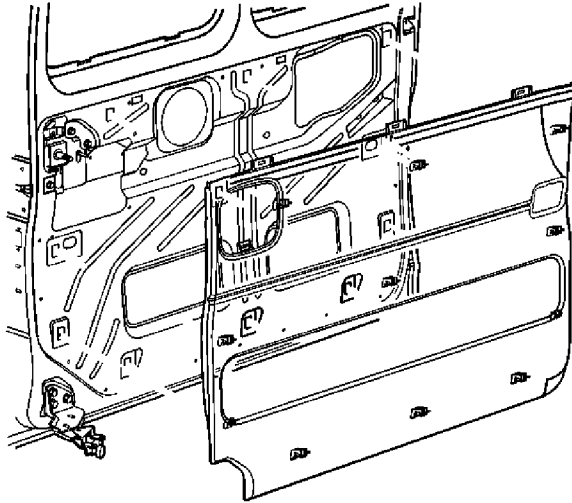

1. Remove the sliding side door inside door handle bezel. Refer to [Rear Door Inside Handle Bezel Replacement](#).
2. Remove the sliding door garnish molding. Refer to [Rear Side Door Garnish Molding Replacement](#).
3. Pull out on the sliding side door trim panel in order to disengage the retainers.
4. Remove the sliding side door lower trim panel from the vehicle.

### Installation Procedure

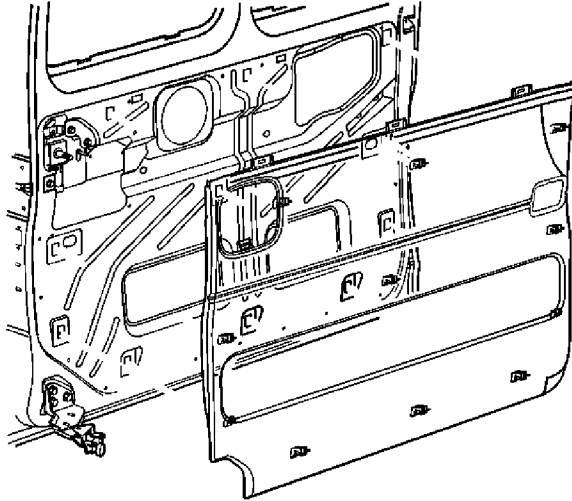


1. Install the sliding side door trim panel by aligning the retainers on the panel to the slots in the door.

Push the door panel towards the door to engage the retainers.

2. Install the sliding door garnish molding. Refer to [Rear Side Door Garnish Molding Replacement](#).
3. Install the sliding side door inside door handle bezel. Refer to [Rear Door Inside Handle Bezel Replacement](#).


## Front Side Door Water Deflector Replacement

### Removal Procedure

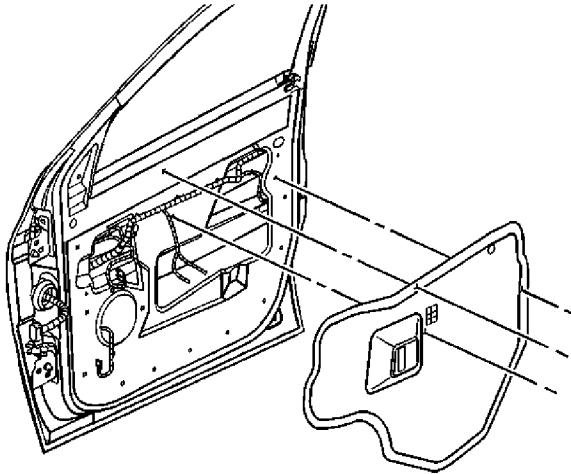

1. Remove the front door trim panel. Refer to [Front Side Door Trim Panel Replacement](#) .
2. Remove the front door water deflector from the front door inner panel.
3. Remove the gasket from the inside door handle if equipped.
4. Pull the electrical connectors through the slit in the door handle cut out.

### Installation Procedure

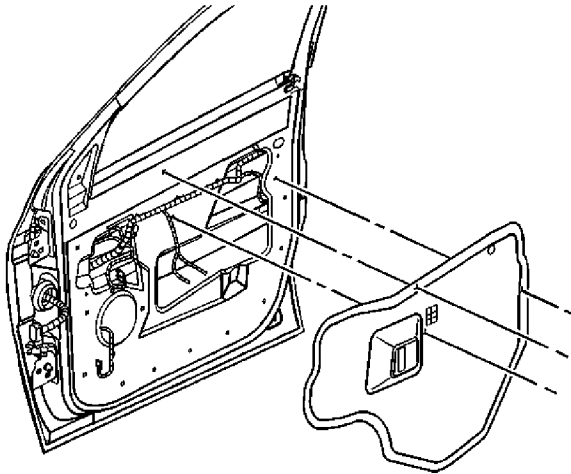


1. Align the front door water deflector to the front door inner panel.

Secure the water deflector at the corners.

2. Pull the front door electrical connectors through the slit in the door handle cut out.
3. Install the front door water deflector, start pressing the adhesive pattern at the bottom center and working outward and upward in order to prevent puckering.
4. Install the gasket to the inside door handle if equipped.
5. Install the front door trim panel. Refer to [Front Side Door Trim Panel Replacement](#) .

## Front Side Door Front Garnish Molding Replacement Removal Procedure

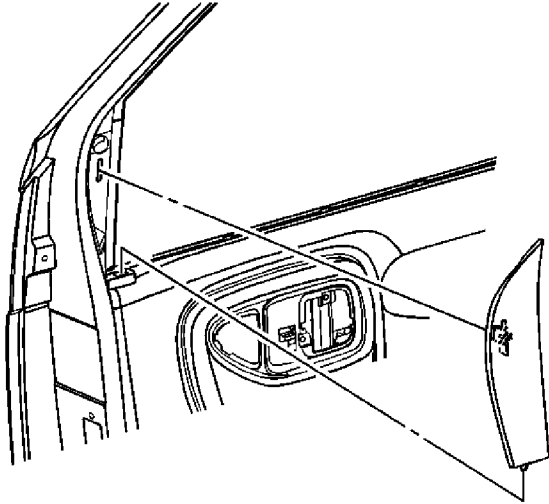


1. Grasp the front door front garnish molding.

Gently pull at the top of the molding in order to disengage the retaining clips.


2. Lift the front door front garnish molding up to disengage the tab on the garnish molding from the slot on the door trim panel.
3. Inspect the front door front garnish molding for broken or missing retaining clips. Replace any clips, if needed.

## Installation Procedure

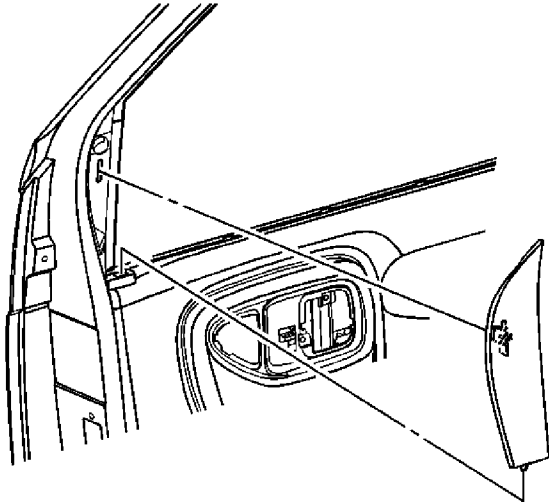

1. Install the front door front garnish molding to the vehicle.
2. Insert the tab on the bottom of the garnish molding into the slot at the top of the door trim panel.
3. Align the retainers on the front door front garnish molding with the slots in the door.
4. Push on the molding in order to engage the retainers.

## Front Side Door Rear Garnish Molding Replacement Removal Procedure

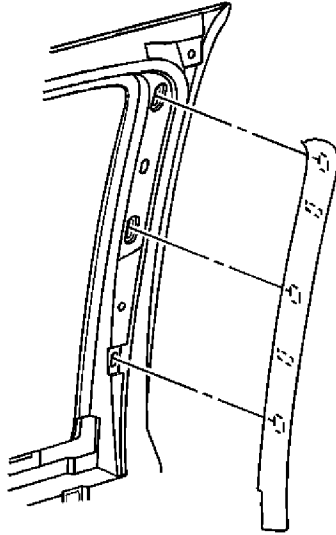


1. Grasp the front door rear garnish molding.

Gently pull the molding in order to disengage the retaining clips.

2. Remove the front door rear garnish molding from the vehicle.
3. Inspect the front door rear garnish molding for broken or missing retaining clips. Replace any clips, if needed.

## Installation Procedure




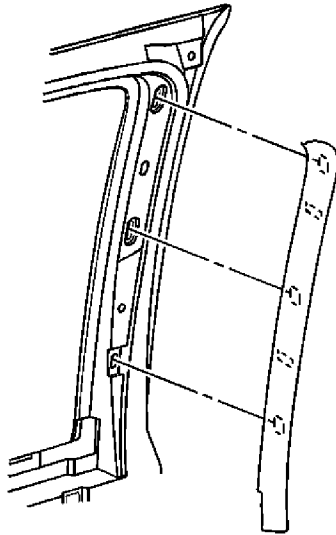

1. Install the front door rear garnish molding to the vehicle.
2. Align the retainers on the front door rear garnish molding with the slots in the door.
3. Push on the molding in order to engage the retainers.


## Rear Side Door Upper Track Garnish Molding Replacement

### Removal Procedure

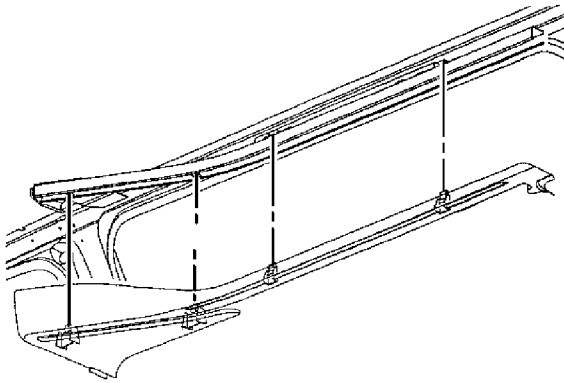

1. Remove the center pillar upper garnish molding. Refer to [Center Pillar Upper Garnish Molding Replacement - Right Side](#).
2. Remove the right roof side rail garnish molding. Refer to [Roof Side Rail Garnish Molding Replacement - Right Side](#).
3. Grasp and gently pull down on the sliding side door upper track garnish in order to disengage the retaining clips.
4. Remove the sliding side door upper track garnish from the vehicle.
5. Inspect the sliding side door upper track garnish for broken or missing retaining clips. Replace the retaining clips as needed.


### Installation Procedure

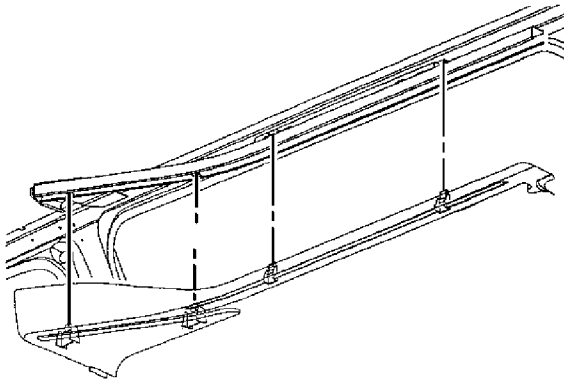

1. Install the sliding side door upper track garnish to the vehicle.
2. Align the sliding side door upper track garnish into position.
3. Press the garnish in order to engage the retaining clips.
4. Install the right roof side rail garnish molding. Refer to [Roof Side Rail Garnish Molding Replacement - Right Side](#) .
5. Install the center pillar upper garnish molding. Refer to [Center Pillar Upper Garnish Molding Replacement - Right Side](#) .

## Rear Side Door Garnish Molding Replacement

### Removal Procedure

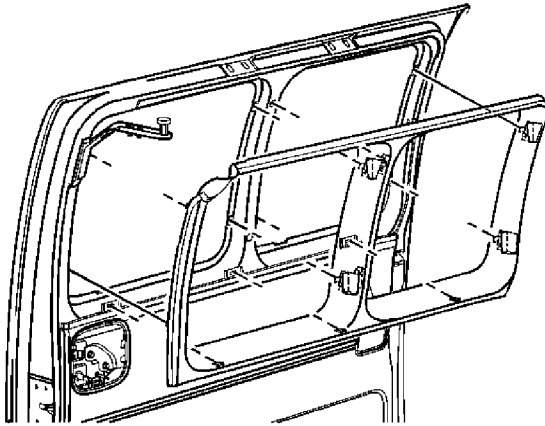


1. Grasp the sliding side door upper trim panel .

Pull on the panel in order to disengage the retaining clips.

2. Inspect the sliding side door upper trim panel for broken or missing clips.

Replace the clips if needed.

### Installation Procedure

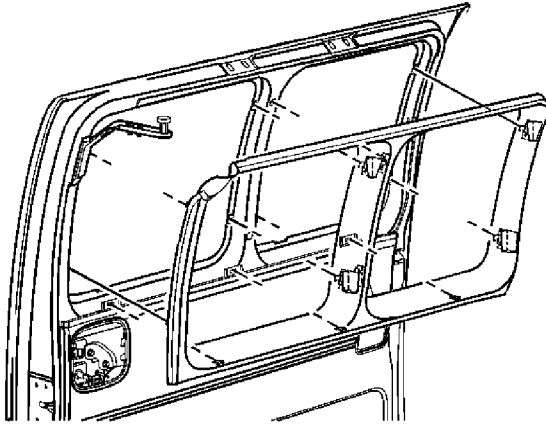


1. Install the sliding side door upper trim panel to the vehicle.
2. Align the tabs on the trim panel with the retainers on the door.

Press the trim panel into place.


## Armrest Replacement

### Removal Procedure

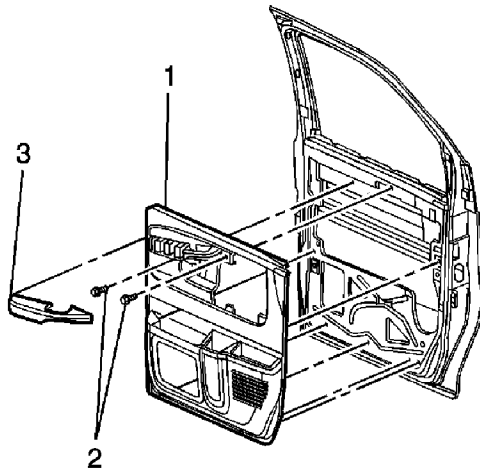

1. Insert a flat bladed tool at the rear of the armrest (3).
2. Pull away from the door trim panel in order to disengage the armrest clips.
3. Remove the armrest (3).

### Installation Procedure

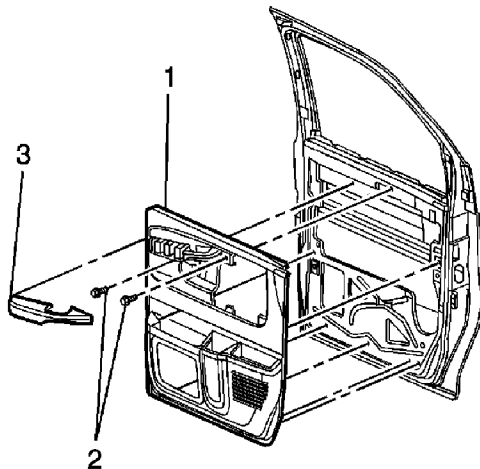




1. Align the armrest (3) to the front door panel.
2. Press the armrest (3) towards the door trim panel in order to engage the armrest clips.

## Body Hinge Pillar Trim Panel Replacement


### Removal Procedure

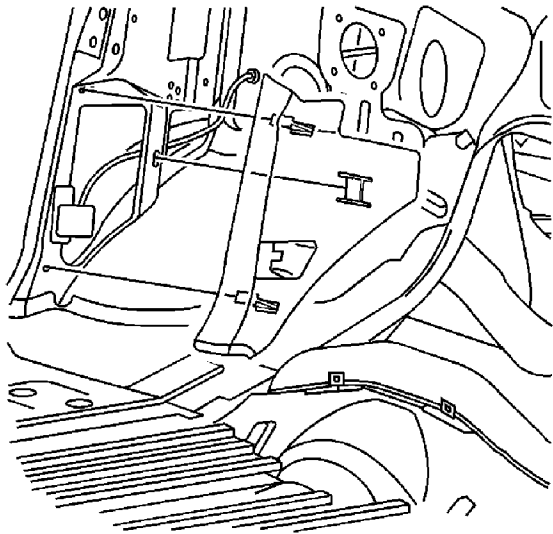

1. Gently pull the hinge pillar trim panel in order to release the retaining clips.
2. Remove the hinge pillar trim from the vehicle.
3. Inspect the hinge pillar trim panel for broken or missing retaining clips. Replace the retaining clips as needed.

### Installation Procedure




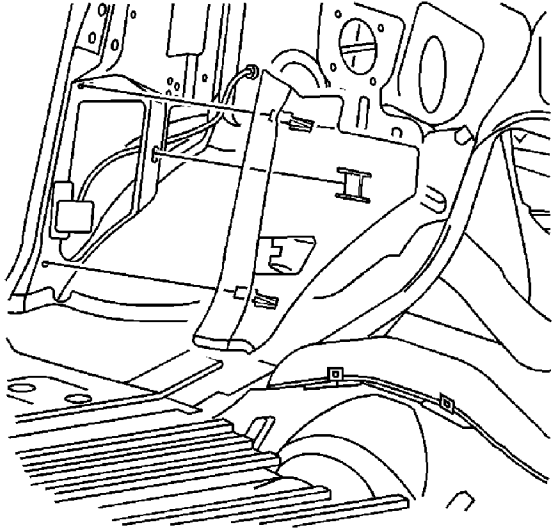

1. Install the hinge pillar trim panel to the vehicle.
2. Align the locator pins. Press on the hinge pillar trim panel in order to engage the retaining clips.

## Engine Cover Replacement

### Removal Procedure

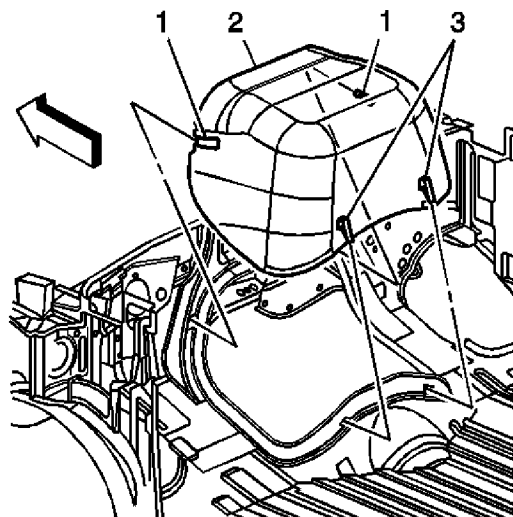


1. Remove the front passenger seat. Refer to [Driver or Passenger Seat Replacement](#) .
2. Remove the instrument panel lower extension, if equipped. Refer to [Instrument Panel Lower Extension Replacement](#) .
3. Remove the left knee bolster. Refer to [Driver Knee Bolster Replacement](#) .
4. Remove the right knee bolster. Refer to [Passenger Knee Bolster Replacement](#) .
5. Release the engine cover retainers (1, 3).

**Important:** Remove the cover by pulling directly rearward to avoid contact between the cover and the engine components beneath the cover.

6. Remove the engine cover from the vehicle (2).

### Installation Procedure

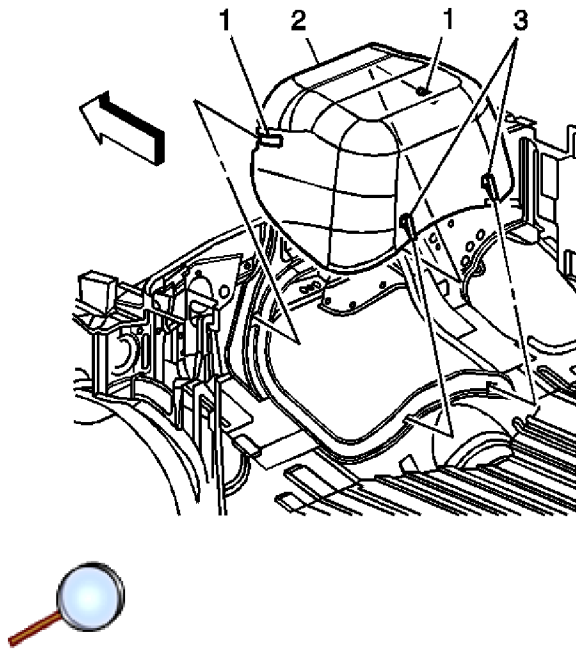**Important:**


- Ensure that the engine cover sealing strip is properly seated between the engine cover and the vehicle.
- Install the cover by pushing directly forward until the seal is properly seated to avoid contact between the cover and the engine components beneath the cover.

1. Install the engine cover to the vehicle (2).
2. Install the engine cover retainers (1, 3).
3. Install the left knee bolster. Refer to [Driver Knee Bolster Replacement](#) .
4. Install the right knee bolster. Refer to [Passenger Knee Bolster Replacement](#) .
5. Install the instrument panel lower extension, if equipped. Refer to [Instrument Panel Extension Replacement](#) .
6. Install the front passenger seat. Refer to [Driver or Passenger Seat Replacement](#) .

## Front Side Door Step Mat Replacement


### Removal Procedure

1. Remove the hinge pillar trim panel. Refer to [Body Hinge Pillar Trim Panel Replacement](#).
2. Remove the front door lower pillar garnish molding. Refer to [Lower Pillar Garnish Molding Replacement](#).

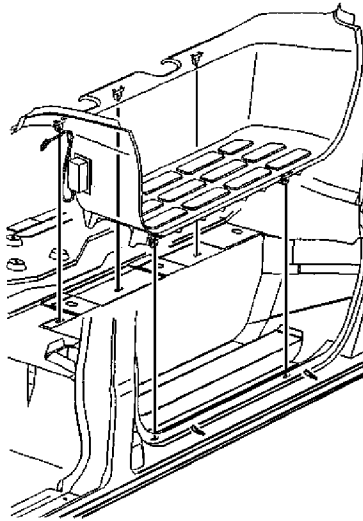

3. Grasp and gently pull up on the front door stepwell mat in order to release the retaining clips.
4. Disconnect the electrical connector for the stepwell lamp.
5. Remove the front door stepwell mat from the vehicle.
6. Inspect the front door stepwell mat for broken or missing retaining clips. Replace the retaining clips as needed.


### Installation Procedure

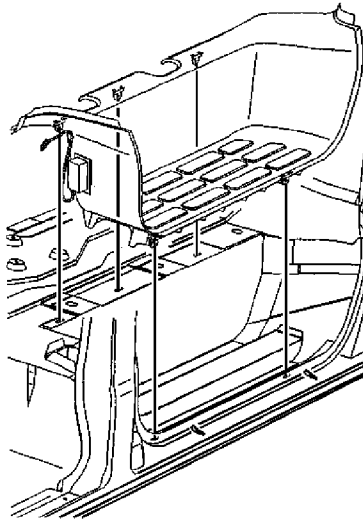

1. Install the front door stepwell mat to the vehicle.
2. Connect the electrical connector for the stepwell lamp.
3. Press down on the front door stepwell mat in order to engage the retaining clips.
4. Install the front door lower pillar garnish molding. Refer to [Lower Pillar Garnish Molding Replacement](#) .
5. Install the hinge pillar trim panel. Refer to [Body Hinge Pillar Trim Panel Replacement](#) .


## Front Assist Handle Replacement

### Removal Procedure

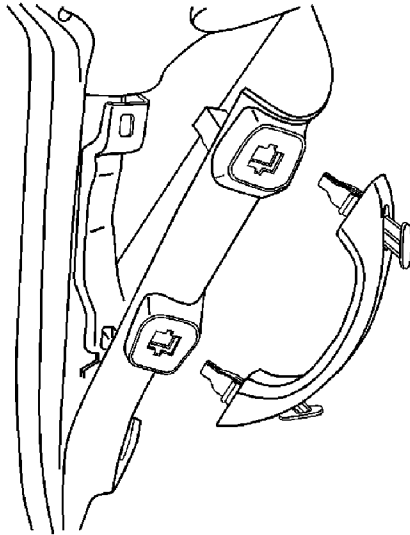

1. Using a suitable flat bladed tool, release the retaining tabs.
2. Remove the assist handle from the windshield pillar trim.


### Installation Procedure

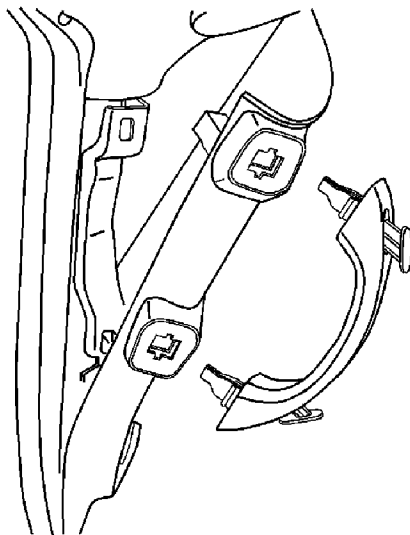



1. Install the assist handle to the windshield pillar.
2. Press in the assist handle retaining tabs.

## Coat Hook Replacement

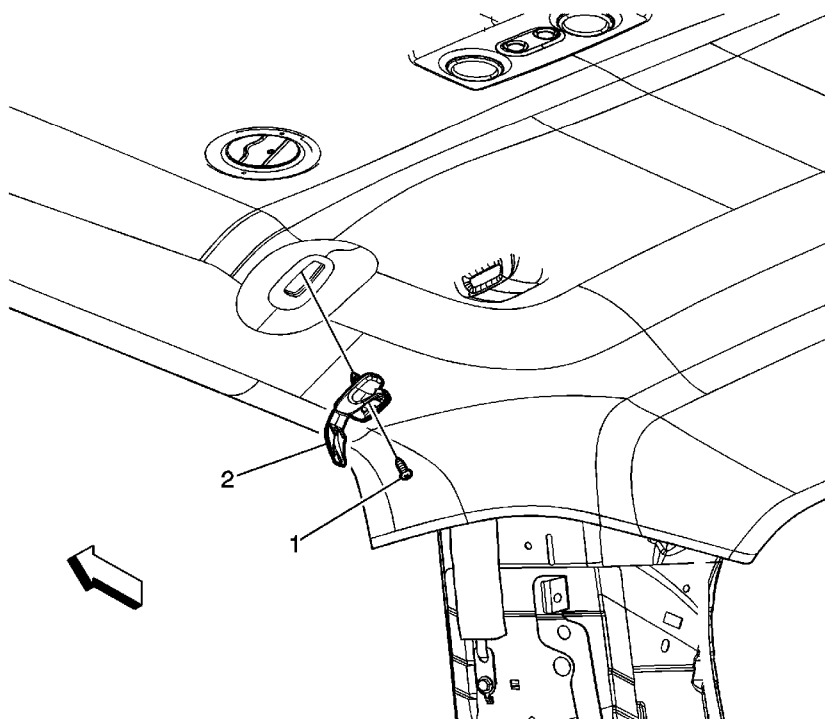


Callout	Component Name
1	Coat Hook Screw <b>Caution:</b> Refer to <a href="#">Fastener Caution</a> in the Preface section. <b>Tighten</b> 9 N·m (80 lb in)
2	Coat Hook Assembly <b>Tip</b> Flip the cover downward to access the fastener.




## Sunshade Replacement

### Removal Procedure

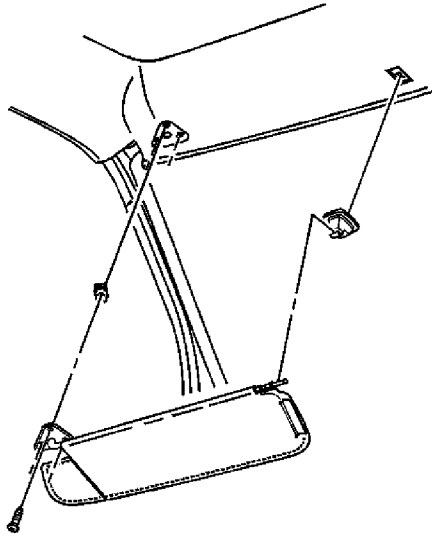

1. Unclip the sunshade from the support.

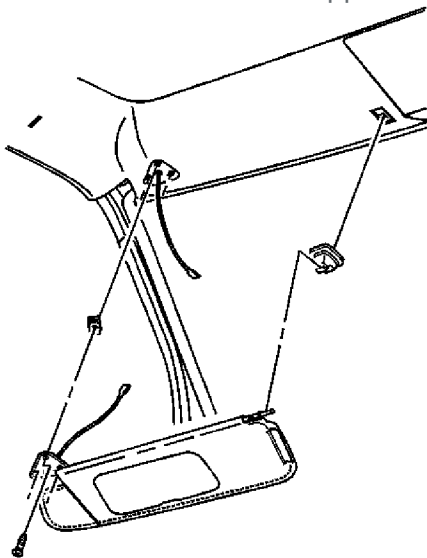


2. Remove the screws retaining the sunshade to the vehicle.
3. Disconnect the electrical connector, if equipped.
4. Remove the sunshade from the vehicle.


© 2010 General Motors Corporation. All rights reserved.

## Installation Procedure

1. Connect the electrical connector, if equipped.

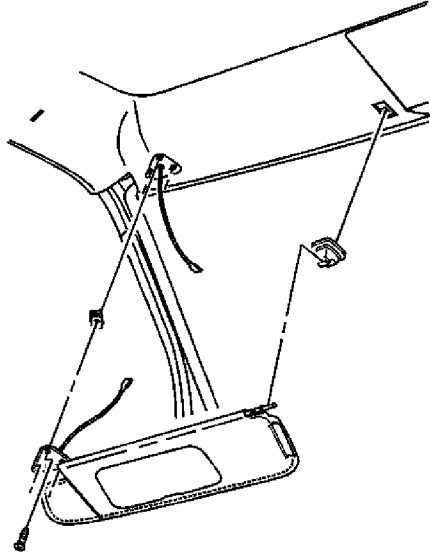


2. Install the sunshade to the vehicle.

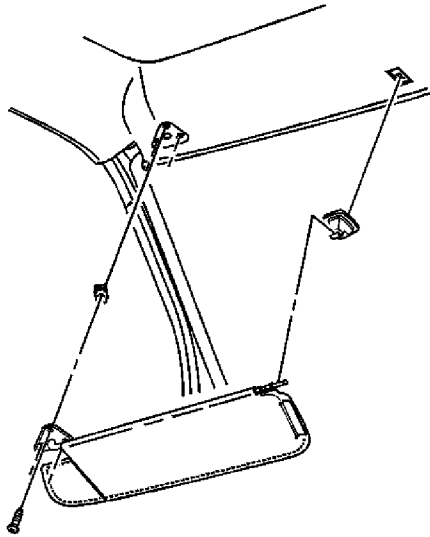

3. Install the screws in order to retain the sunshade to the vehicle.
4. Clip the sunshade to the support.


## Sunshade Anchor Replacement

### Removal Procedure

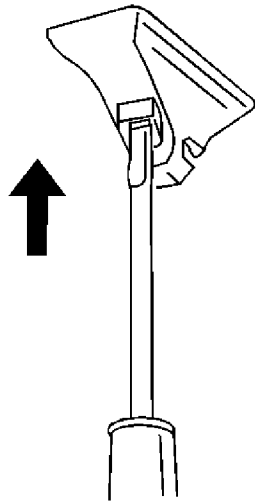

1. Unhook the sunshade from the anchor.
2. Use a flat-bladed tool in order to push upward on the service tab until the tab recesses into the anchor.
3. Pull down and remove the sunshade anchor.

### Installation Procedure

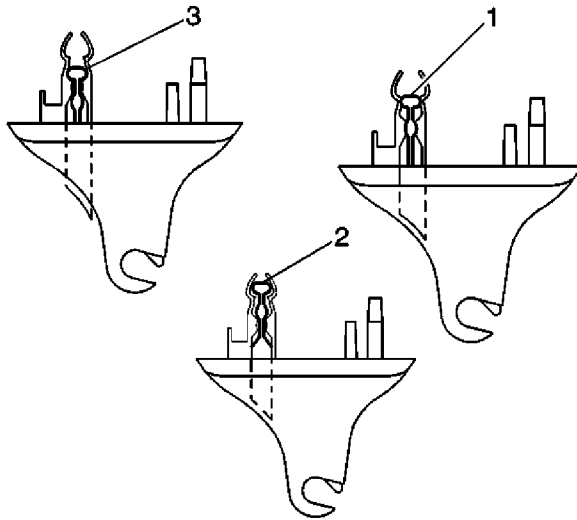


1. From inside the anchor, push down on the retaining tab until it extends below the anchor (3).
2. Position the anchor flush to the headliner.
3. Push up on the tab until it is flush with the anchor. This will lock the anchor in place.

## Windshield Garnish Molding Replacement

### Removal Procedure


1. Remove the passenger side assist handle. Refer to [Front Assist Handle Replacement](#) .

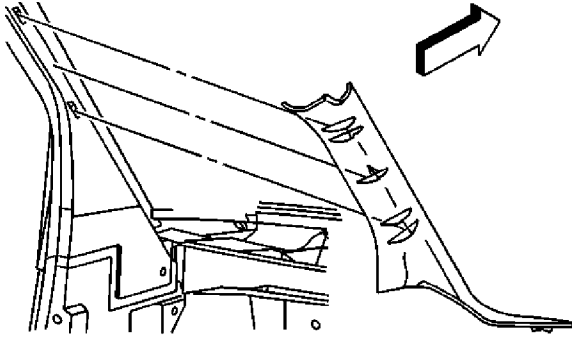

2. Grasp and gently pull the windshield garnish molding in order to release the clips.
3. Release lower retainer using flat blade tool.
4. Remove the windshield garnish molding from the vehicle.
5. Inspect the windshield garnish molding for broken or missing retaining clips.

Replace the windshield garnish molding or clips as needed.

### Installation Procedure

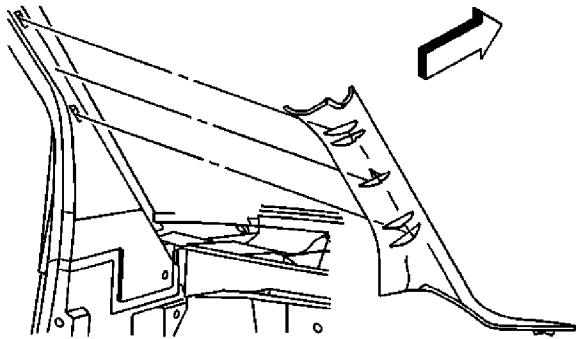


1. Install the windshield garnish molding to the vehicle.
2. Align the clips and press on the windshield garnish molding in order to engage the clips.
3. Install the passenger side assist handle. Refer to [Front Assist Handle Replacement](#) .

## Upper Pillar Garnish Molding Replacement


### Removal Procedure

1. Remove the front seat belt from the front seat belt height adjuster. Refer to [Front Seat Belt Retractor Replacement](#).
2. Open the access door and remove the screw, if equipped.

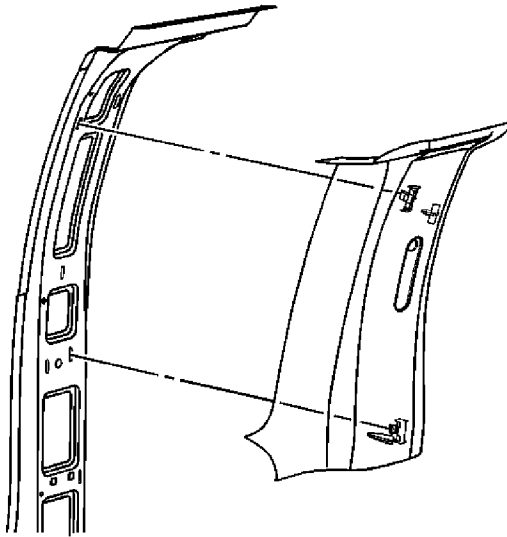

3. Grasp and gently pull the garnish molding in order to release the retaining clips.
4. Remove the front door upper pillar garnish molding from the vehicle.
5. Inspect the front door upper pillar garnish molding for broken or missing retaining clips.

### Installation Procedure

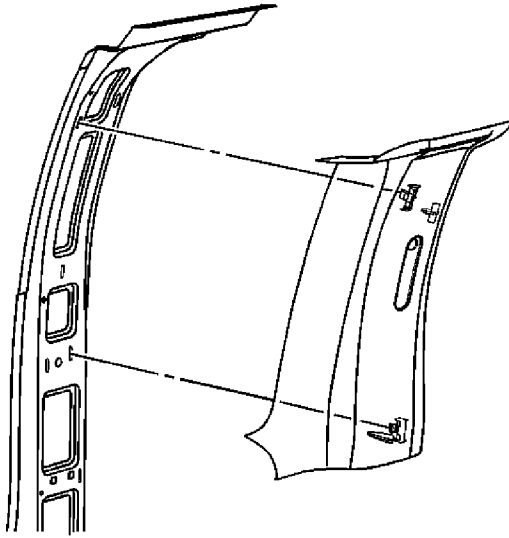


1. Install the front door upper pillar garnish molding to the vehicle.
2. Align the retainers to the body and press the garnish molding in order to engage the retaining.

**Caution:** Refer to [Fastener Caution](#) in the Preface section.

3. Install the screw and tighten to **2 N·m (18 lb in)**.
4. Install the front seat belt to the front seat belt height adjuster. Refer to [Front Seat Belt Retractor Replacement](#).




## Lower Pillar Garnish Molding Replacement

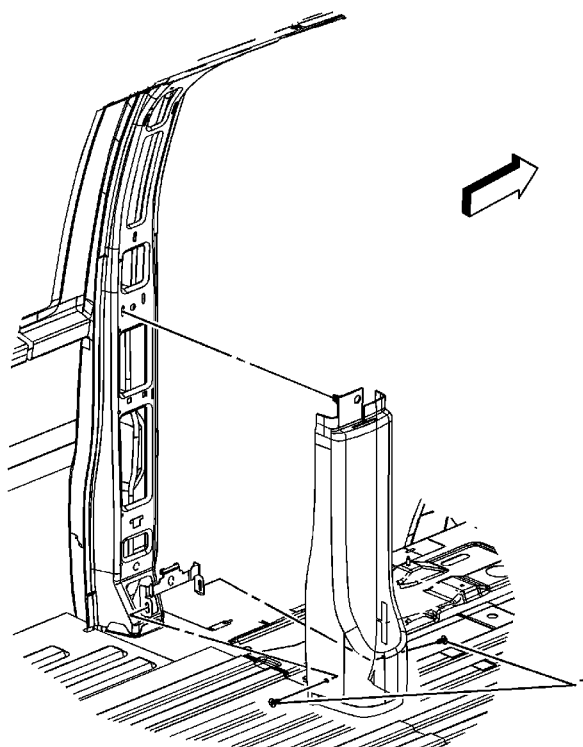


Callout	Component Name
<b>Preliminary Procedure</b>	
Remove the front door upper pillar garnish molding. Refer to <a href="#">Upper Pillar Garnish Molding Replacement</a> .	
1	Push in Retainers (Qty: 2)
2	Front Lower Pillar Garnish Molding
<b>Procedure</b>	
Remove the seat belt through the slot in the front lower pillar garnish molding.	

## Roof Side Rail Garnish Molding Replacement - Left Side

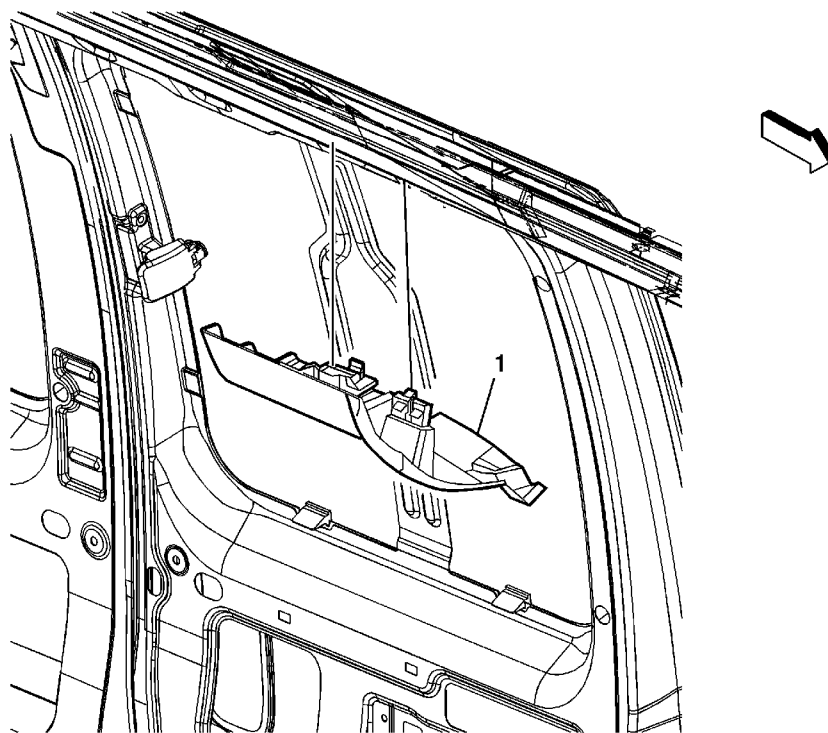

Callout	Component Name
<b>Preliminary Procedure</b>	
Remove the upper pillar garnish molding. Refer to <a href="#">Upper Pillar Garnish Molding Replacement</a> .	
1	<b>Roof Side Rail Garnish Molding</b>  <b>Procedure</b> <ol style="list-style-type: none"><li>1. Grasp and gently pull the upper pillar garnish molding away from the body in order to disengage the integral clips.</li><li>2. Disconnect the tether clip from the molding.</li></ol>

## Roof Side Rail Garnish Molding Replacement - Right Side

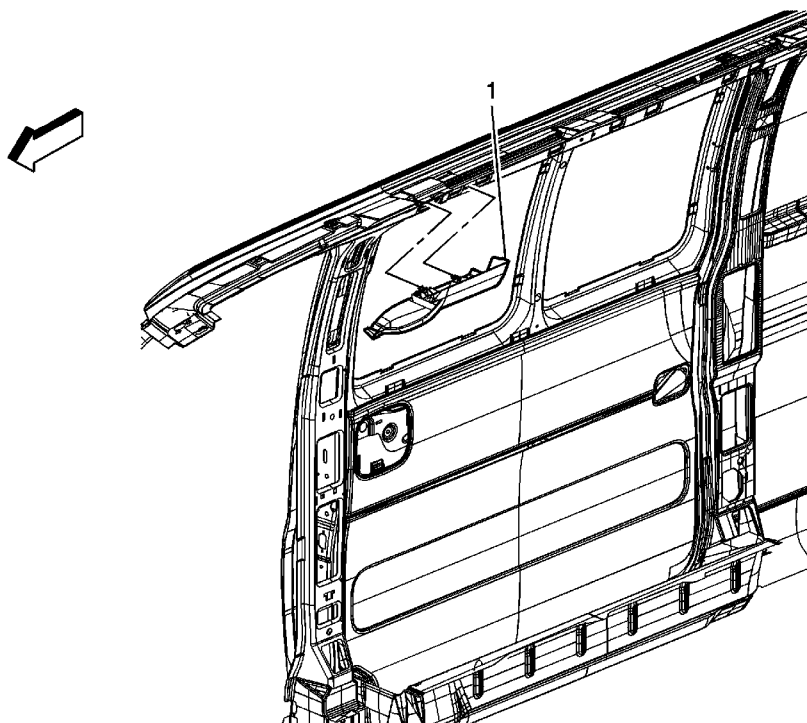


Callout	Component Name
<b>Preliminary Procedure</b>	
Remove the upper pillar garnish molding. Refer to <a href="#">Upper Pillar Garnish Molding Replacement</a> .	
1	<b>Roof Side Rail Garnish Molding</b>  <b>Procedure</b> <ol style="list-style-type: none"><li>1. Grasp and gently pull the upper pillar garnish molding away from the body in order to disengage the integral clips.</li><li>2. Disconnect the tether clip from the molding.</li></ol>

## Center Pillar Upper Garnish Molding Replacement - Right Side


### Removal Procedure

1. Remove the front seat belt from the front seat belt height adjuster. Refer to [Front Seat Belt Retractor Replacement](#).
2. Open the access door and remove the screw, if equipped.

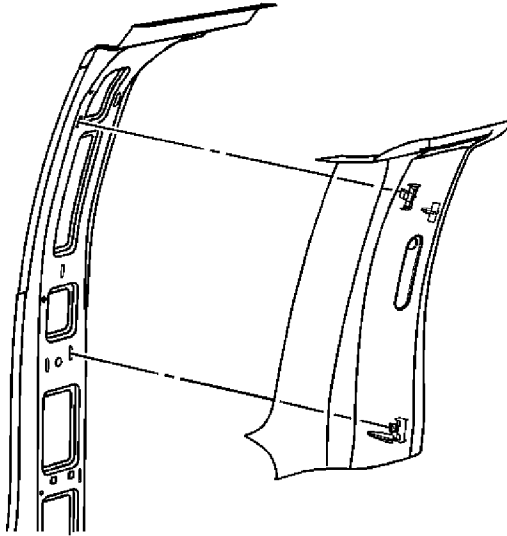

3. Grasp and gently pull the center pillar upper garnish molding in order to release the retaining clips.
4. Remove the center pillar upper pillar garnish molding from the vehicle.
5. Inspect the center pillar upper pillar garnish molding for broken or missing retaining clips.

### Installation Procedure

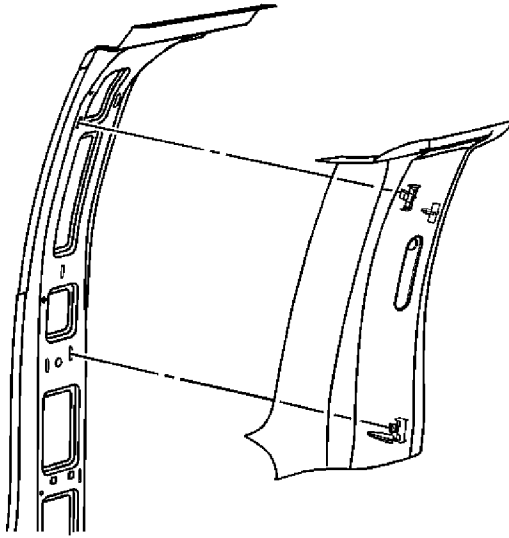


1. Install the center pillar upper pillar garnish molding to the vehicle.
2. Align the retainers to the body and press the center pillar garnish molding in order to engage the retaining.

**Caution:** Refer to [Fastener Caution](#) in the Preface section.

3. Install the screw and tighten to **2 N·m (18 lb in)**.
4. Install the front seat belt to the front seat belt height adjuster. Refer to [Front Seat Belt Retractor Replacement](#).


## Body Side Rear Garnish Molding Replacement

### Removal Procedure

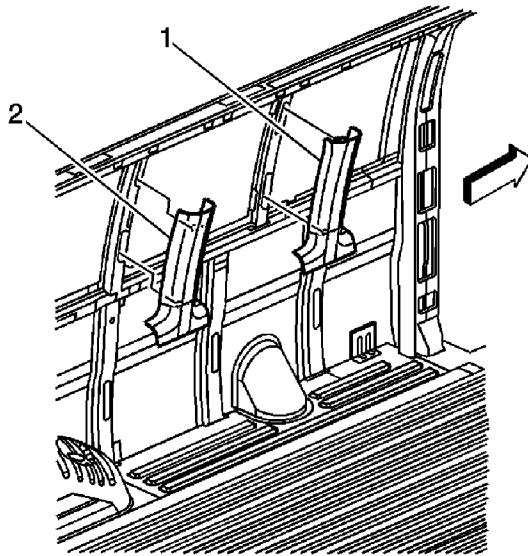

1. Open cover and remove screw, if equipped with roof rail inflatable restraints.
2. Pull out on the center pillar garnish (1 ,2) molding to disengage the clips.
3. Remove the center pillar garnish molding.

### Installation Procedure

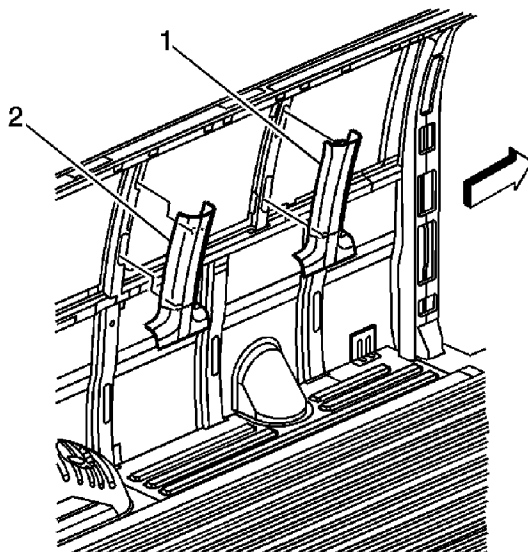

© 2010 General Motors Corporation. All rights reserved.




1. Align the body side upper (1 ,2) garnish molding clips to the holes in the body.
2. Push in on the body side upper (1 ,2) garnish molding to engage the clips.

**Caution:** Refer to [Fastener Caution](#) in the Preface section.

3. Install screw and close cover , if equipped with roof rail inflatable restraints and tighten to **2 N·m(18 lb in)**.

## Body Rear Corner Garnish Molding Replacement


### Removal Procedure

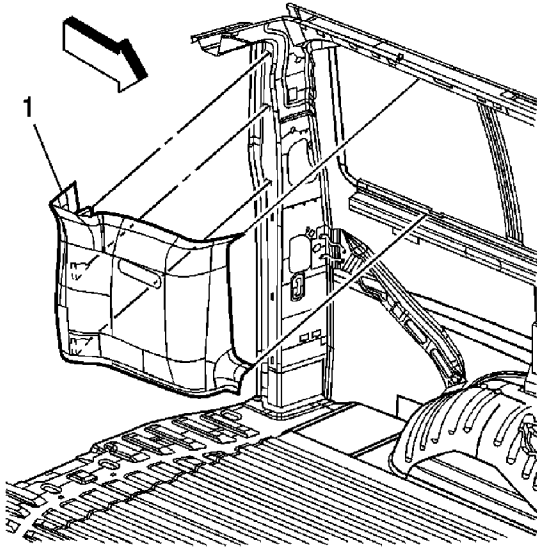

1. Remove the rear passenger seats when needed. Refer to [Rear Bench Seat Replacement](#) .
2. Remove the passenger side rear corner trim panel, for the passenger side of the vehicle only. Refer to [Body Rear Corner Trim Panel Replacement - Right Side](#) .
3. Pull down on the upper corners of the garnish molding (1) in order to disengage the retaining clips.
4. Pull in order to disengage the remaining retaining clips.
5. Remove the rear corner garnish molding (1) from the vehicle.
6. Inspect the rear corner garnish molding (1) for broken or missing clips. Replace the clips as needed.

### Installation Procedure




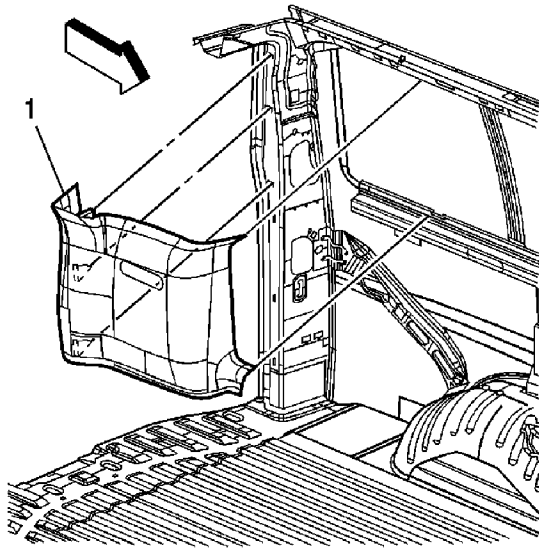

1. Install the rear corner garnish molding (1) to the vehicle.
2. Press on the rear corner garnish molding (1) in order to engage the clips.
3. Install the passenger side rear corner trim panel (1), for the passenger side of the vehicle only. Refer to [Body Rear Corner Trim Panel Replacement - Right Side](#) .
4. Install the rear passenger seats as needed. Refer to [Rear Bench Seat Replacement](#) .


## Rear Door Upper Garnish Molding Replacement

### Removal Procedure

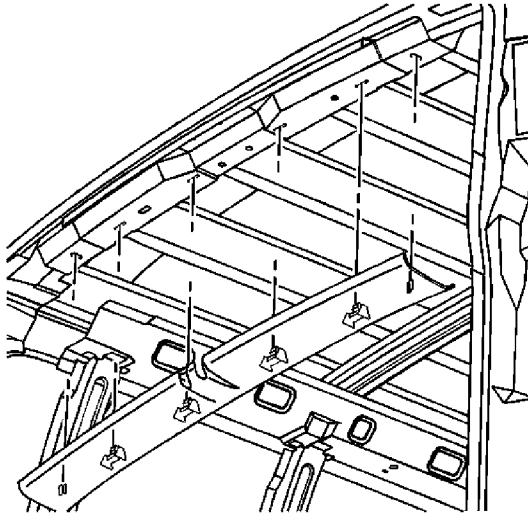


1. Remove body rear corner garnish molding. Refer to [Body Rear Corner Garnish Molding Replacement](#).
2. Grasp and gently pull the rear door opening frame garnish molding down in order to disengage the retaining clips.
3. Remove the rear door opening frame garnish molding from the vehicle.
4. Inspect the rear door opening frame garnish molding for broken or missing retaining clips. Replace the clips as needed.

### Installation Procedure

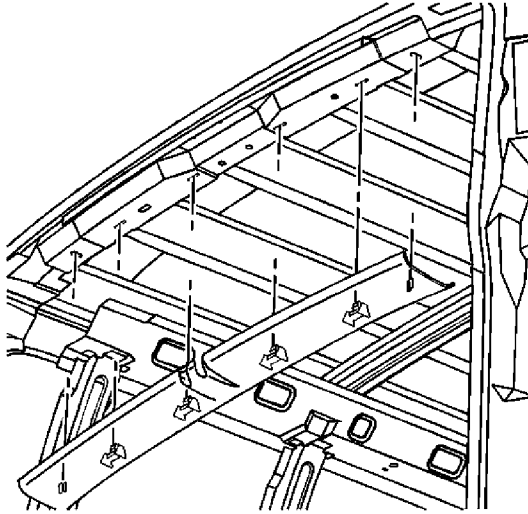

1. Install the rear door opening frame garnish molding to the vehicle.
2. Press on the rear door opening frame garnish molding in order to engage the retaining clips.
3. Install body rear corner garnish molding. Refer to [Body Rear Corner Garnish Molding Replacement](#) .


## Body Side Front Trim Panel Replacement - Left Side

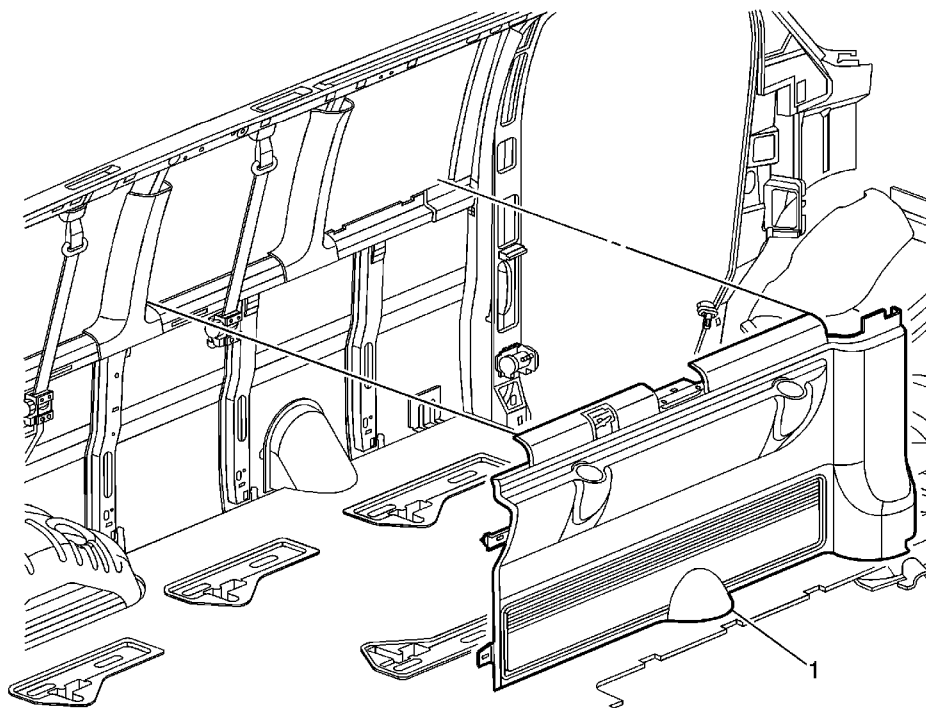

Callout	Component Name
<b>Preliminary Procedure</b>	
<ol style="list-style-type: none"><li>1. Remove the rear passenger seats as needed. Refer to <a href="#">Rear Bench Seat Replacement</a> .</li><li>2. Remove the front door lower pillar garnish molding. Refer to <a href="#">Lower Pillar Garnish Molding Replacement</a> .</li></ol>	
1	<b>Body Side Front Trim Panel Assembly</b> <b>Tip</b> Grasp and gently pull the body side front trim panel assembly in order to disengage the integral clips.


## Body Side Trim Panel Replacement - Left Side

### Removal Procedure

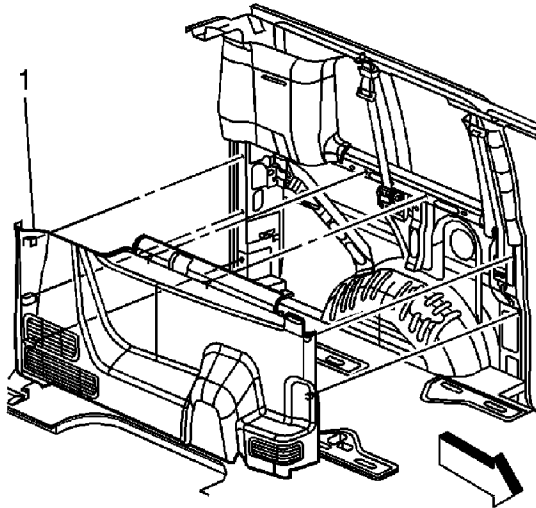

1. Remove the rear passenger seats as needed. Refer to [Rear Bench Seat Replacement](#) .
2. Remove the front door lower pillar garnish molding. Refer to [Lower Pillar Garnish Molding Replacement](#) .
3. Grasp and gently pull the body side front lower trim panel (1) in order to disengage the clips.
4. Remove the body side trim panel (1) from the vehicle.
5. Inspect the body side front lower trim panel (1) for broken or missing retaining clips. Replace the retaining clips as needed.

### Installation Procedure

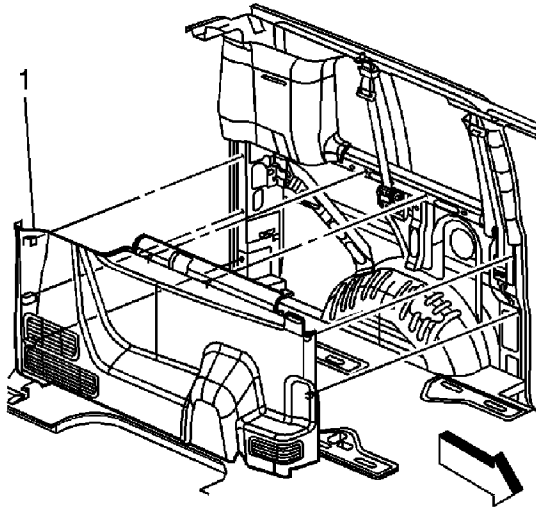


1. Install the body side trim panel (1) to the vehicle.
2. Press on the body side front lower trim pane (1) in order to engage the clips.
3. Install the front door lower pillar garnish molding. Refer to [Lower Pillar Garnish Molding Replacement](#) .
4. Install the rear passenger seats when needed. Refer to [Rear Bench Seat Replacement](#) .

## Body Side Trim Panel Replacement - Right Side


### Removal Procedure

1. Remove the rear passenger seats as needed. Refer to [Rear Bench Seat Replacement](#) .

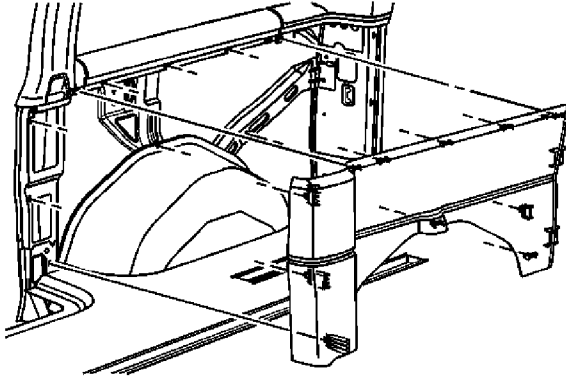

2. Remove the passenger side rear corner trim panel. Refer to [Body Rear Corner Trim Panel Replacement - Right Side](#) .
3. Grasp and gently pull the passenger side body side trim panel in order to disengage the retaining clips.
4. Remove the passenger side body side trim panel from the vehicle.
5. Inspect the passenger side body side trim panel for broken or missing retaining clips. Replace the clips as needed.


### Installation Procedure

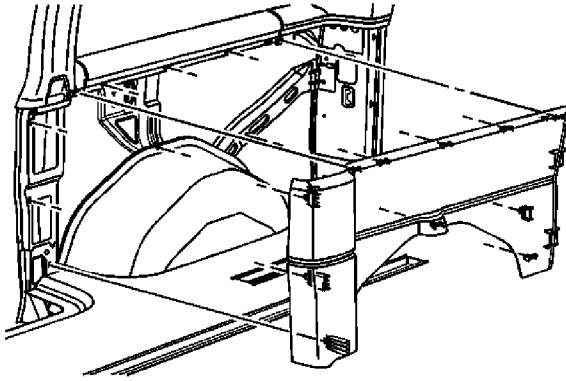

1. Install the passenger side body side trim panel to the vehicle.
2. Position the trim panel. Press on the trim panel in order to engage the retaining clips.
3. Install the passenger side rear corner trim panel. Refer to [Body Rear Corner Trim Panel Replacement - Right Side](#) .
4. Install the rear passenger seats as needed. Refer to [Rear Bench Seat Replacement](#) .




## Body Side Rear Trim Panel Replacement

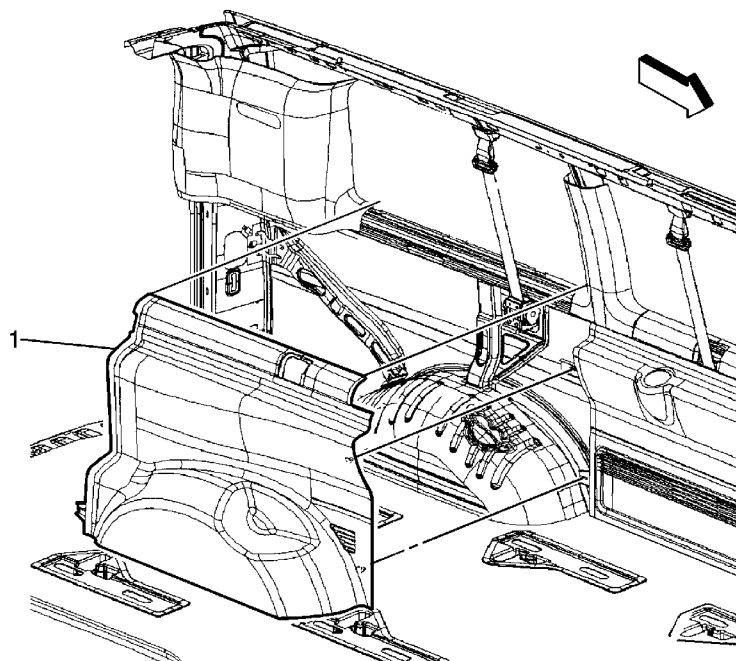

Callout	Component Name
<b>Preliminary Procedure</b>	
Remove the rear passenger seats as needed. Refer to <a href="#">Rear Bench Seat Replacement</a> .	
1	Body Side Rear Trim Panel Assembly
	<b>Procedure</b> <ol style="list-style-type: none"><li>1. Grasp and gently pull the body side rear trim panel assembly in order to disengage the integral clips.</li><li>2. Guide seat belt through opening in trim panel.</li></ol>


## Body Rear Corner Trim Panel Replacement - Left Side

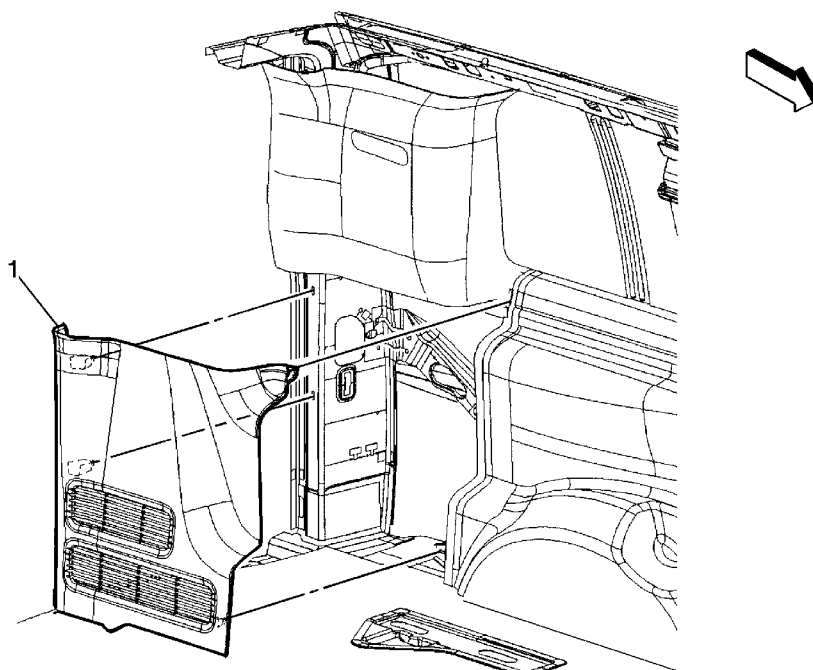

Callout	Component Name
<b>Preliminary Procedure</b>	
Remove the rear passenger seats as needed. Refer to <a href="#">Rear Bench Seat Replacement</a> .	
1	<b>Body Rear Corner Trim Panel Assembly</b> <b>Tip</b> Grasp and gently pull the the body rear corner trim panel assembly in order to disengage the integral clips.


## Body Rear Corner Trim Panel Replacement - Right Side

### Removal Procedure

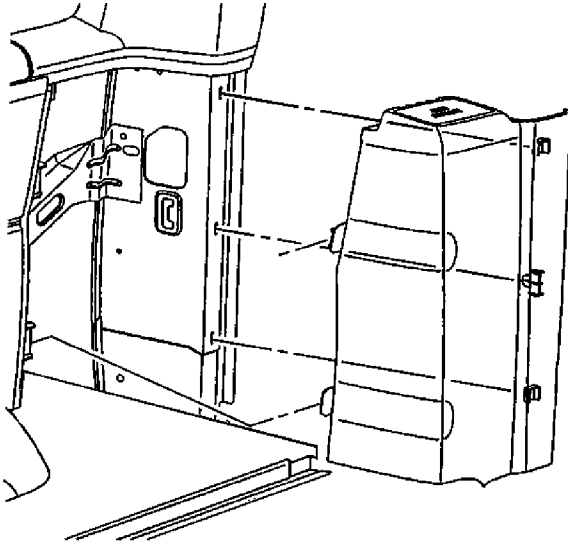

1. Grasp and gently pull the rear of the passenger side rear corner trim panel in order to disengage the retaining clips.
2. Remove the passenger side rear corner trim panel from the vehicle.
3. Inspect the passenger side rear corner trim panel for broken or missing retaining clips. Replace the clips as needed.


### Installation Procedure

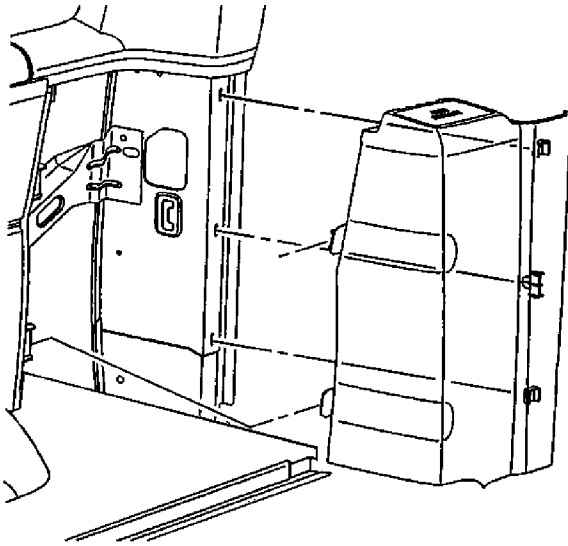

1. Install the passenger side rear corner trim panel to the vehicle.
2. Align the tabs at the front of the passenger side rear corner trim panel.
3. Press the passenger side rear corner trim panel at the rear in order to engage the retaining clips.


## Front Door Trim Plate Replacement

### Removal Procedure

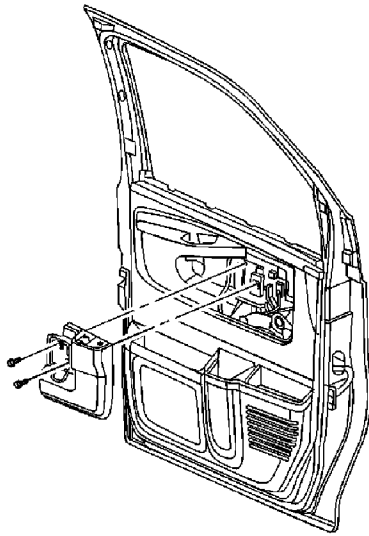

1. Remove the window regulator handle, if equipped. Refer to [Door Window Regulator Handle Replacement](#).
2. Remove the inside door handle bezel. Refer to [Front Side Door Inside Handle Bezel Replacement](#).
3. Remove the screws (2) that retain the front door trim plate (1) to the door panel.
4. Pull the bottom of the front door trim plate (1) out in order to release the front door trim plate (1) retainers.
5. Remove the front door trim plate from the front door trim panel.
6. Disconnect the electrical connectors from the switches on the front door trim plate, if equipped.
7. Remove the front door trim plate (1) from the vehicle.

### Installation Procedure

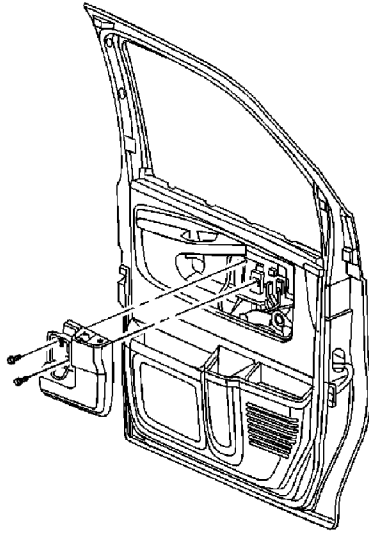


1. Partially install the front door trim plate (1) to the front door trim panel.
2. Connect the electrical connectors to the switches, if equipped.
3. Align the retainers on the front door trim plate (1) to the slots in the front door trim panel
4. Push towards the door panel to engage the front door trim plate (1) retainers.

**Caution:** Refer to [Fastener Caution](#) in the Preface section.


5. Install the screws (2) and tighten to **1.9 N·m (17 lb in)**.
6. Install the inside door handle bezel. Refer to [Front Side Door Inside Handle Bezel Replacement](#).
7. Install the window regulator handle, if equipped. Refer to [Door Window Regulator Handle Replacement](#).

## Body Side Protector Replacement


### Removal Procedure

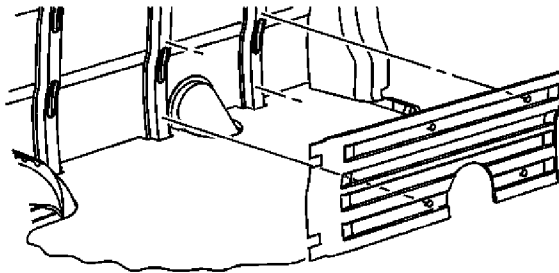

1. Remove the retainers from the body side protectors.
2. Remove the driver side body side front protector from the vehicle.

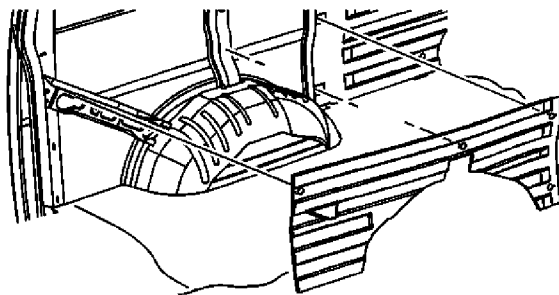


3. Remove the driver side body side rear protector from the vehicle.

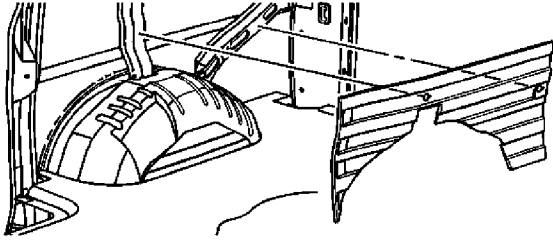


4. Remove the passenger side body side protector from the vehicle.

## Installation Procedure

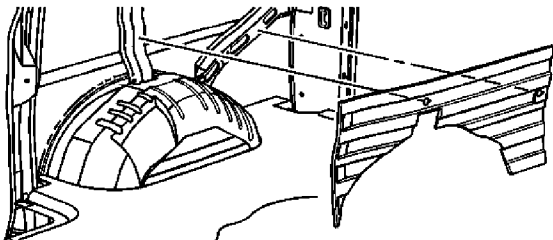


1. Install the passenger side body side protector to the vehicle.



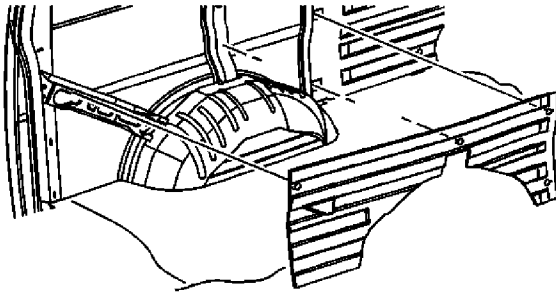


2. Install the driver side body side rear protector to the vehicle.

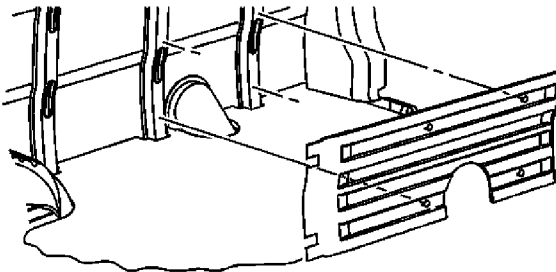

3. Install the driver side body side front protector to the vehicle.
4. Install the retainers to the body side protectors.


## Rear Door Trim Panel Replacement - Left Side

### Removal Procedure

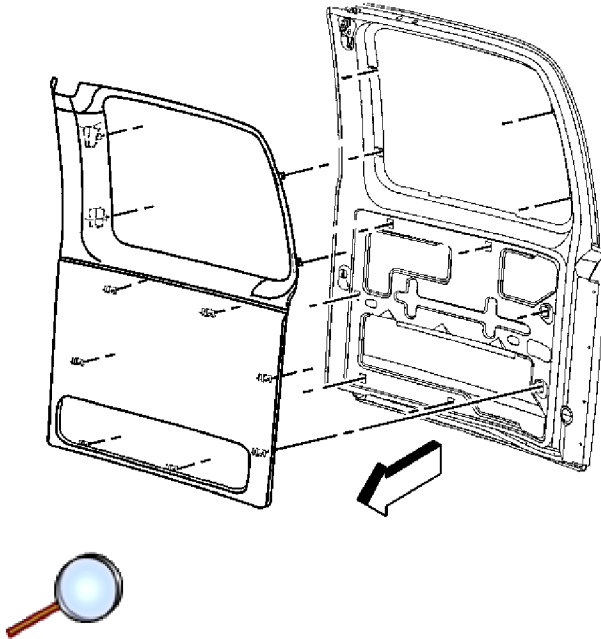

1. Gently pull out the trim panel at the top of the window opening. Using a long flat-bladed suitable tool, pry the retaining clips apart in order to disengage the clips.
2. Release the left side rear door trim panel retainers on the left side rear door trim panel.
3. Remove the left side rear door trim panel from the door.


### Installation Procedure

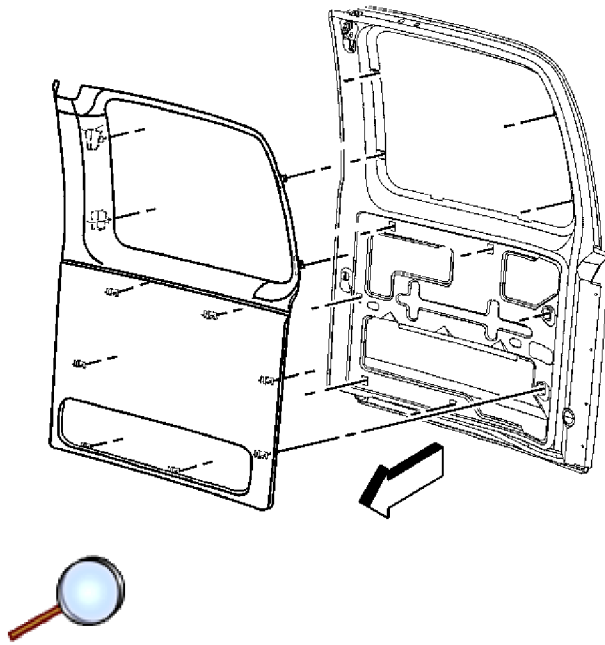

1. Align the retainers on the left side rear door trim panel with the slots in the door.
2. Snap the left side rear door trim panel into place.
3. Align the tabs on the left side rear door trim panel with the retaining clips around the window opening.
4. Press the left side rear door trim panel into place in order to engage the retaining clips.


## Rear Door Trim Panel Replacement - Right Side

### Removal Procedure

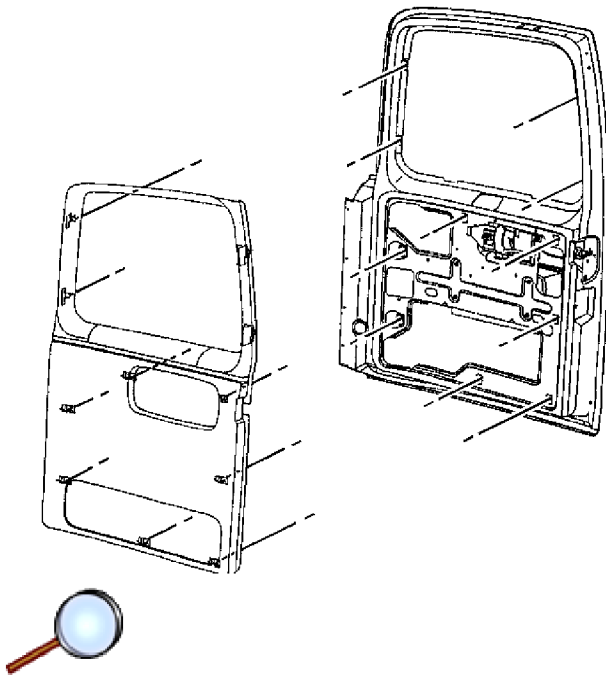

1. Remove the inside door handle trim plate. Refer to [Rear Door Trim Plate Replacement](#) .
2. Gently pull out the trim panel at the top of the window opening. Using a suitable and long flat-bladed tool, pry the retaining clips apart in order to disengage the clips.
3. Release the right side rear door trim panel retainers on the right side rear door trim panel.
4. Remove the right side rear door trim panel from the door.

### Installation Procedure

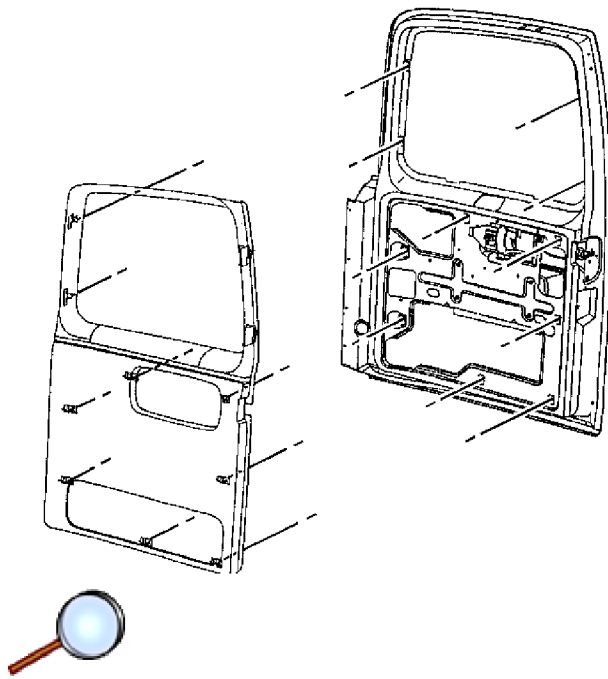


1. Align the retainers on the right side rear door trim panel with the slots in the door.
2. Snap the right side rear door trim panel into place.
3. Align the tabs on the right side rear door trim panel with the retaining clips around the window opening.
4. Press the right side rear door trim panel in order to engage the retaining clips.
5. Install the right side rear door trim plate to the right side rear door.
6. Install the inside door handle bezel. Refer to [Rear Door Trim Plate Replacement](#) .

## Rear Floor Trim Plate Replacement


### Removal Procedure

1. Grasp and gently pull up on the rear floor trim plate in order to release the retaining clips.

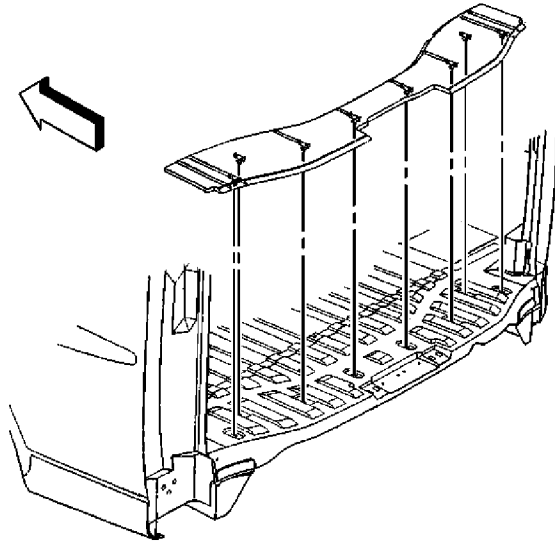

2. Remove the rear floor trim plate from the vehicle.
3. Inspect the rear floor trim plate for broken or missing retaining clips, and replace when needed.

### Installation Procedure

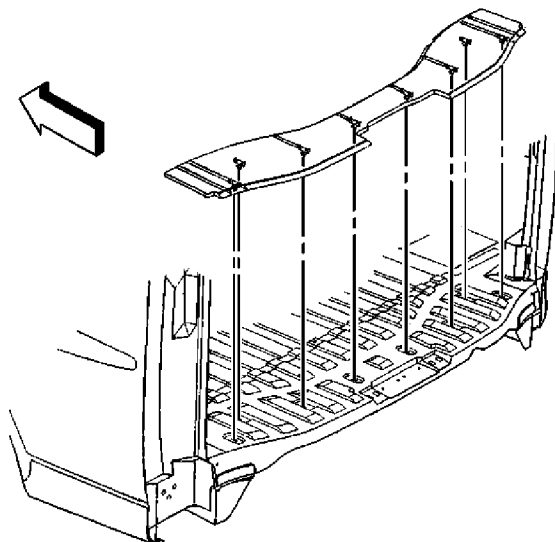

© 2010 General Motors Corporation. All rights reserved.




1. Install the rear floor trim plate to the vehicle.
2. Position the rear floor trim plate and press down in order to engage the retaining clips.

## Pressure Relief Valve Replacement

### Removal Procedure


1. Remove the tail lamp filler panel from the vehicle. Refer to [Back Body Opening Side Applique and Tail Lamp Replacement](#).
2. Remove the tail lamp assembly from the vehicle. Refer to [Tail Lamp Replacement](#).

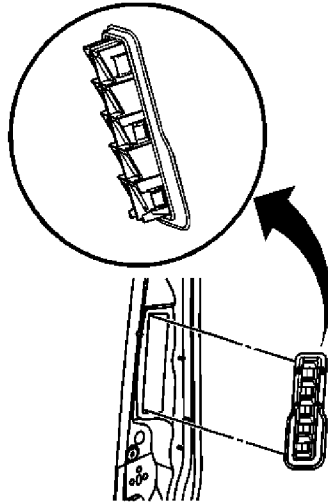

3. Pull the air relief vent away from the body in order to release the retainers.
4. Remove the air relief vent from the vehicle.

### Installation Procedure



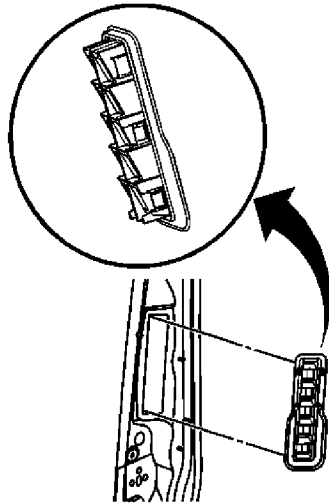

1. Install the air relief vent to the vehicle.
2. Align the retainers on the air relief vent with the body.

Press the vent into place.

3. Install the tail lamp assembly to the vehicle. Refer to [Tail Lamp Replacement](#).
4. Install the tail lamp filler panel to the vehicle. Refer to [Back Body Opening Side Applique and Tail Lamp Replacement](#).