



## Technical Quick Guides

### On Screen Display (OSD)

Login on the Web interface

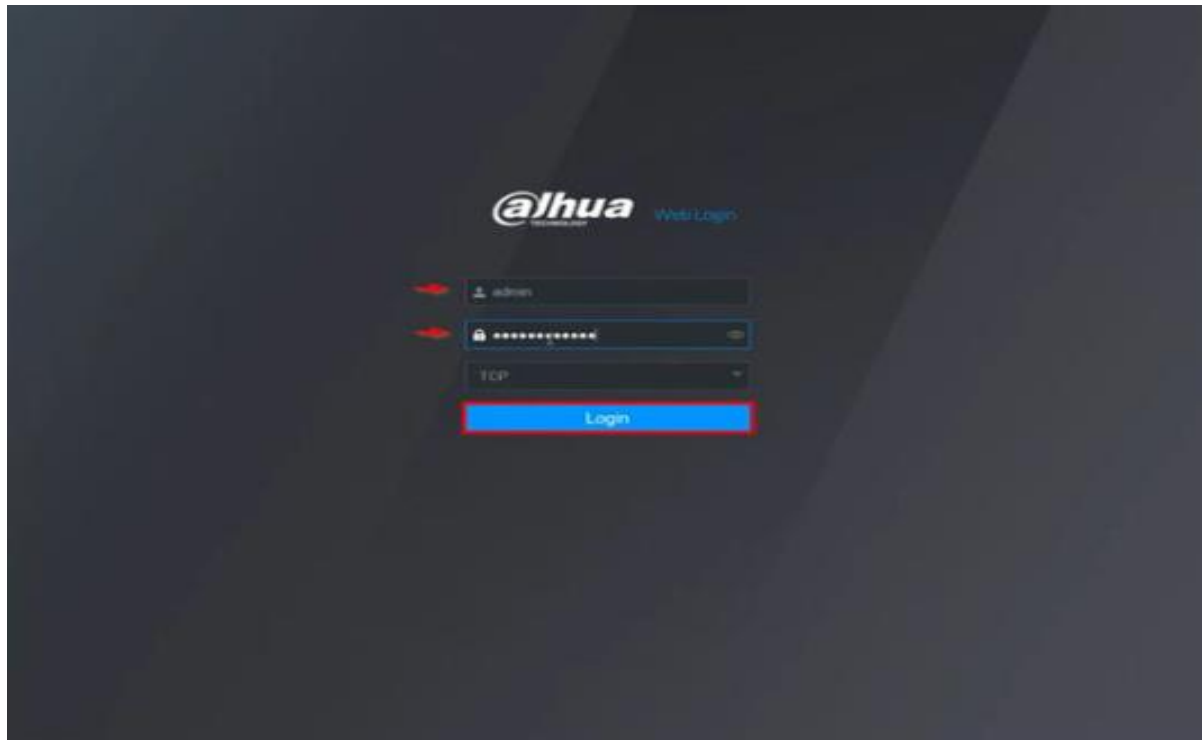


Click the Live Section

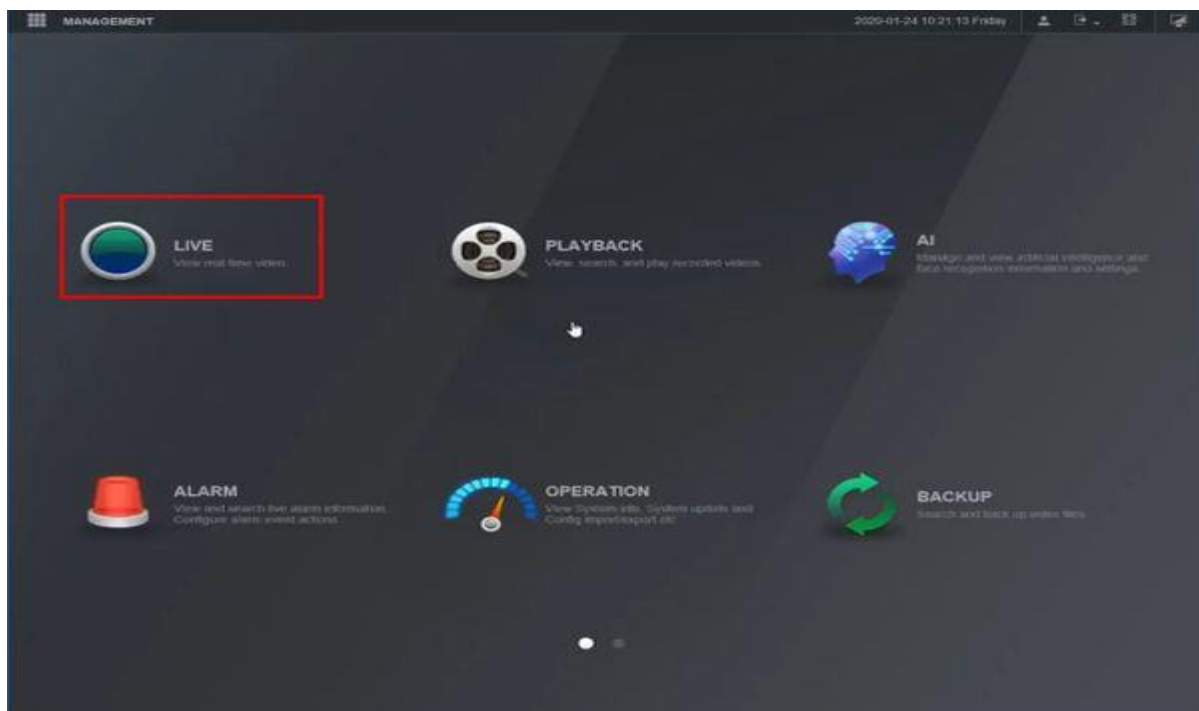


Please contact your local Seadan store for more information & feedback


Select the channel of the camera in the list on the left side of the screen to load it into live view.

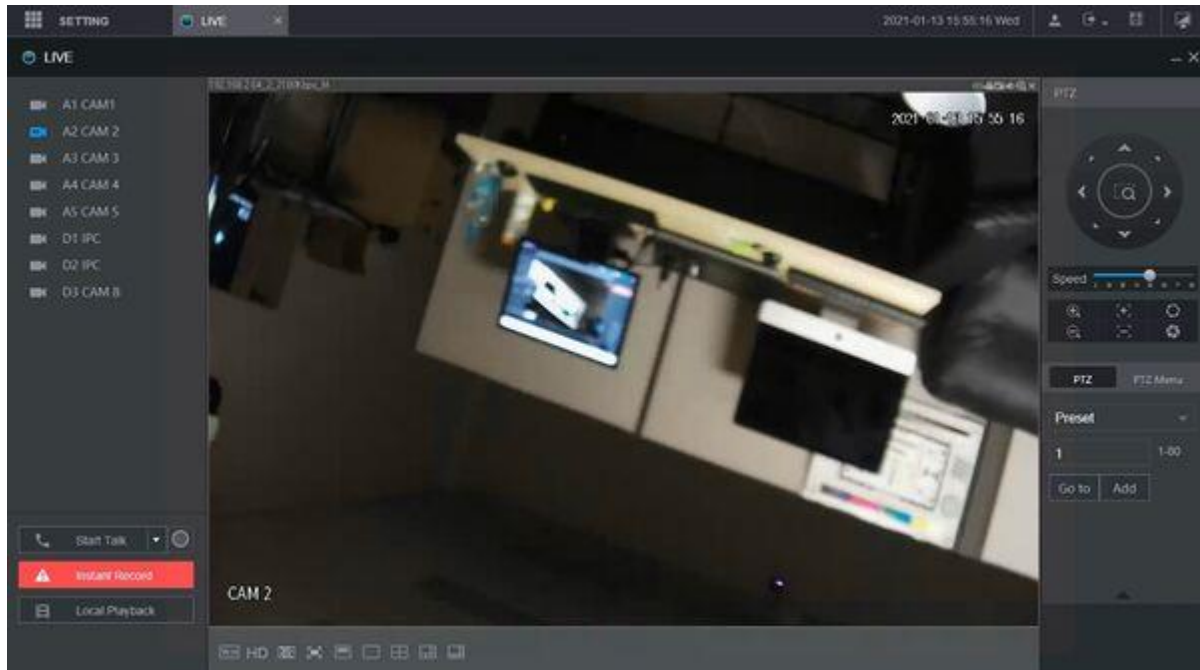

On the right side of the screen click the PTZ Menu and click Open

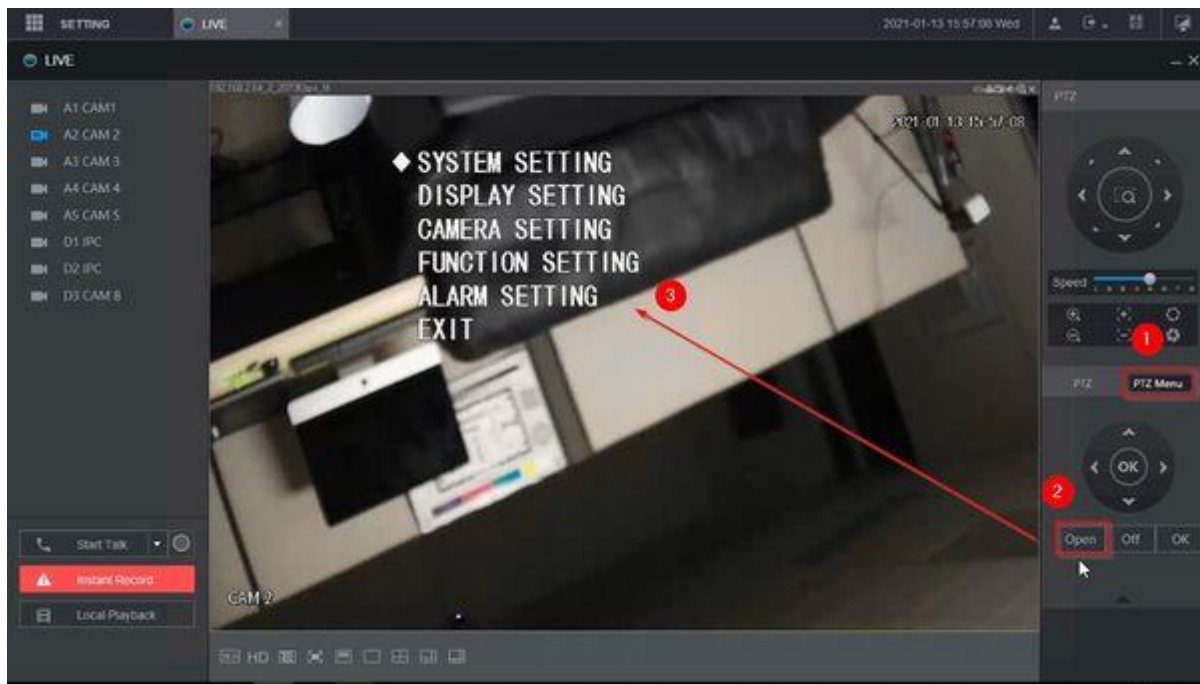


Navigate the OSD menu base on the settings you want to adjust using the function key on the PTZ menu.

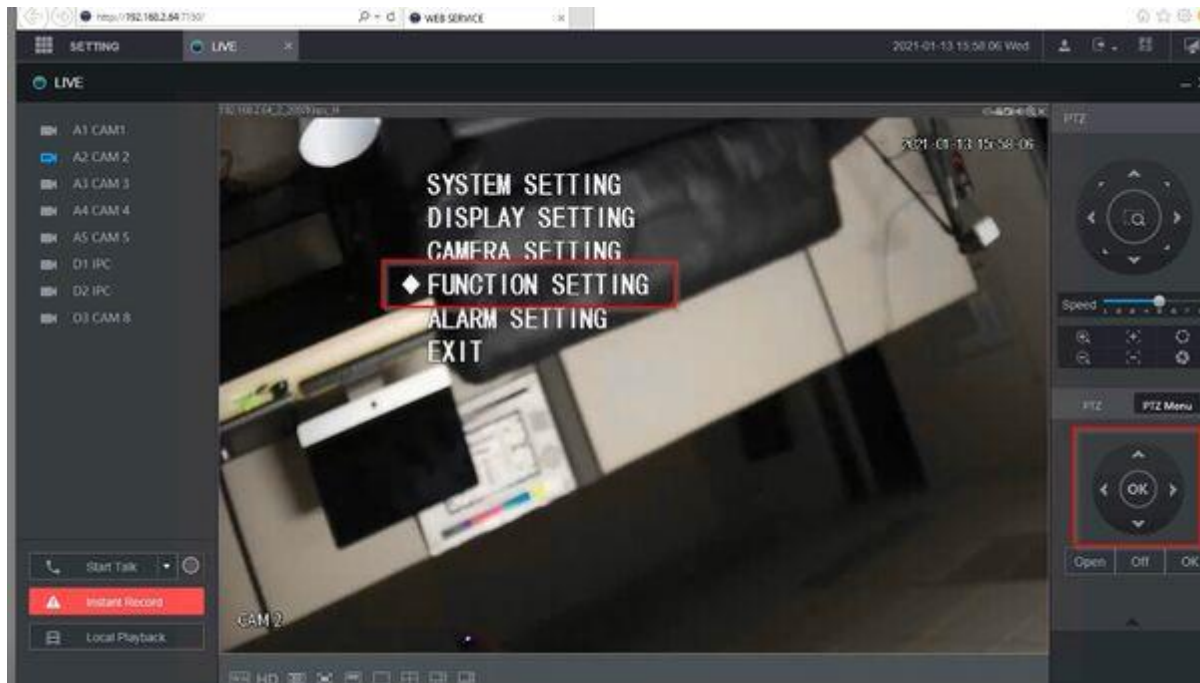

## Opening OSD on the System UI

From live view right click to open the Menu and select PTZ

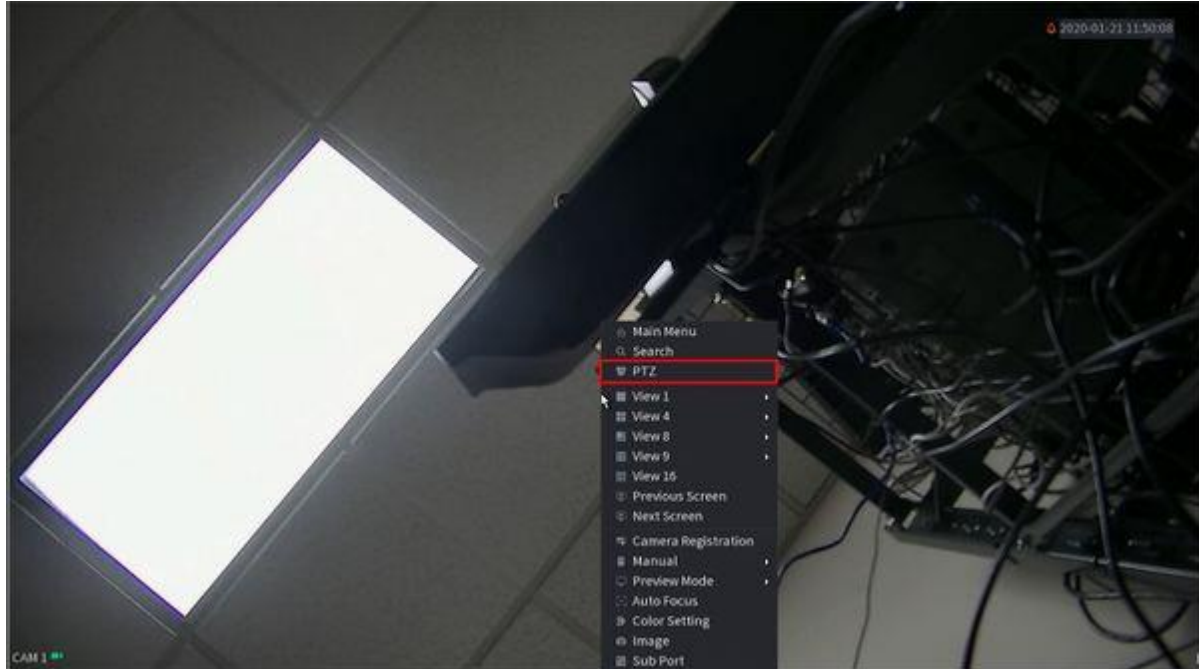

Click to expand the PTZ menu



Click the Open Menu button



The On Screen Display menu will appear as an overlay on top of the camera's image.

Use the onscreen controls to navigate through the menu.





Click Enter / Cancel to enter and exit submenus until the desired parameters are set

