



## Technical Quick Guides

### How to Change Main VTO number

Open the Dahua Configtool

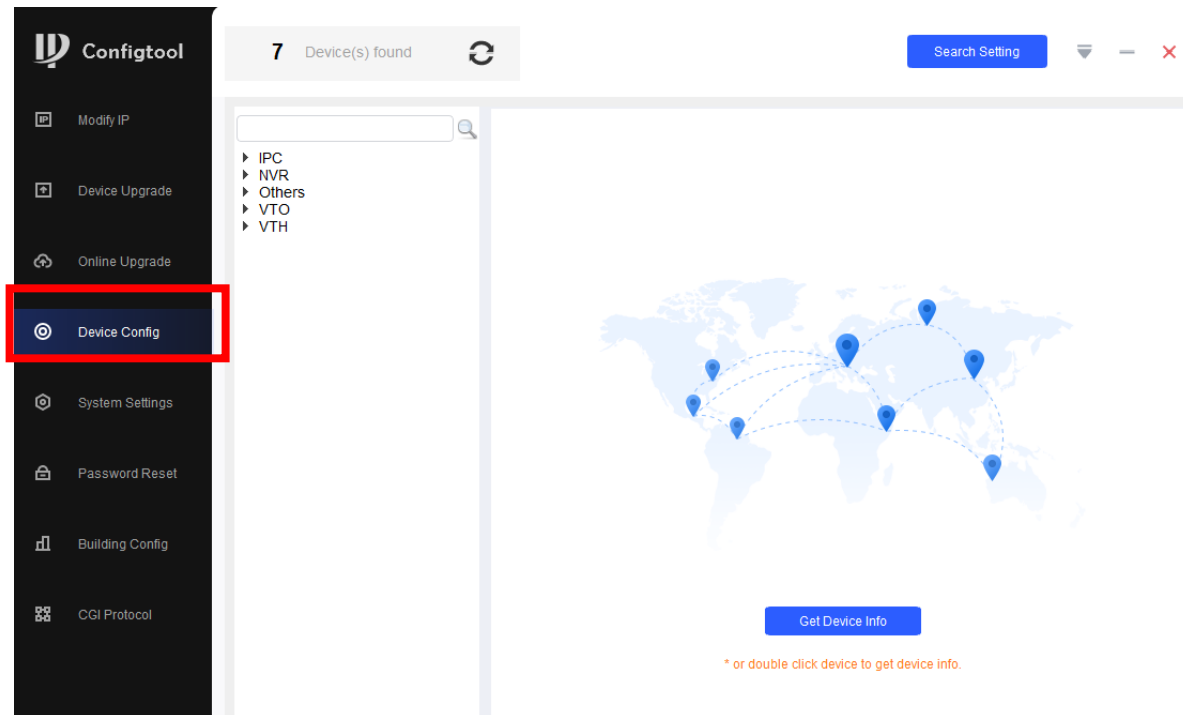


On Device config select the IP address of the main VTO

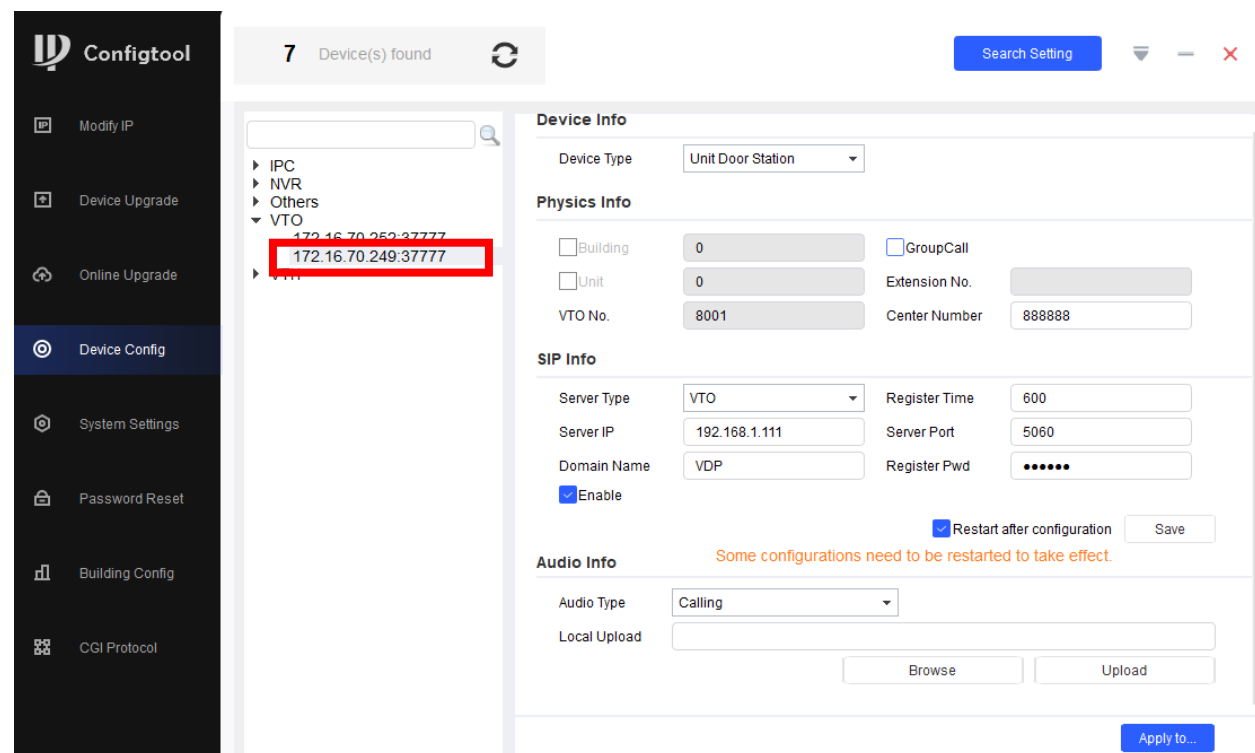

Please contact your local Seadan store for more information & feedback

Uncheck the Enable settings on the SIP Info

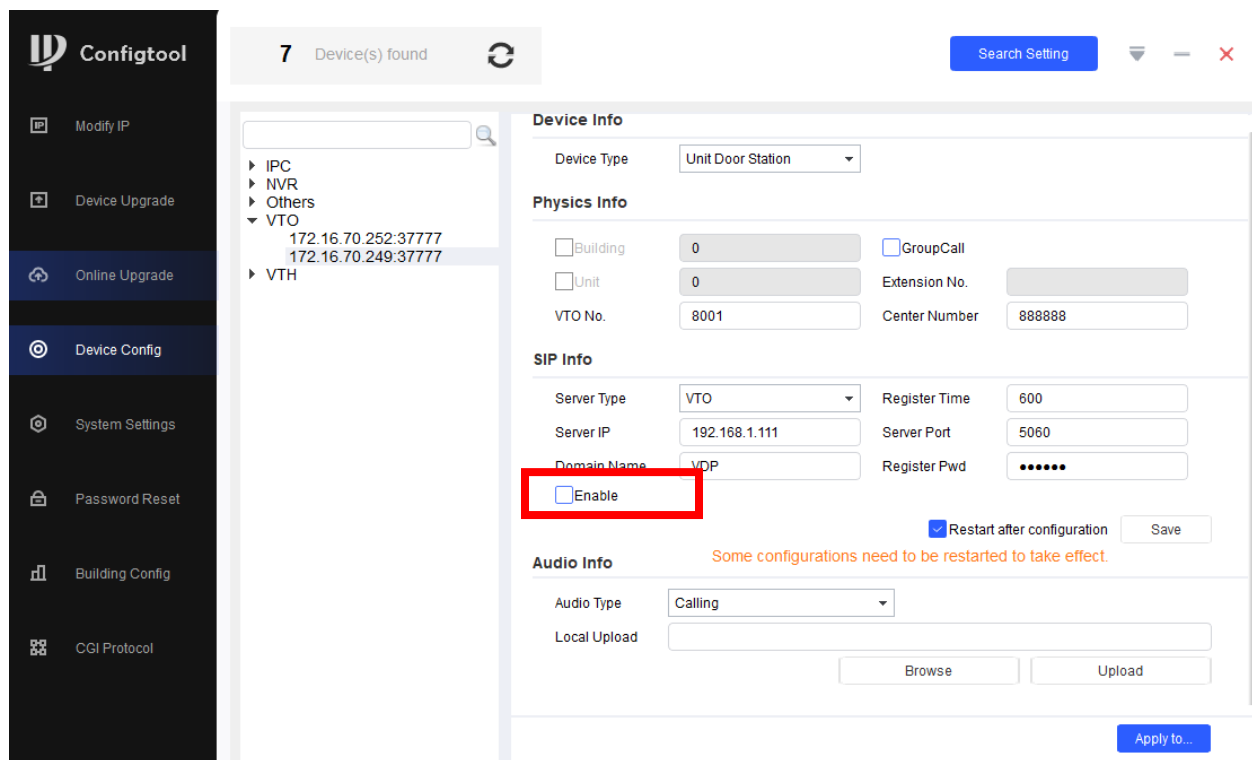

**Configtool** 7 Device(s) found

Search Setting

**Device Info**

Device Type: Unit Door Station

**Physics Info**

☐ Building: 0 ☐ GroupCall

☐ Unit: 0 Extension No.:

VTO No.: 8001 Center Number: 888888

**SIP Info**

Server Type: VTO Register Time: 600

Server IP: 192.168.1.111 Server Port: 5060

Domain Name: VDP Register Pwd: .....

☐ Enable

☒ Restart after configuration Save


**Audio Info** Some configurations need to be restarted to take effect.

Audio Type: Calling

Local Upload: Browse Upload

Apply to...

Enter the VTO No. you want

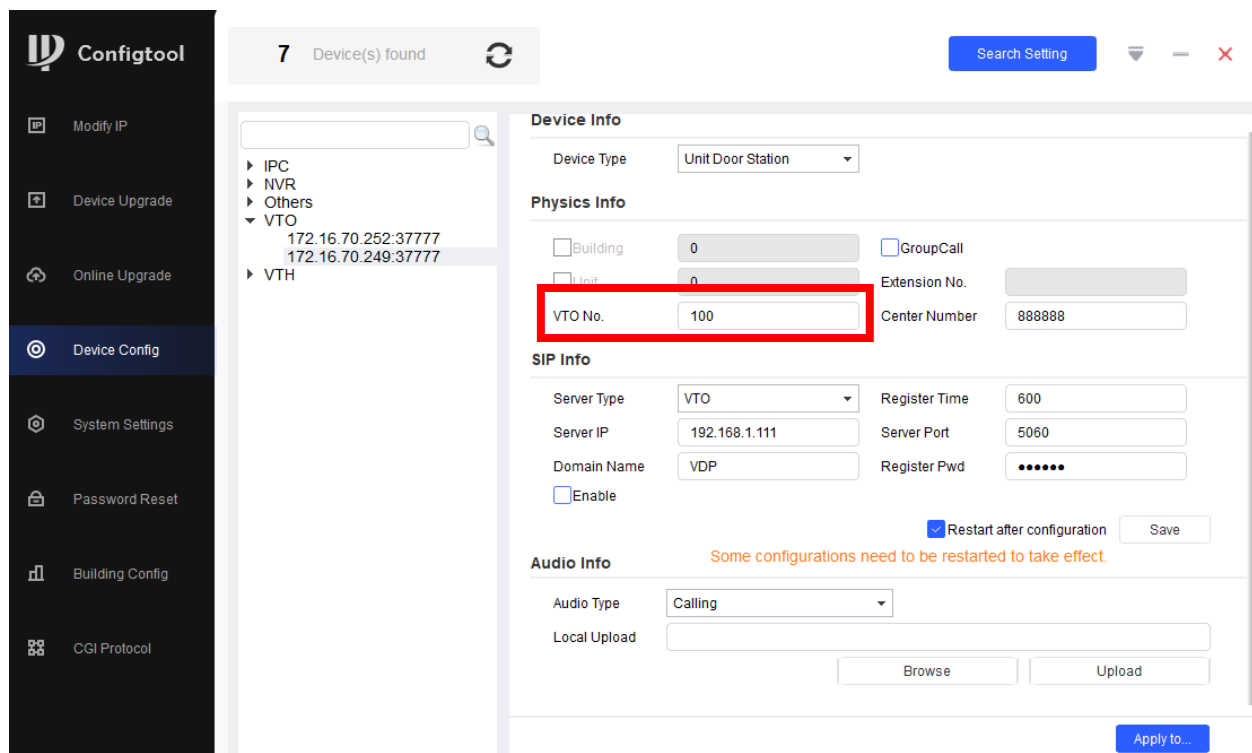

**Configtool** 7 Device(s) found

Search Setting

**Device Info**

Device Type: Unit Door Station

**Physics Info**

☐ Building: 0 ☐ GroupCall

☐ Unit: 0 Extension No.:

VTO No.: 100 Center Number: 888888

**SIP Info**

Server Type: VTO Register Time: 600

Server IP: 192.168.1.111 Server Port: 5060

Domain Name: VDP Register Pwd: .....

☐ Enable

☒ Restart after configuration Save


**Audio Info** Some configurations need to be restarted to take effect.

Audio Type: Calling

Local Upload: Browse Upload

Apply to...

Check the Enable settings back on the SIP Info and click the Save button

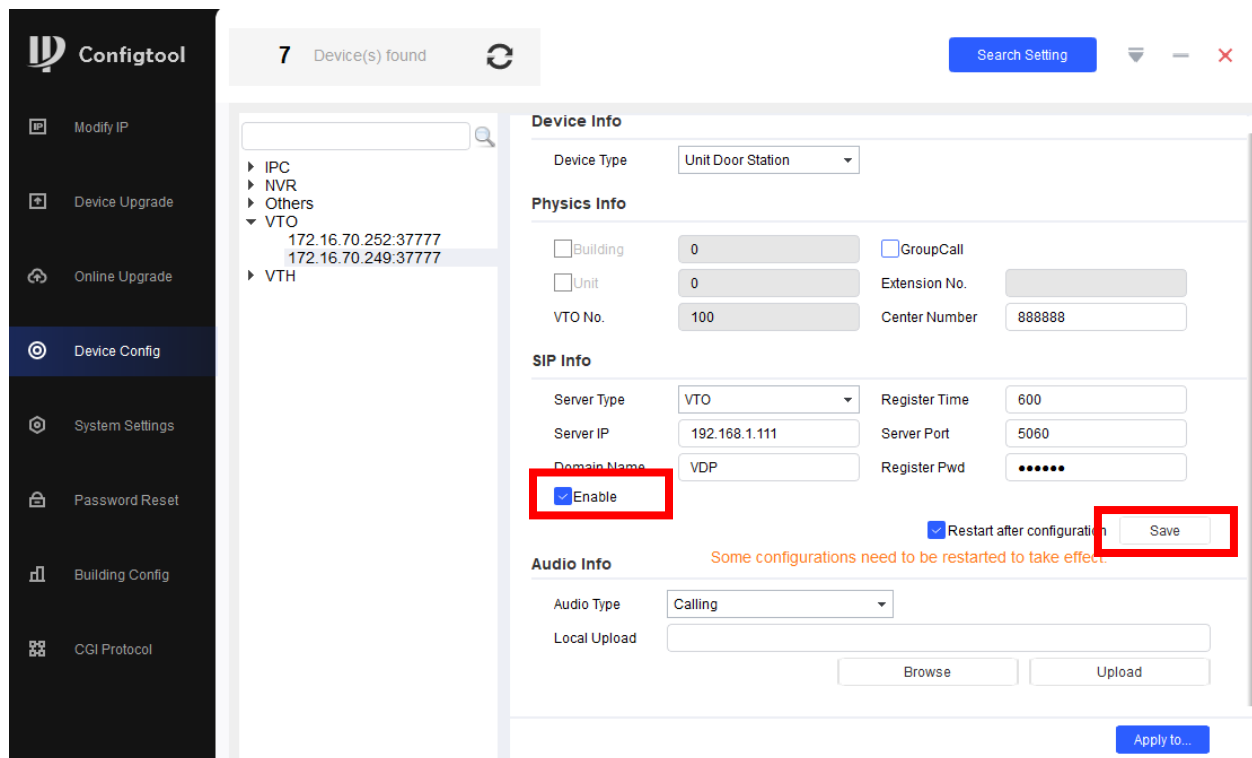

**Configtool**

7 Device(s) found

Search Setting

**Device Info**

Device Type: Unit Door Station

**Physics Info**

☐ Building: 0 ☐ GroupCall

☐ Unit: 0 Extension No.:

VTO No.: 100 Center Number: 888888

**SIP Info**

Server Type: VTO Register Time: 600

Server IP: 192.168.1.111 Server Port: 5060

Domain Name: VDP Register Pwd: .....

☒ Enable ☒ Restart after configuration


**Save**

**Audio Info**

Audio Type: Calling

Local Upload:

Log in to the VTO web interface

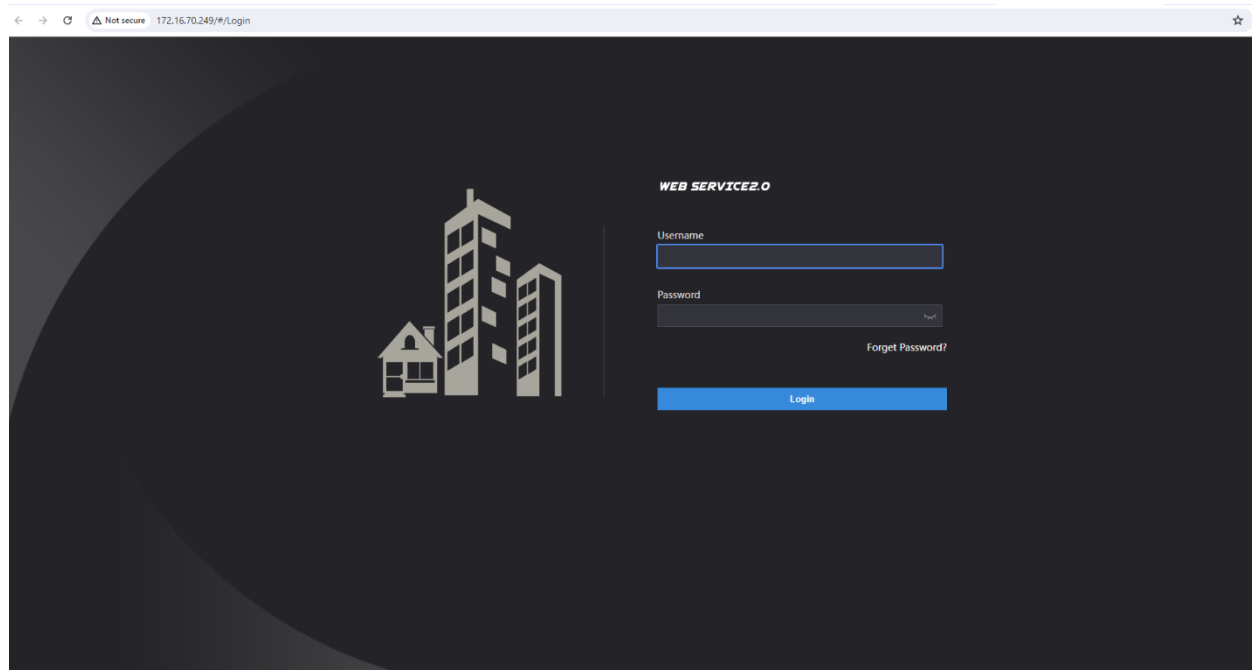

← → Not secure 172.16.70.249/#/Login ☆


**WEB SERVICE 2.0**

Username:


Password:

[Forget Password?](#)

Click the Household Settings

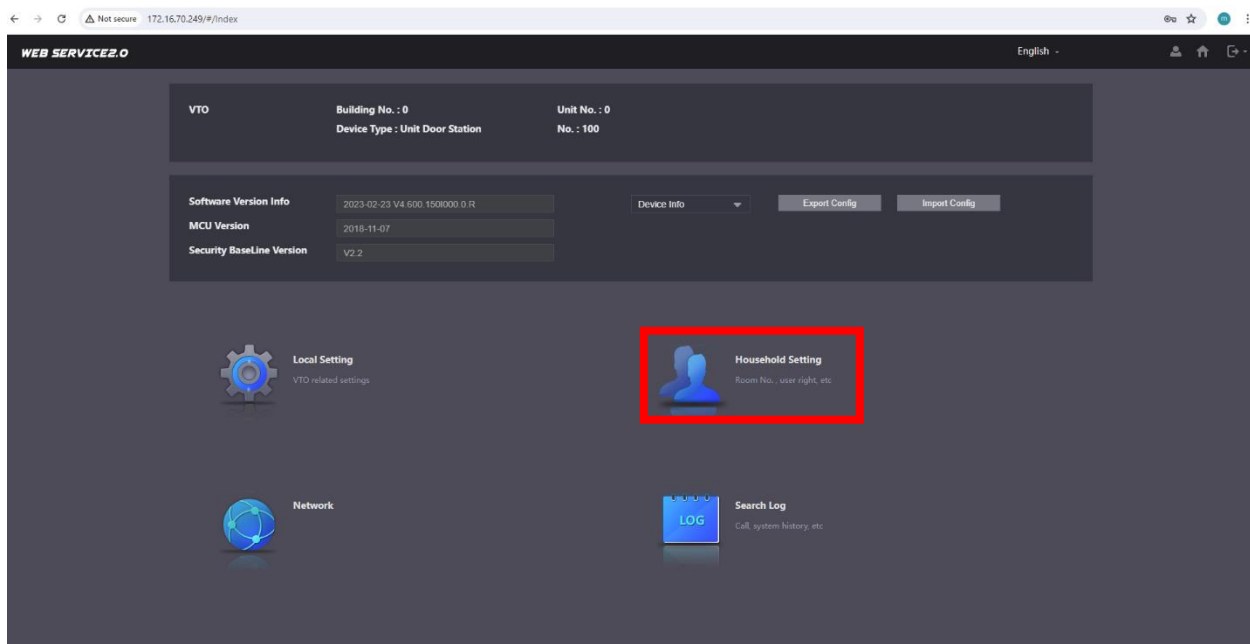

Under VTO No. Management Tab Click Add button

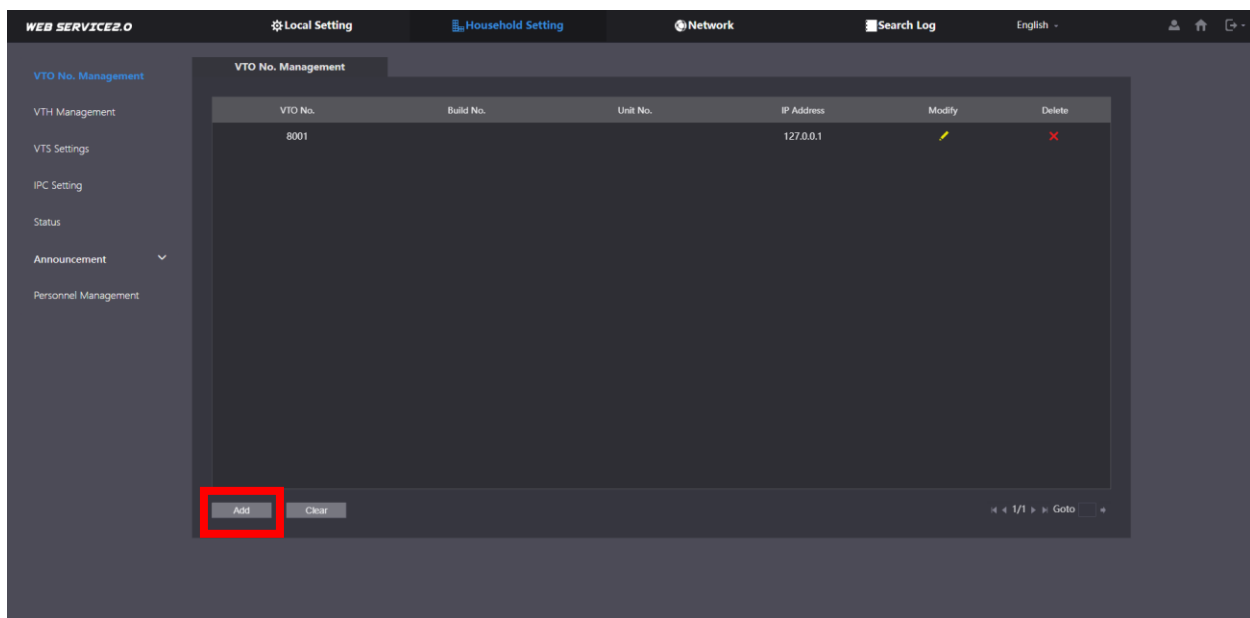

Enter the VTO number, username and password that you set and save.

Add

No. 100

Register Password .....

Build No.

Unit No.

IP Address 127.0.0.1

Username admin

Password .....

Save

Cancel

Delete the old VTO number

WEB SERVICES 2.0

Local Setting

Household Setting

Network

Search Log

English

VTO No. Management

VTH Management

VTS Settings

IPC Setting

Status

Announcement

Personnel Management

VTO No. Management

VTO No.	Build No.	Unit No.	IP Address	Modify	Delete
100			127.0.0.1		
8001			127.0.0.1		


Add

Clear


1/1

Goto

Power Cycle the VTO by clicking the Reboot

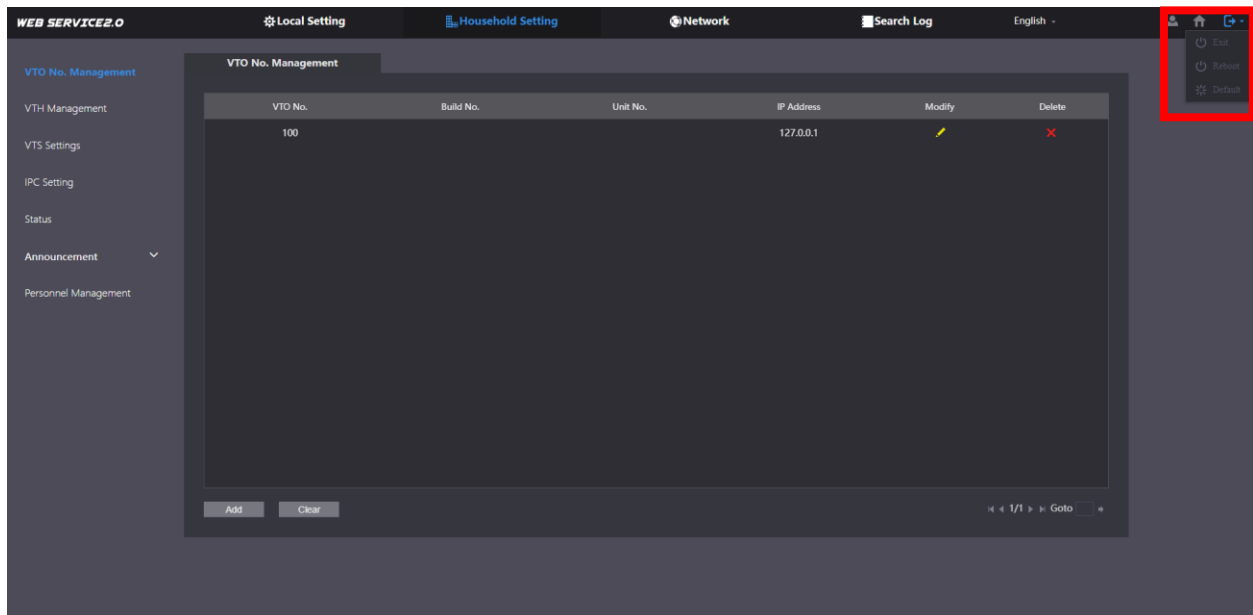

Click Confirm

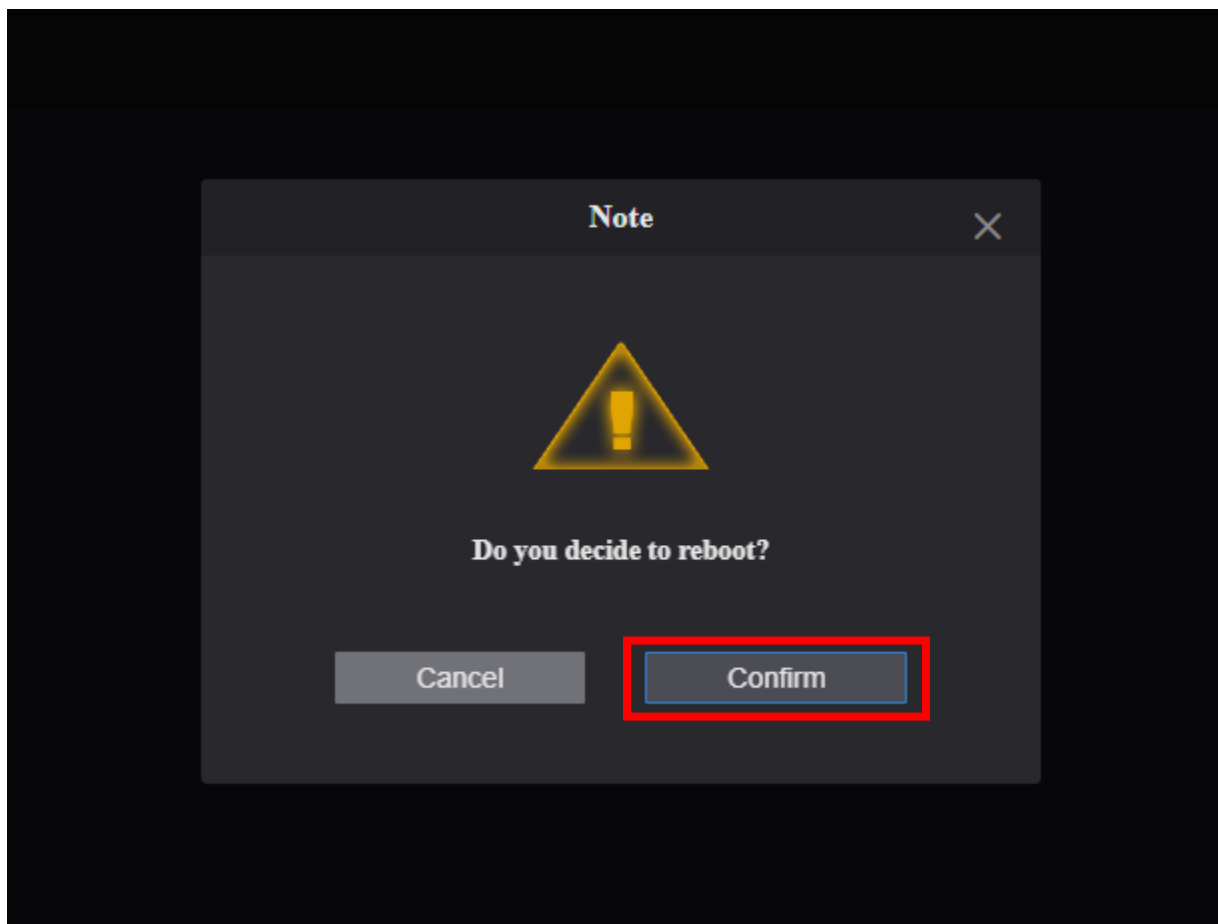

After the Device finishes rebooting check if the status of the VTO is online.

WEB SERVICE 2.0

Local Setting Household Setting Network Search Log English

VTO No. Management

VTH Management

VTs Settings

IPC Setting

Status

Announcement

Personnel Management

Room No.	Status	IP/Port	Reg Time	Off Time
1#0	Online	172.16.70.105:5060	04-07-2024 00:44:07	0
100	Online	127.0.0.1:5061	04-07-2024 00:43:38	0

< 1/1 > Goto