



## Technical Quick Guides

### How to change the MTU on DMSS


Open the DMSS and click the three dots.

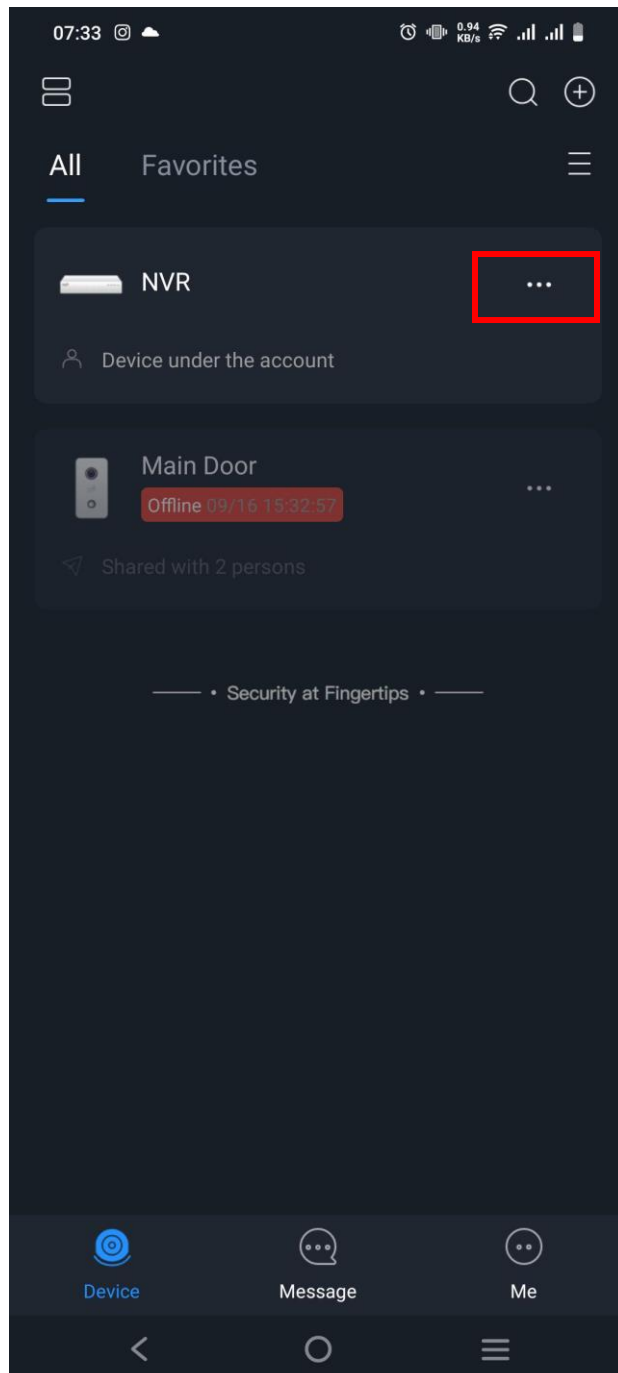


Click the Device Details

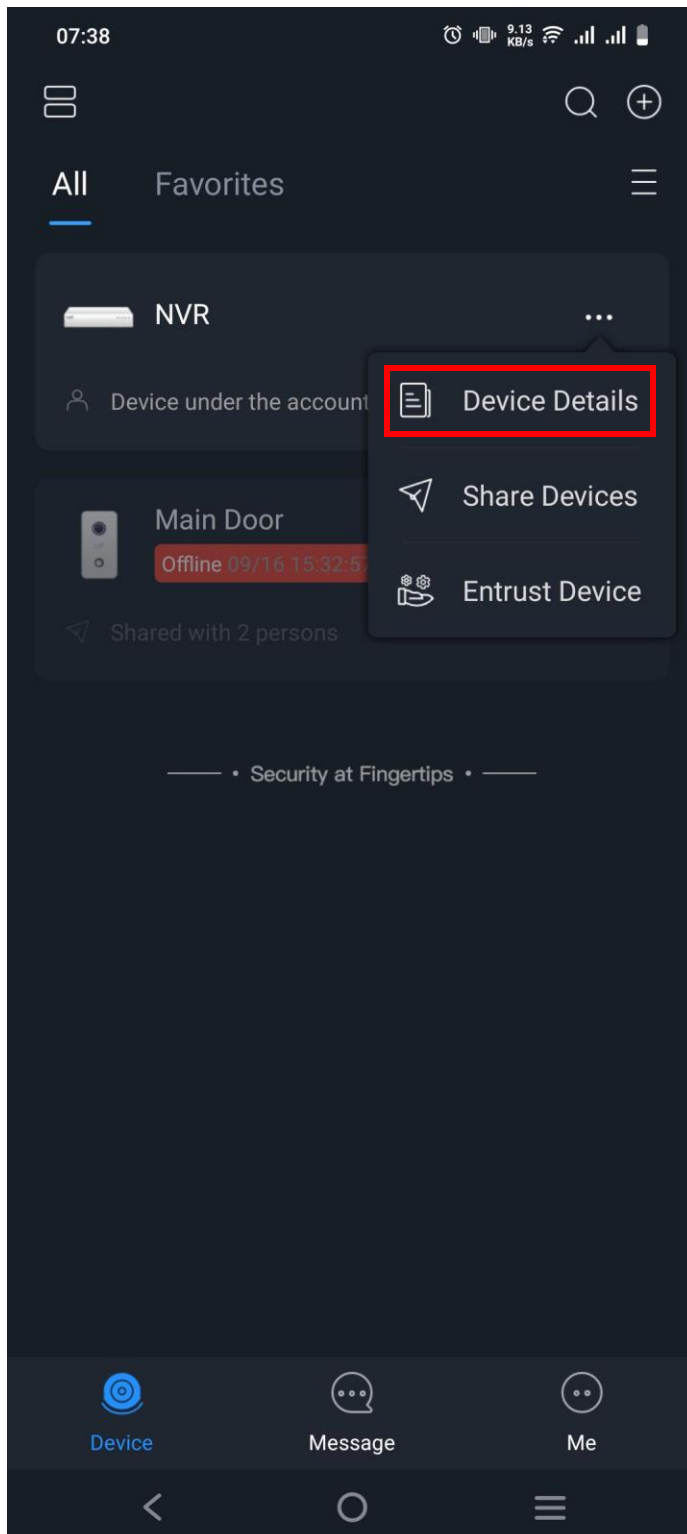

Under the Device Details, scroll down and look for “**Remote Configuration**”

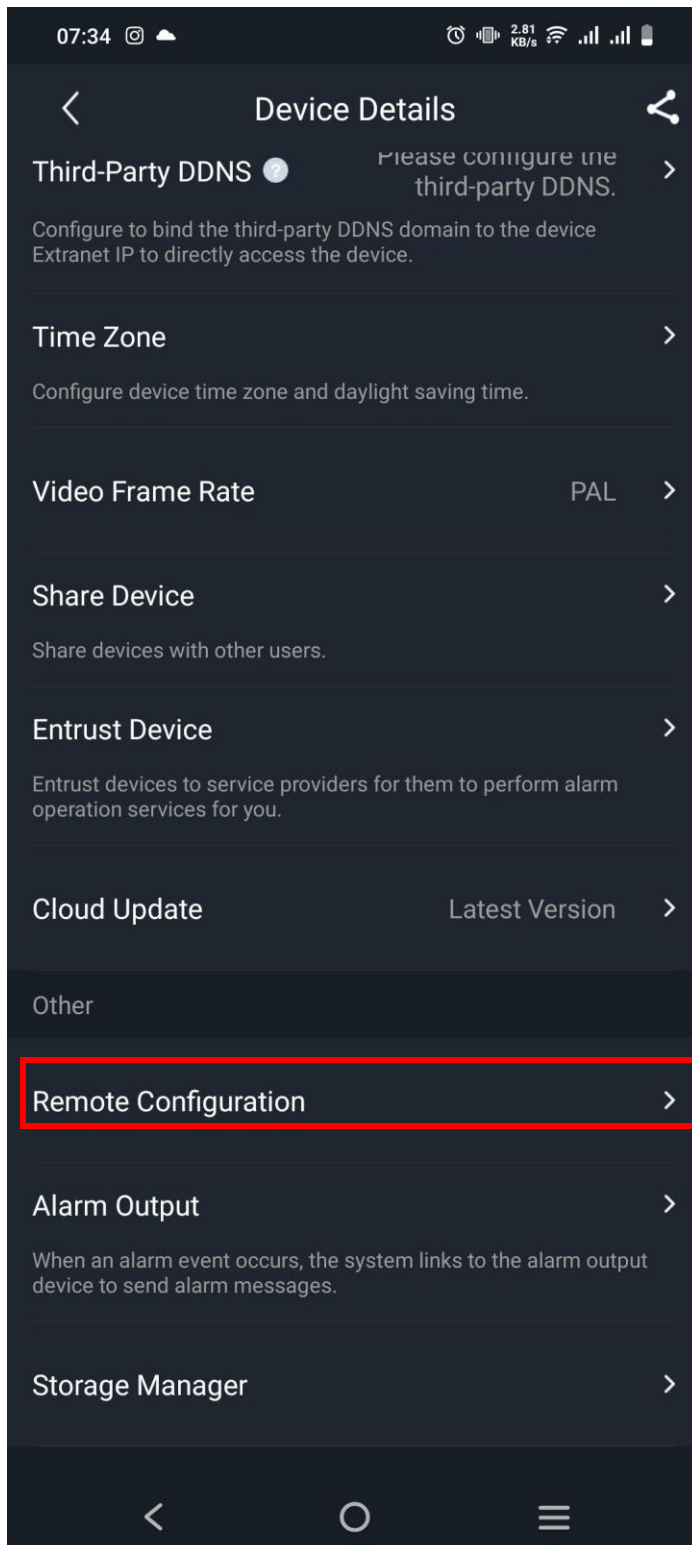

Under the Remote configuration click “**Modify MTU**”

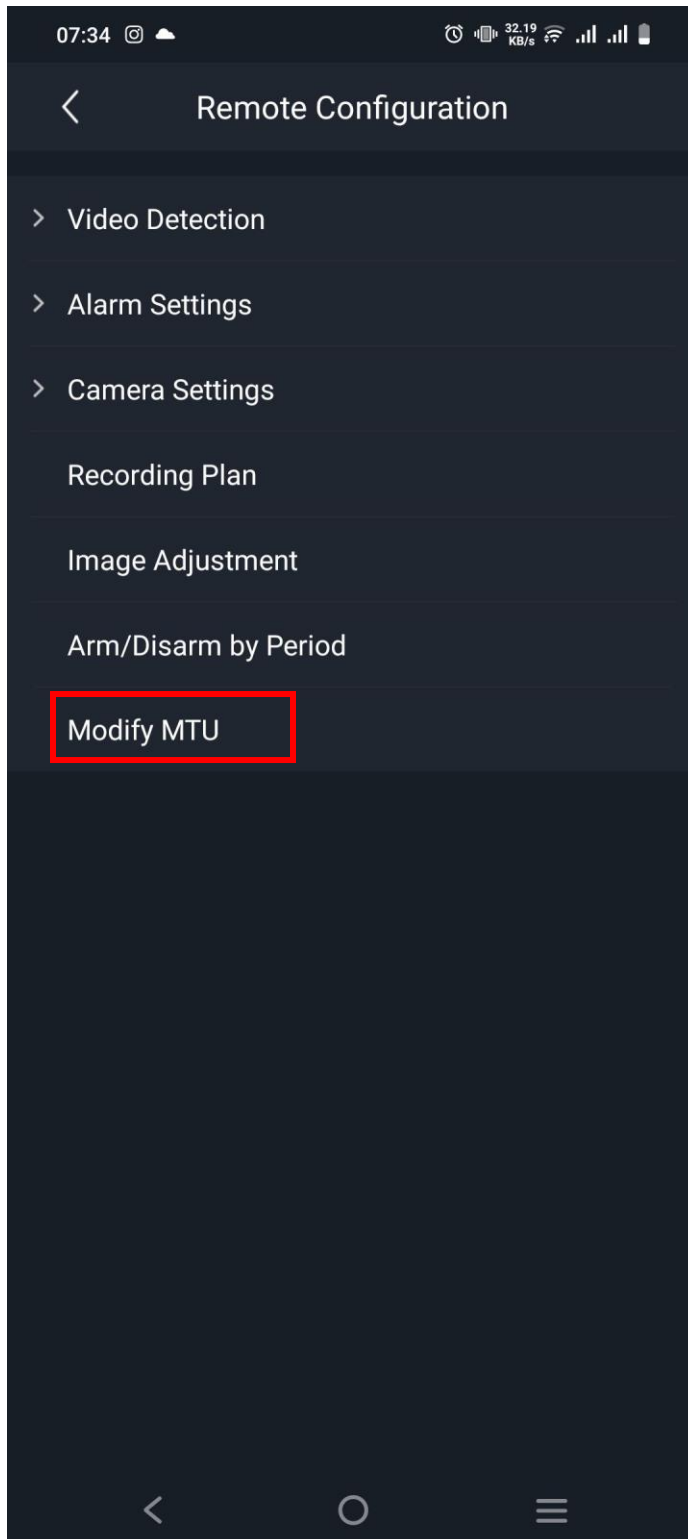

The MTU Default value is 1500 you can adjust that to 1,280 or lower



You can adjust the value by clicking the value and type the desired value and then click **OK**

