



Technical Quick Guides

How to Setup PTZ Preset and Auto-tracking using camera web interface


Login to the Camera web interface

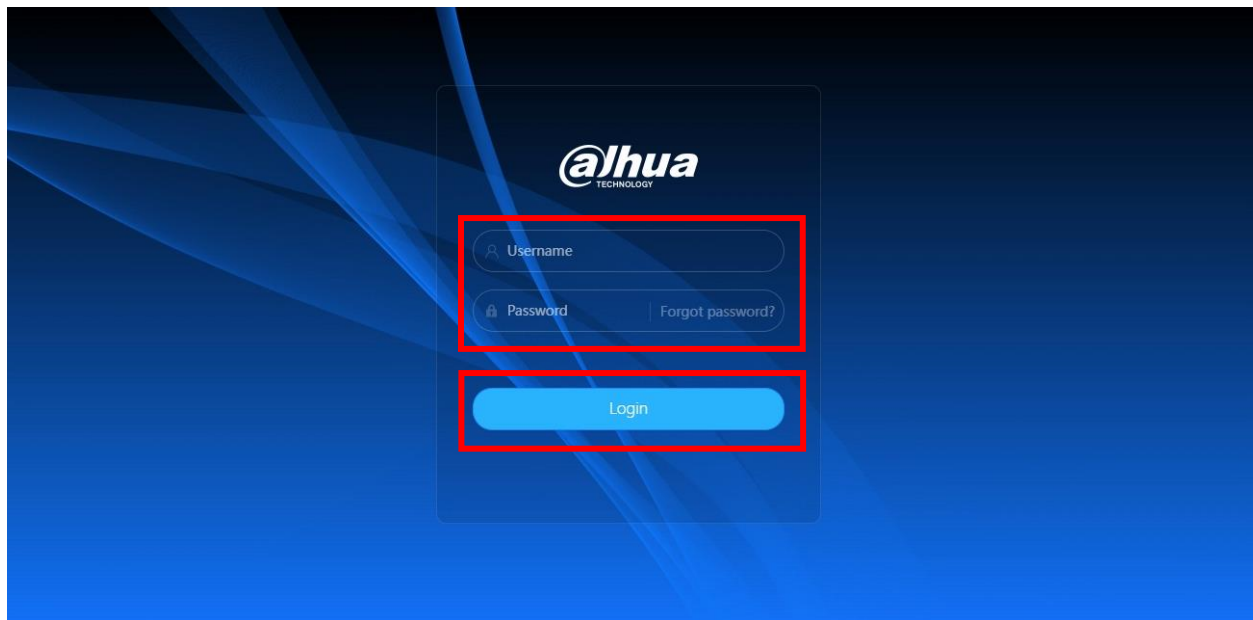


Click the Home icon at the Top

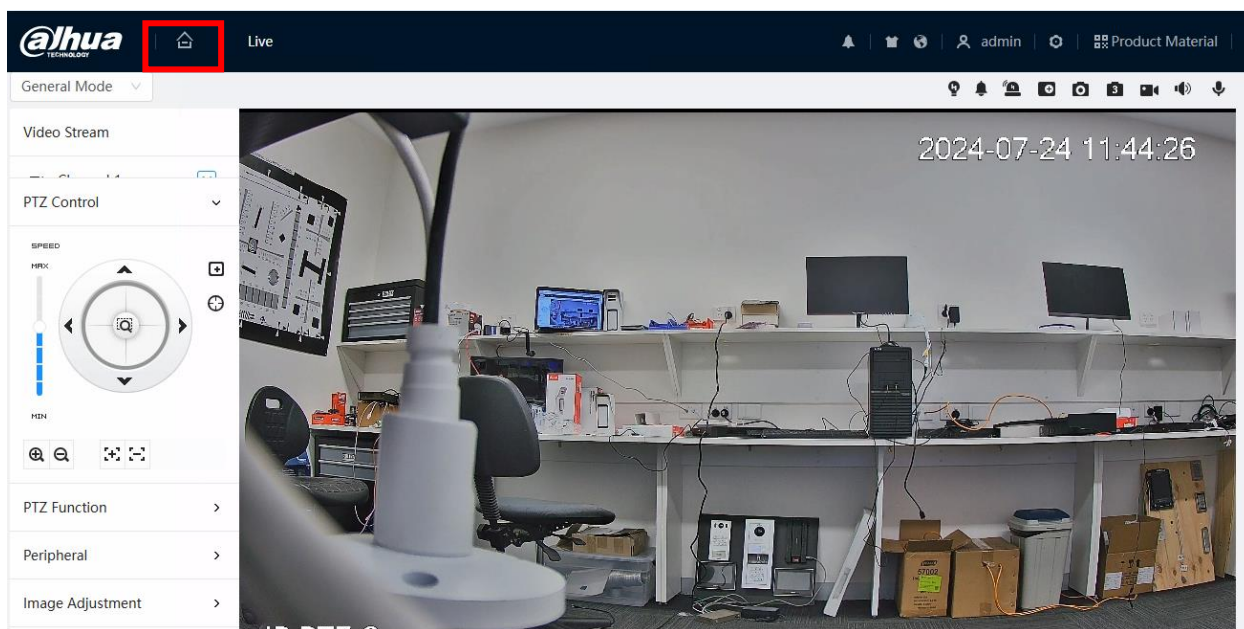


Click the PTZ tab

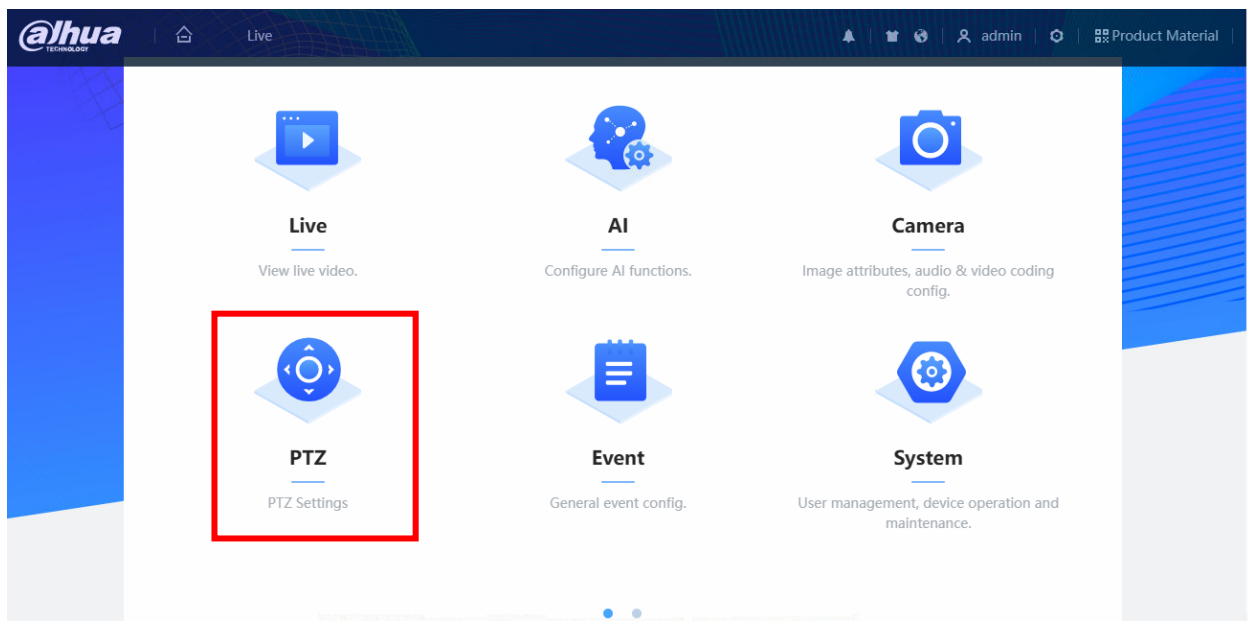

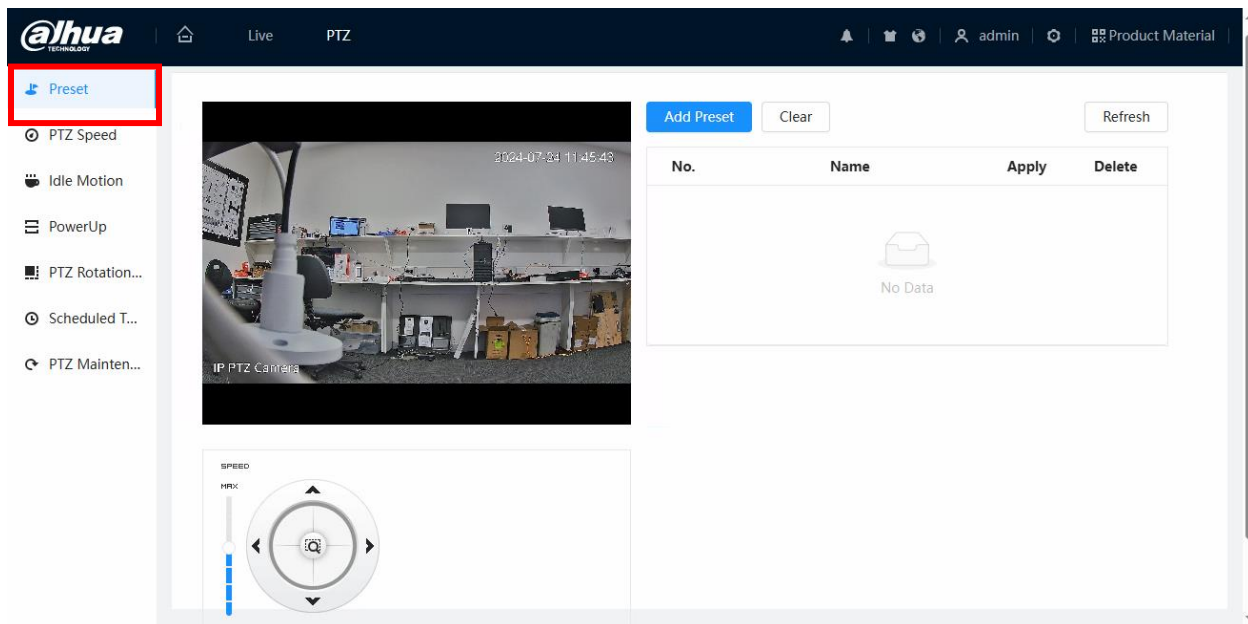

Under the PTZ control tab select the preset and click Add preset button

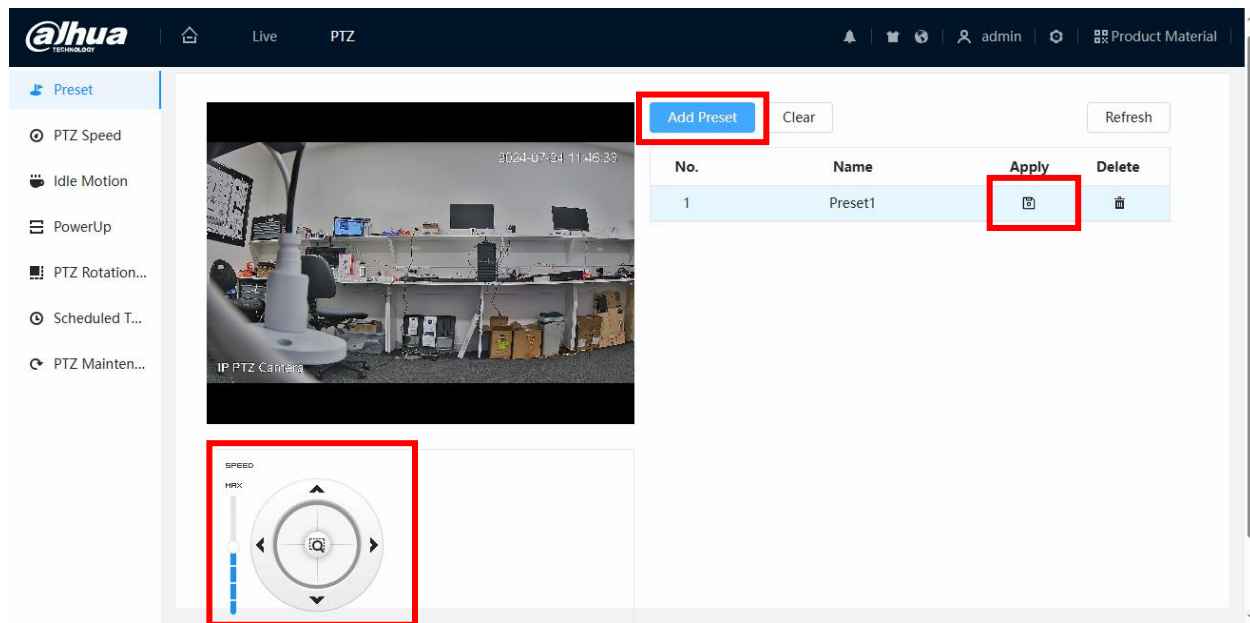


Position the camera to the desired view, add the preset, and then click "Apply."




No.	Name	Apply	Delete
1	Preset1		


Go back to the dashboard and click the AI tab

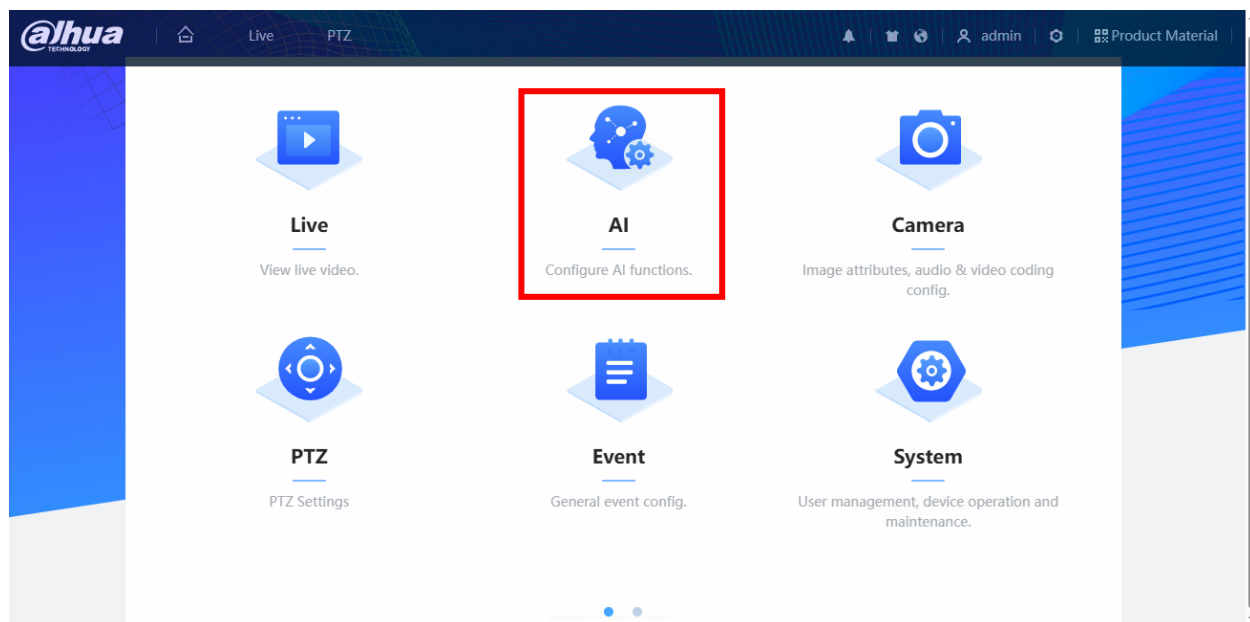


In the AI tab, click the "+ Preset" button and select the preset you created earlier.

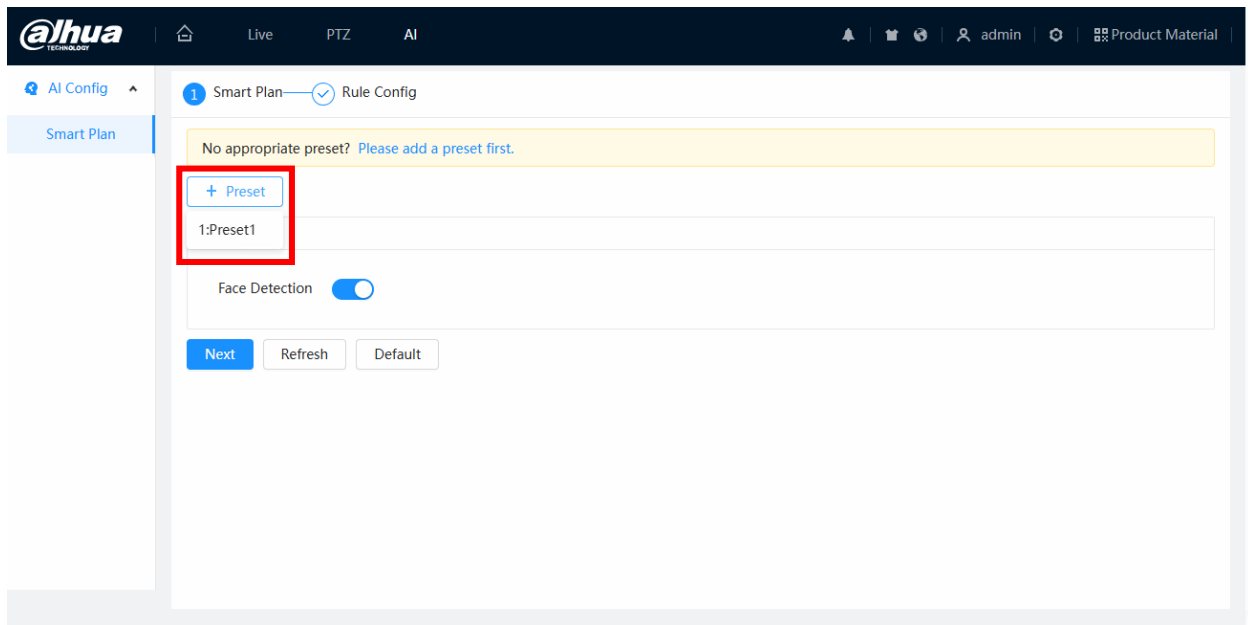


Enable the IVS and click Next

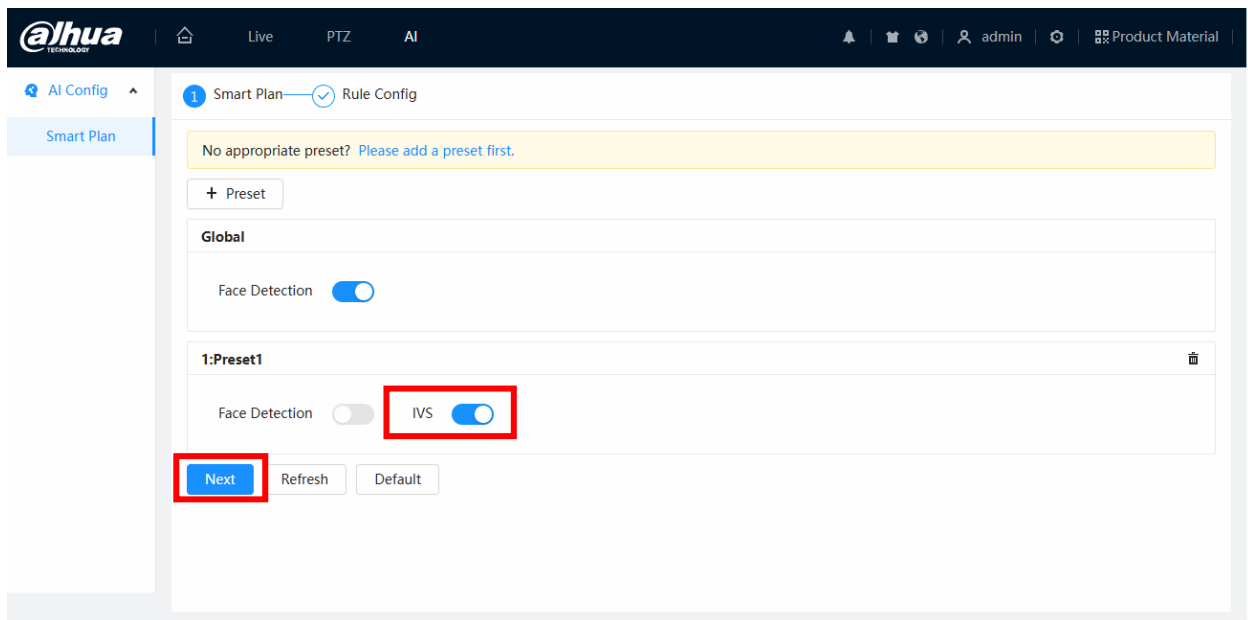


Click the configure on the IVS

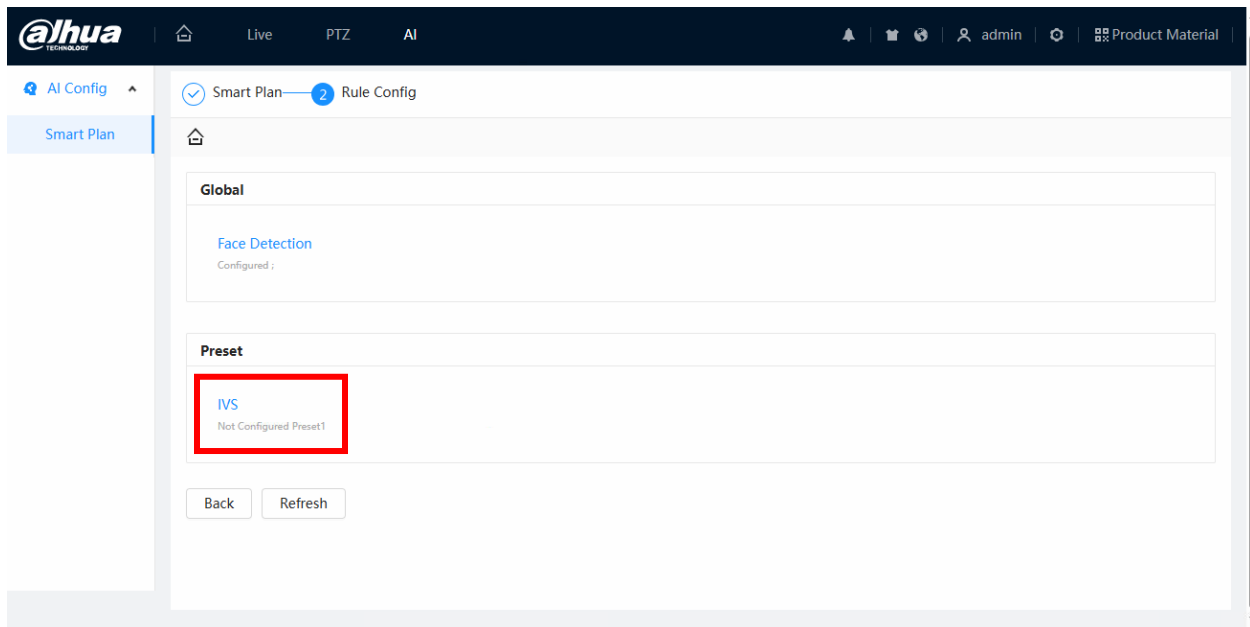


Click the Add rule button

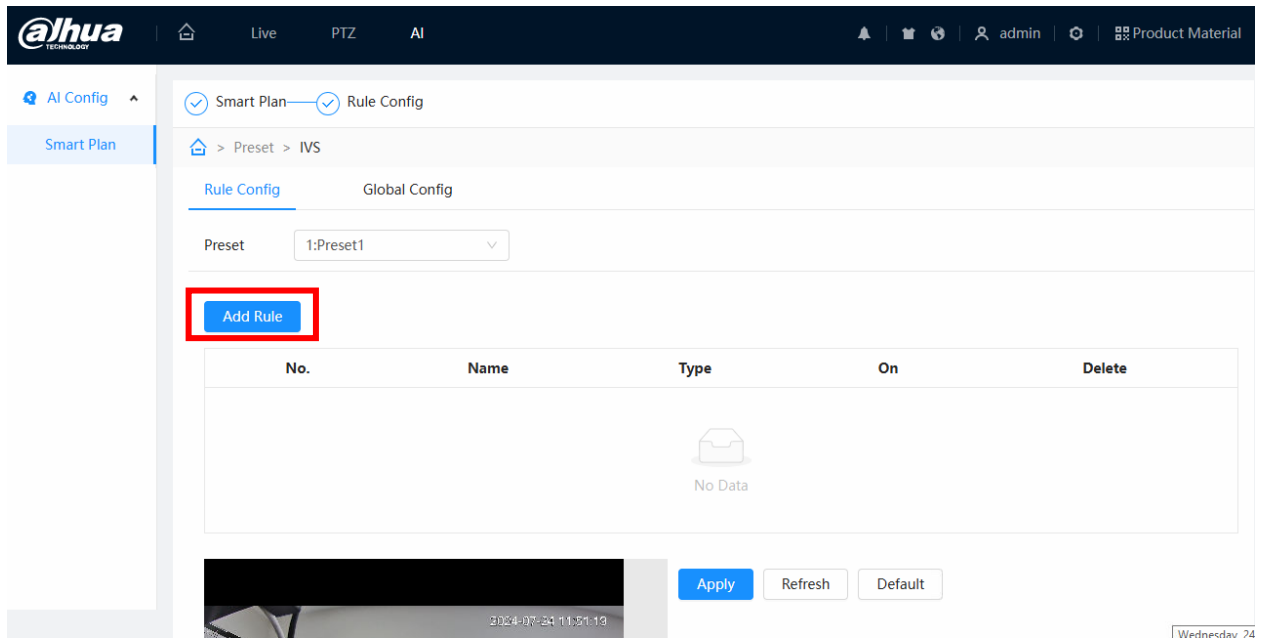


Select Intrusion/Tripwire or other IVS function you want

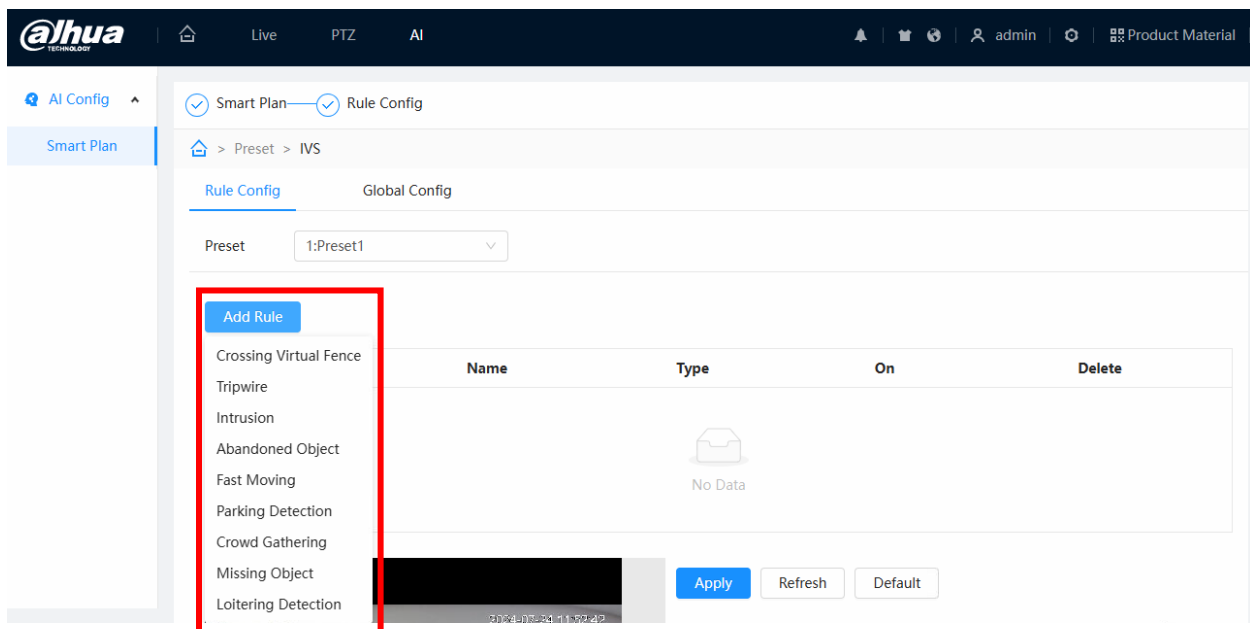

Scroll down the tab and adjust the settings based on your preference. Enable the Auto Tracking Lite function and set up the rule and configurations you want for your IVS.

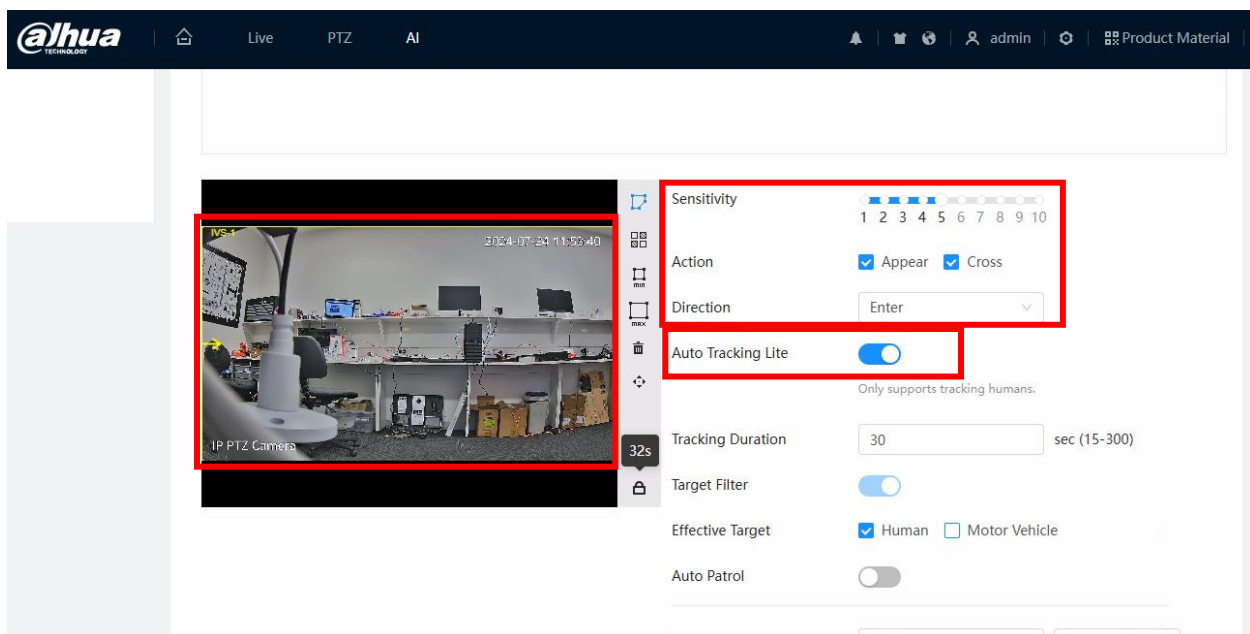

Scroll down the settings, adjust other options such as the light and warning alarm for a TioC camera, or customize settings based on your requirements, then click the apply button.

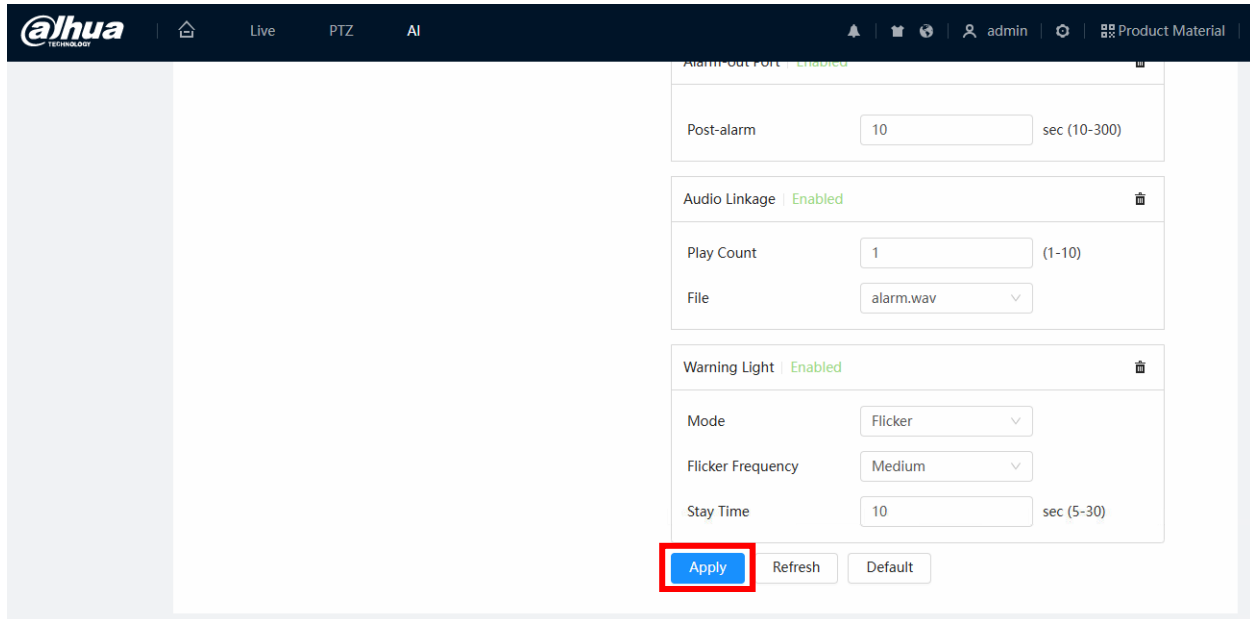

The screenshot shows the Dahua web interface for configuring a TioC camera. The top navigation bar includes the Dahua logo, a home icon, and tabs for Live, PTZ, and AI. On the right, there are icons for notifications, a printer, a globe, a user profile labeled 'admin', a settings gear, and a 'Product Material' link. The main content area displays three settings panels, each with a title and a status indicator (Enabled):

- Alarm-Out Port**: Includes a 'Post-alarm' field set to '10' with a range of 'sec (10-300)'.
- Audio Linkage**: Includes a 'Play Count' field set to '1' with a range of '(1-10)' and a 'File' dropdown menu currently showing 'alarm.wav'.
- Warning Light**: Includes a 'Mode' dropdown set to 'Flicker', a 'Flicker Frequency' dropdown set to 'Medium', and a 'Stay Time' field set to '10' with a range of 'sec (5-30)'.

At the bottom of the settings panels, there are three buttons: 'Apply' (highlighted with a red box), 'Refresh', and 'Default'.