



Technical Quick Guides

Uniview NVR Web remote login via UNV Link Pro


Open the UNV Link Pro App

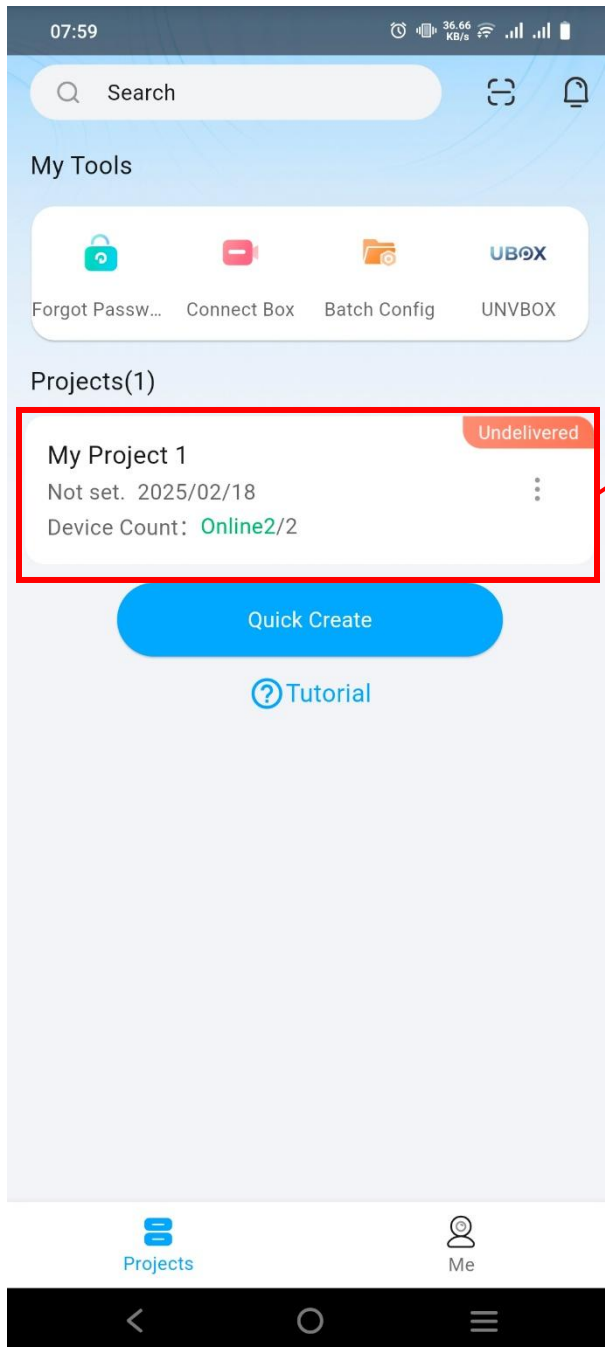


Select **Device**

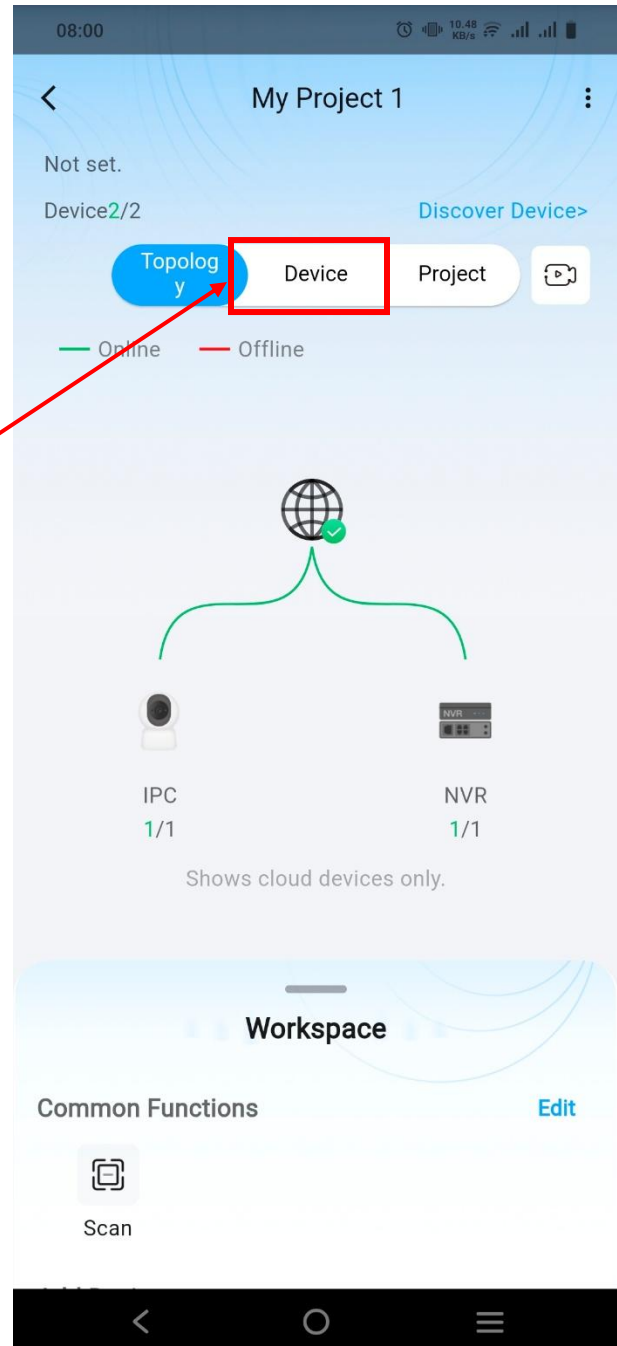


Click All Device(s)

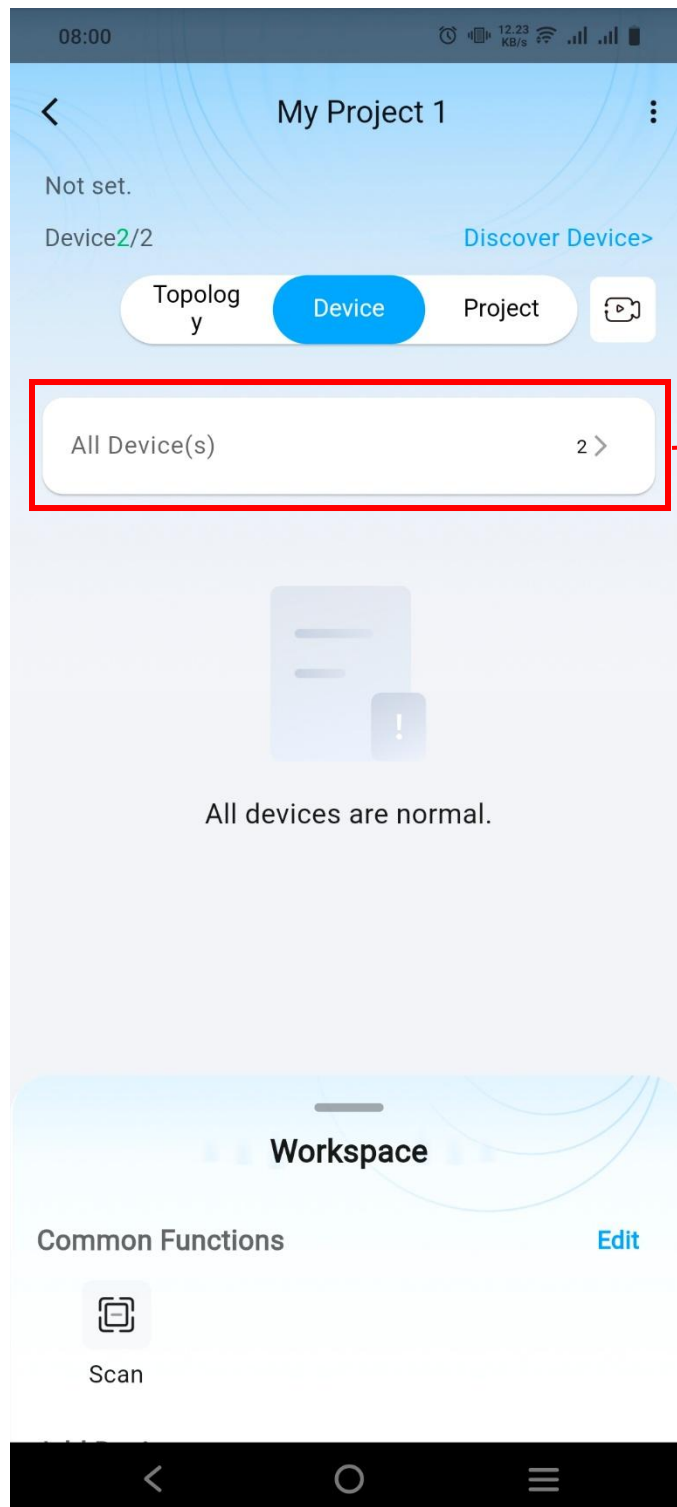


Click the 3 dots at the device you want to access

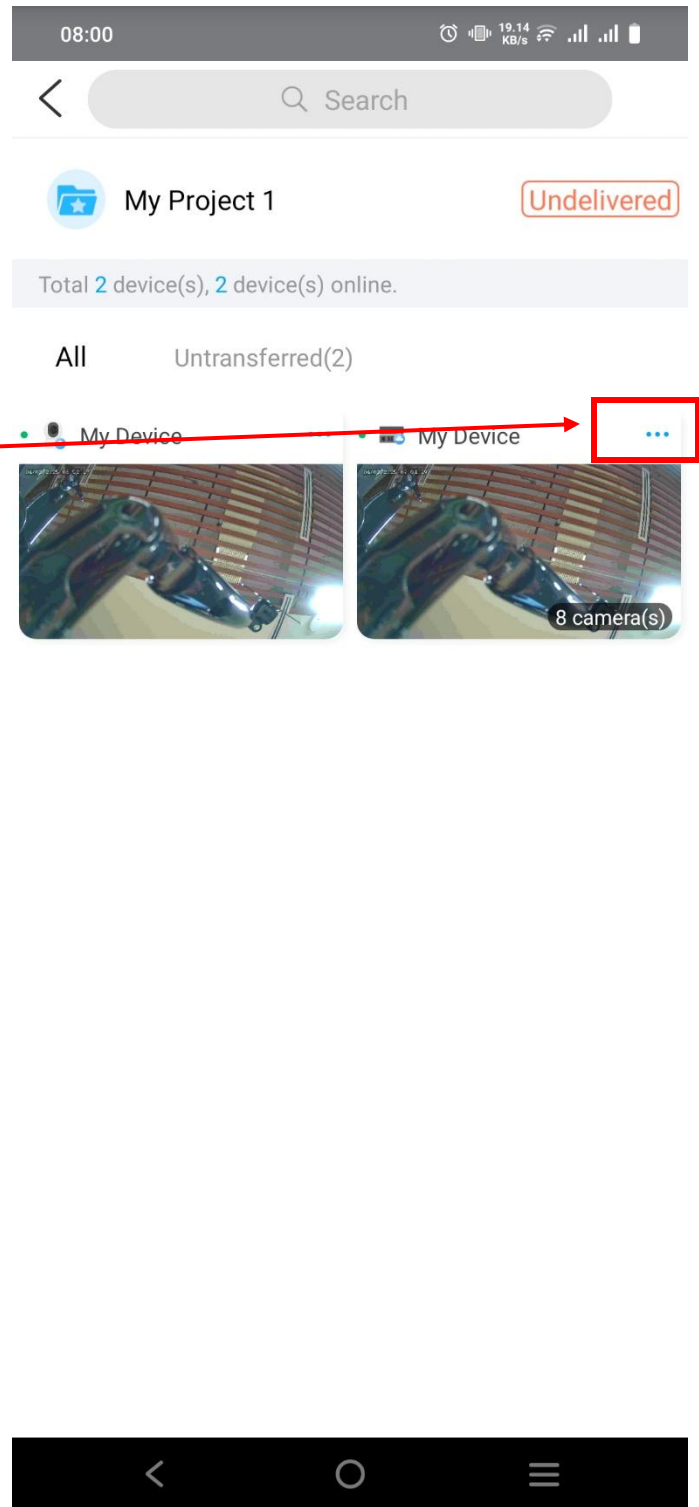


Click Device Config

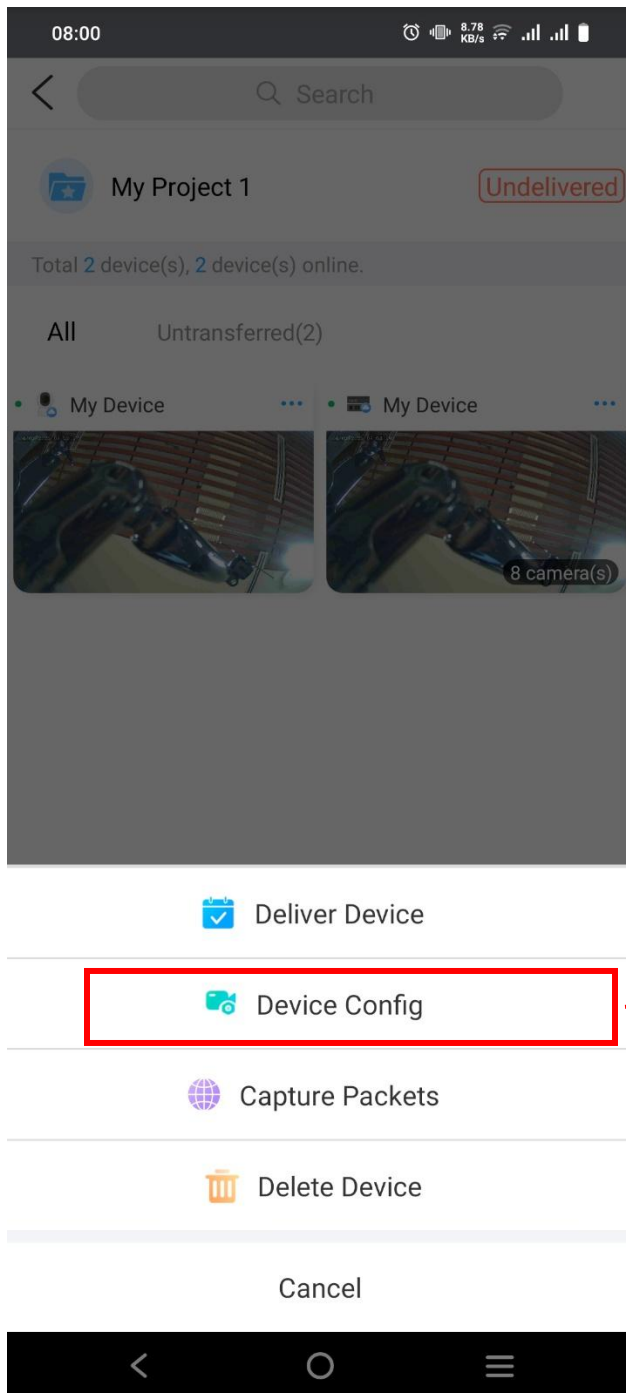

Select **Advance Config**

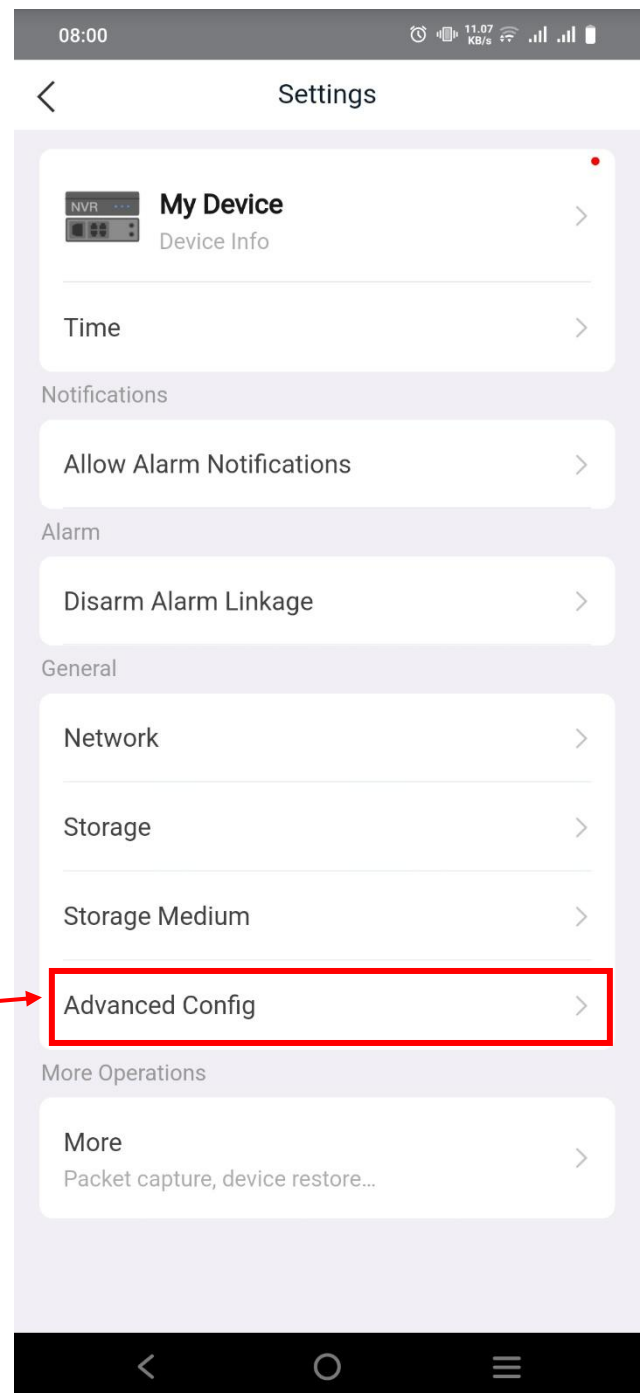

Login the device username and password

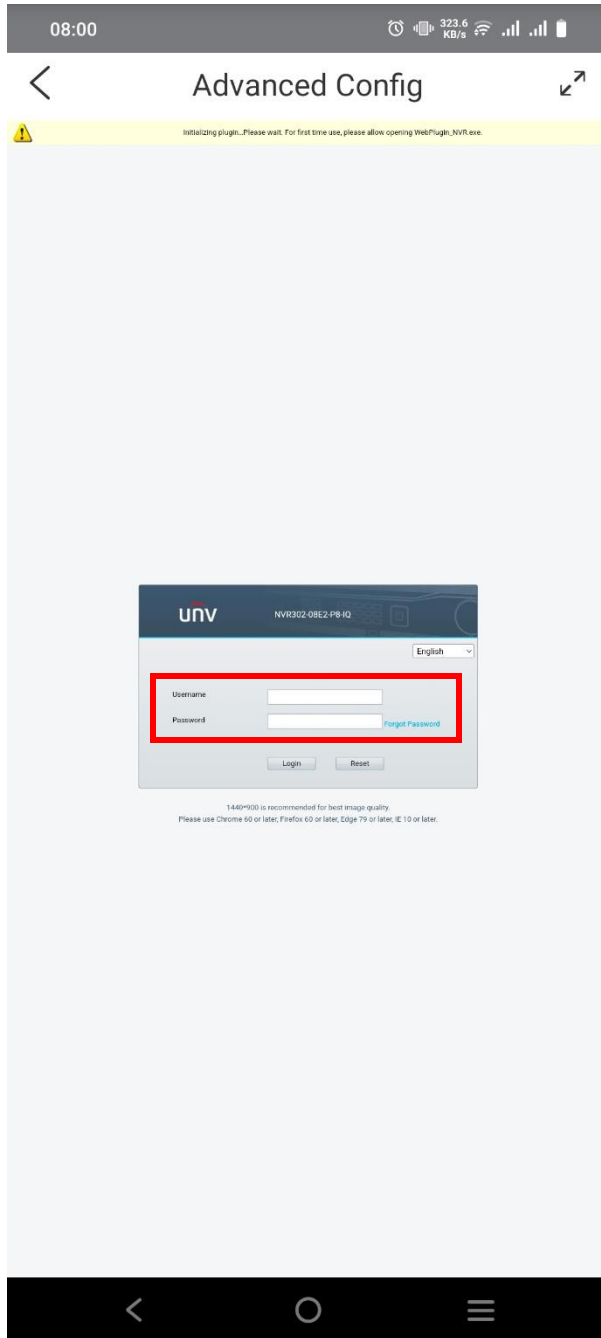

Start remotely login and configure the device

