



Technical Quick Guides

How to Enable Camera WDR/HLC/BLC/SSA


Login first on NVR Interface

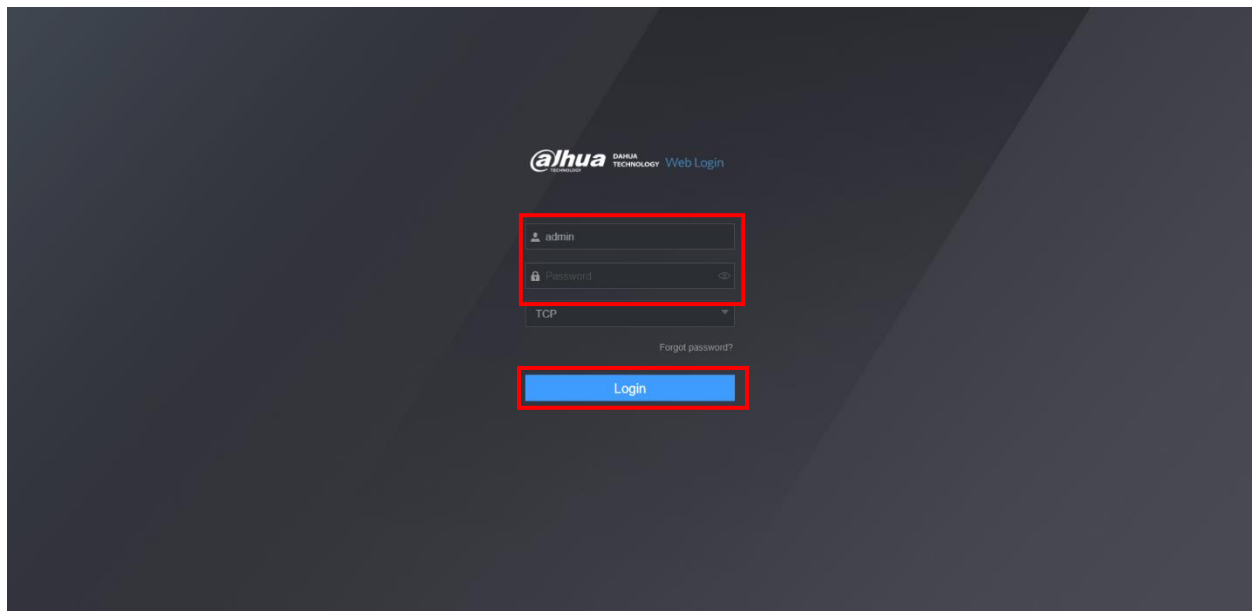

At the upper left corner of the screen → click the **settings** and → select **Camera**

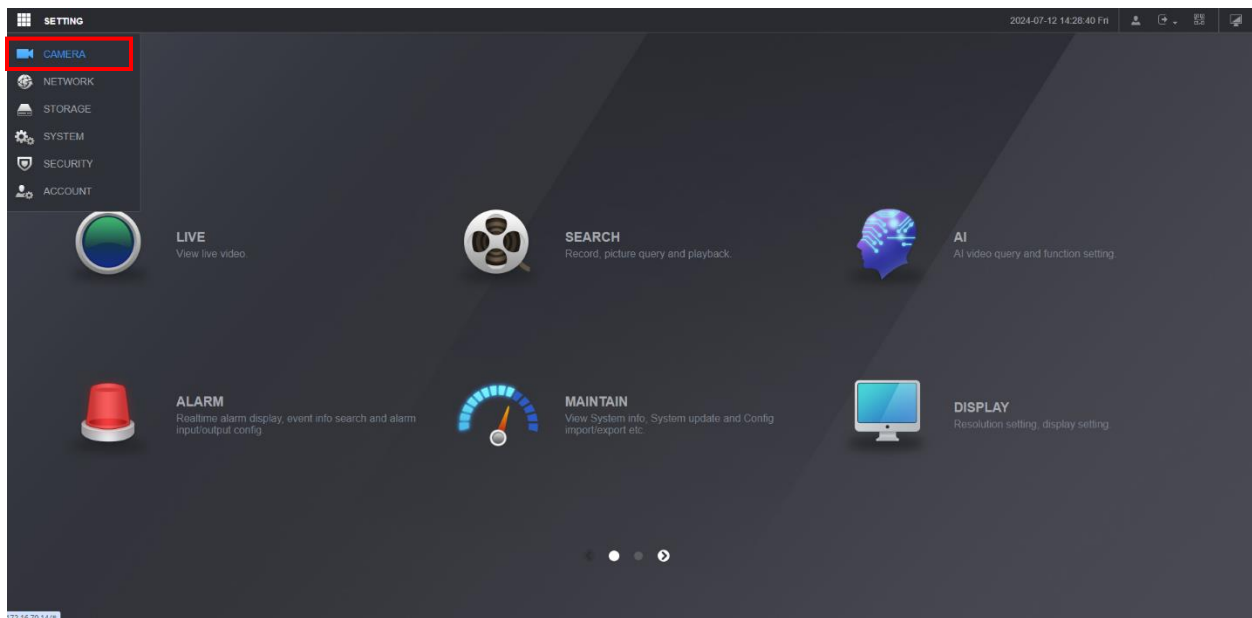

Under **camera tab** → select **Image**

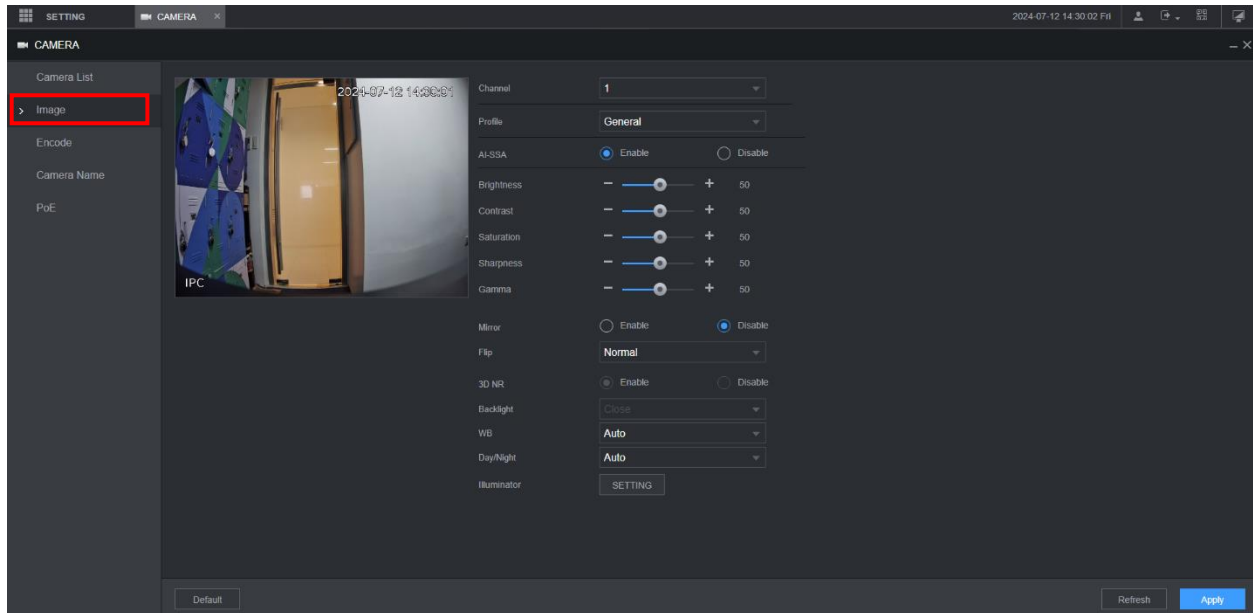

If your camera has the AI-SSA function, it means it can automatically adjust the backlight. However, if you want to manually adjust the WDR, HLC, BLC, or SSA settings, disable the AI-SSA. Under the Backlight section, choose your preferred settings and click "Apply."

