



Technical Quick Guides

Change HDCVI Camera Resolution Output via OSD

Login to the Web interface of the XVR/DVR

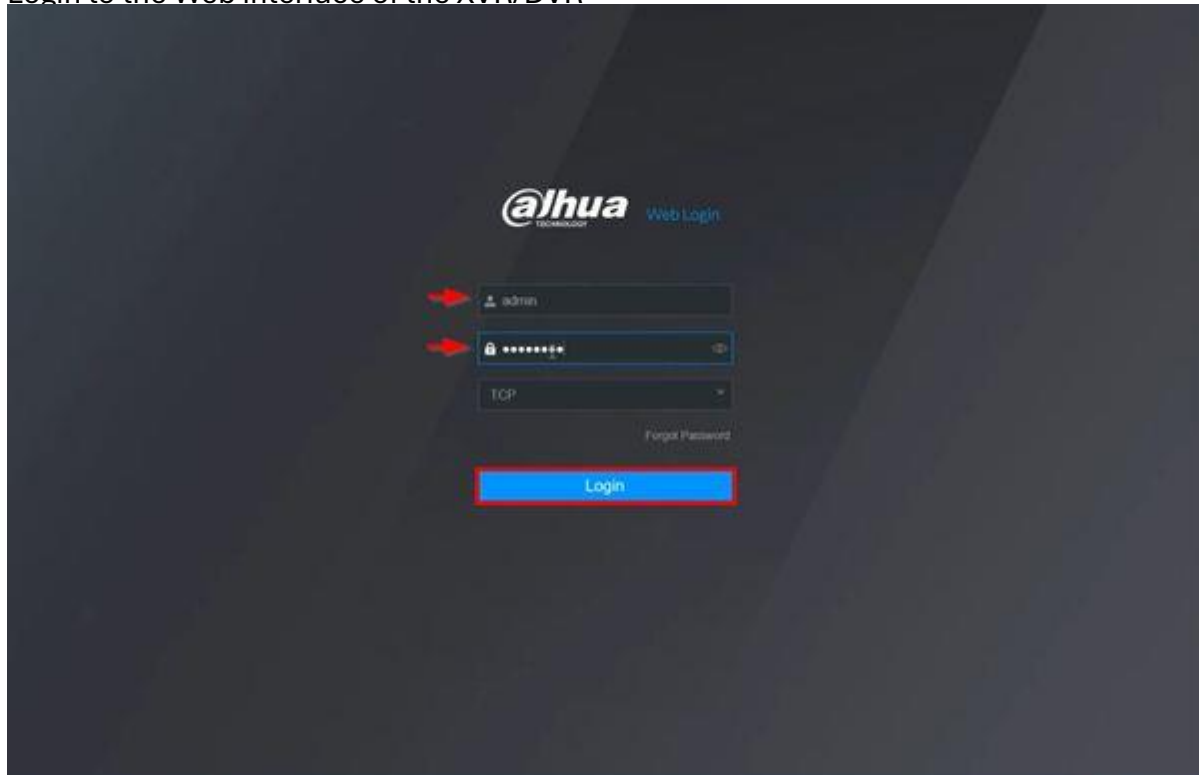


Click the Live section

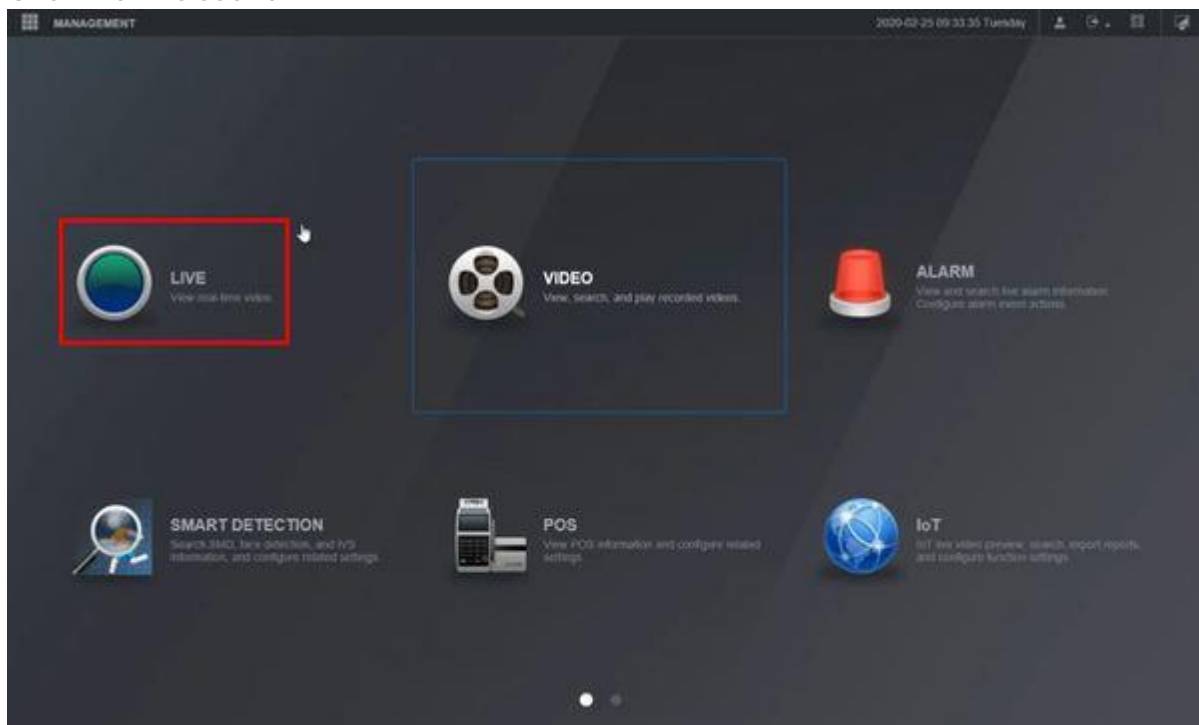


Please contact your local Seadan store for more information & feedback

Use the device tree on the left to select the camera you wish to configure


Click the camera icon next to the camera/channel and it will load in the main window

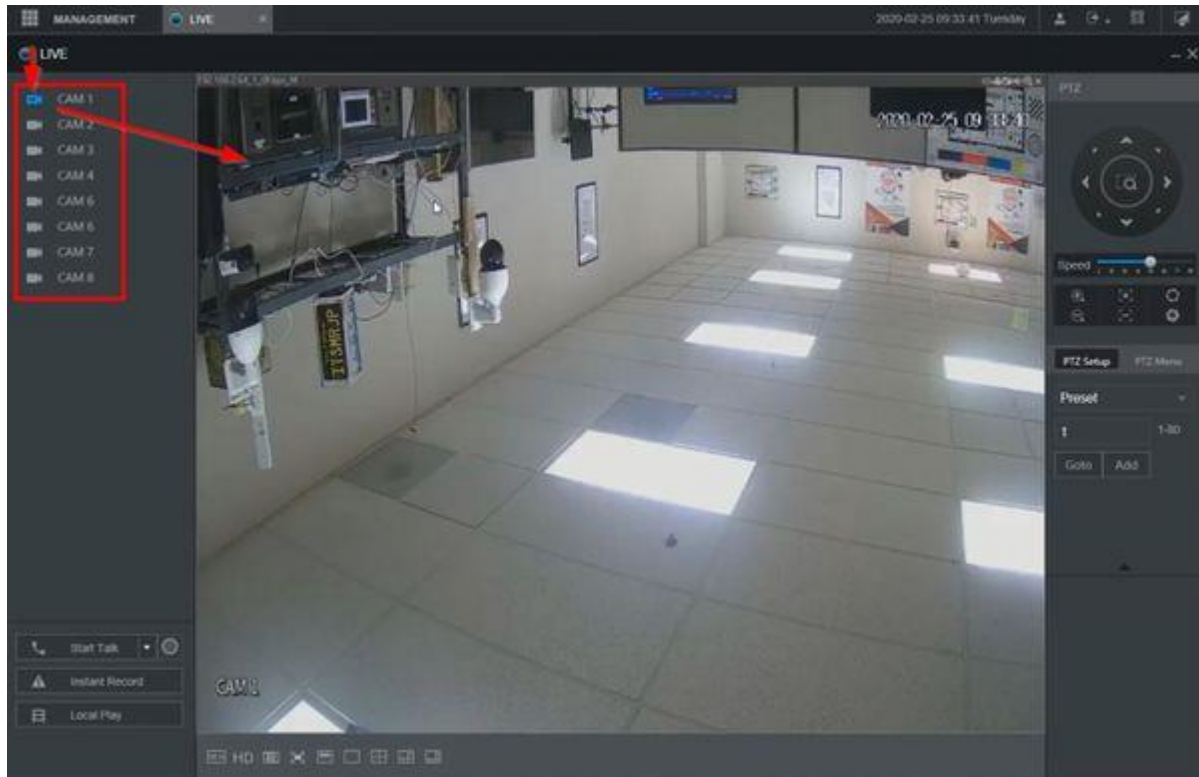


Click the PTZ Menu on the right side of the screen

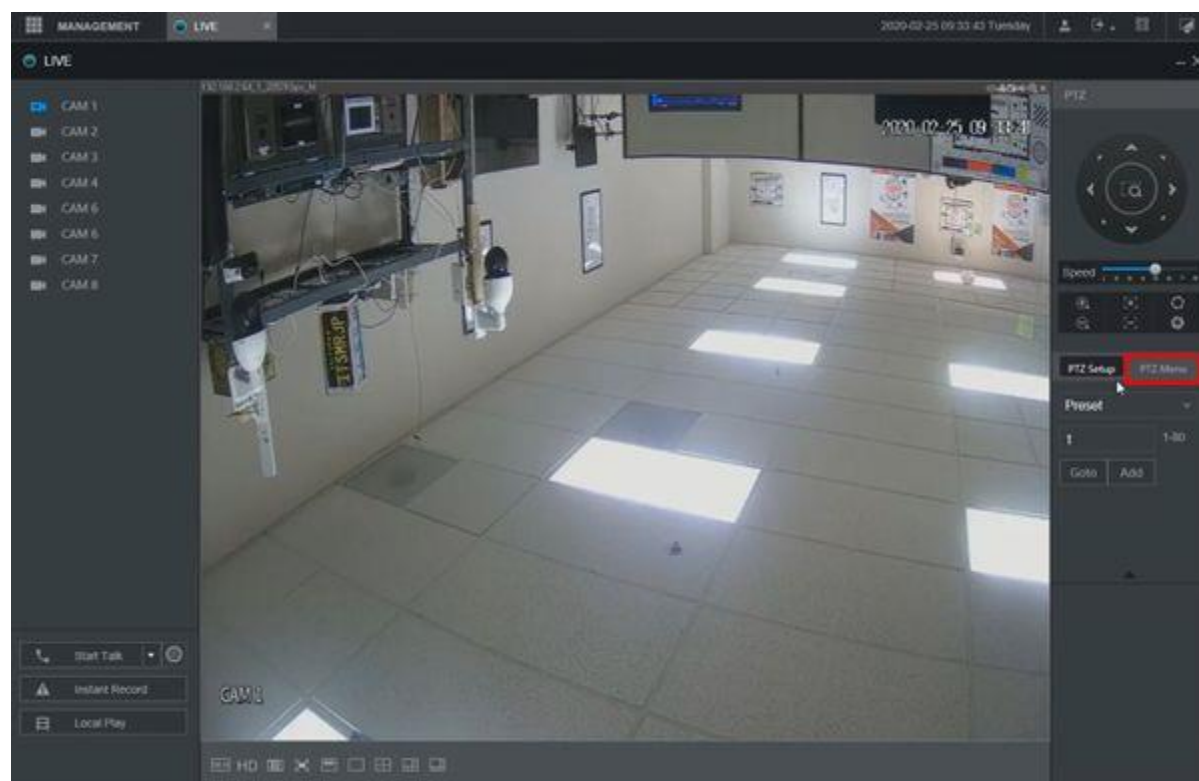

Click the OK / center button on the screen control

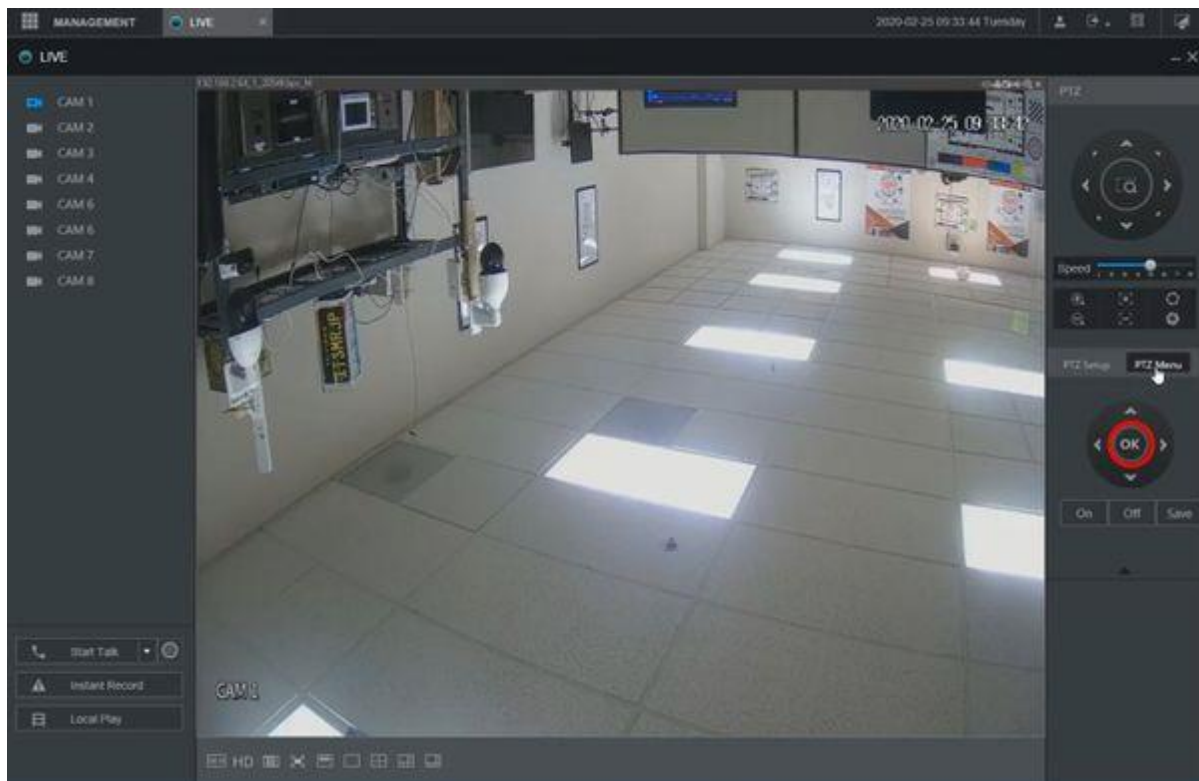


The camera's OSD menu will appear

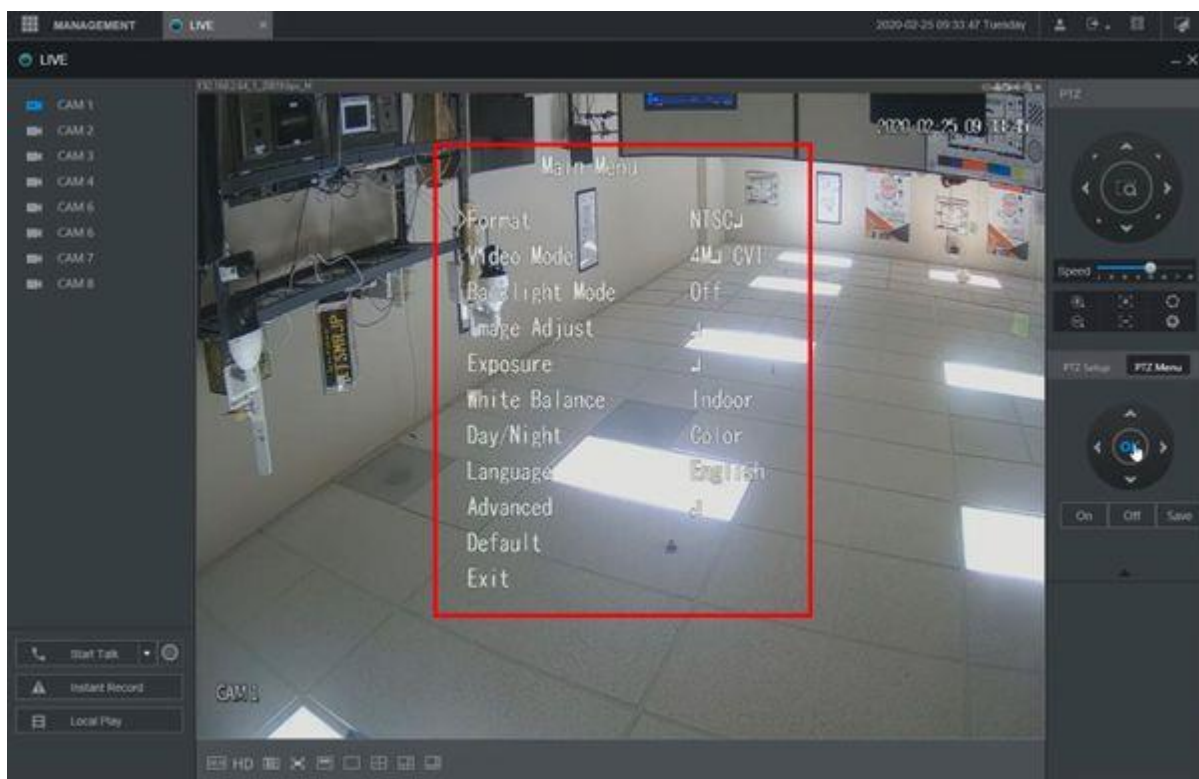


Please contact your local Seadan store for more information & feedback

Use the on-screen controls to navigate the menu

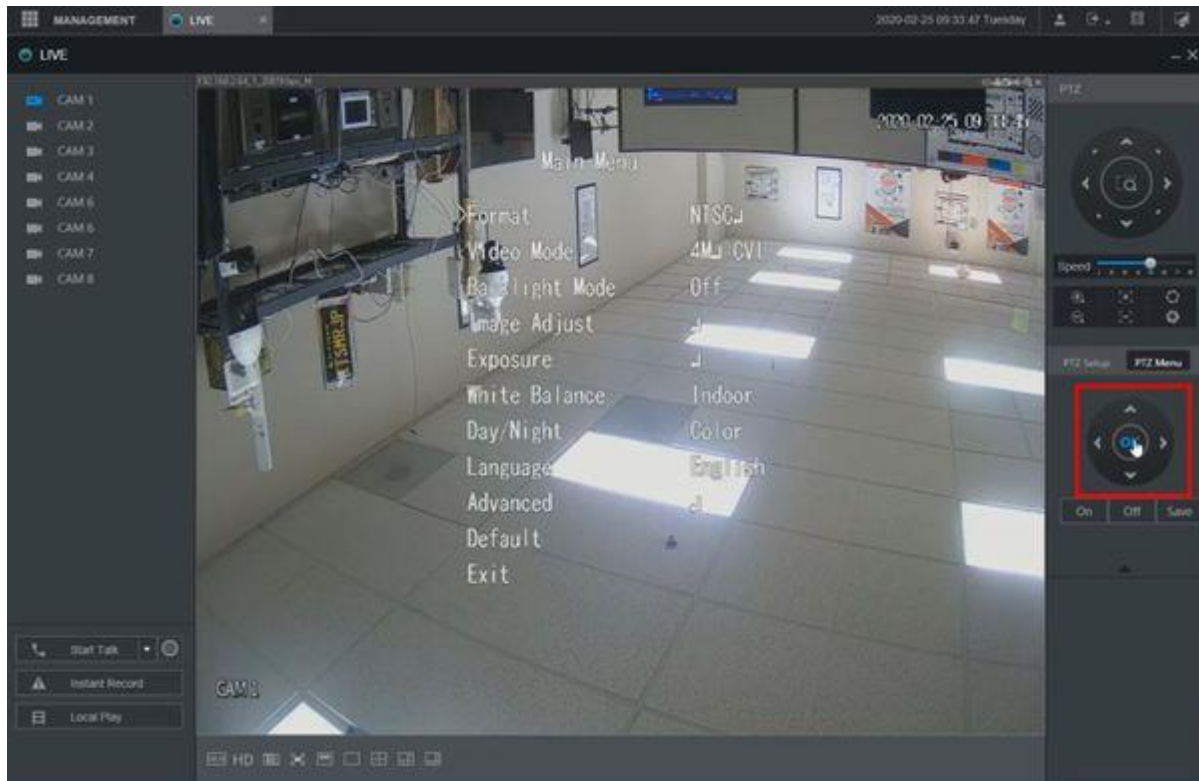


Under the Video Mode


Use the controls to adjust the setting to the desired video mode/resolution.

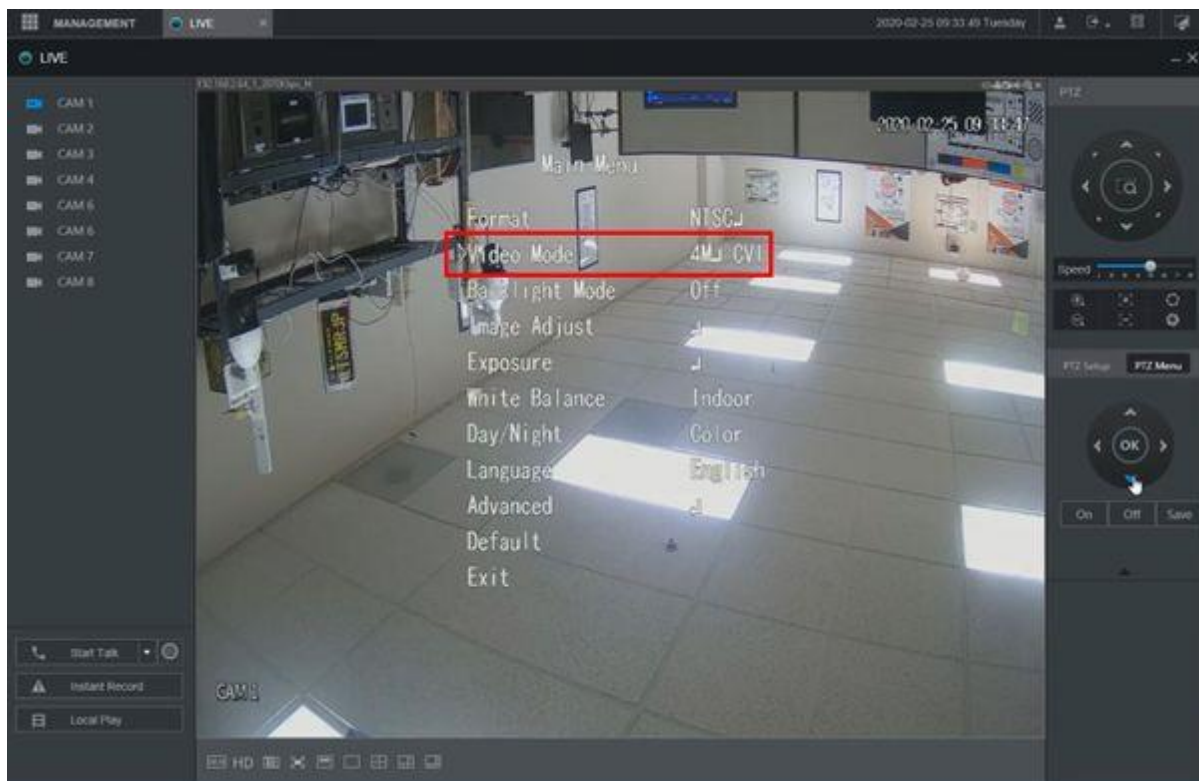


Click the OK / center button to confirm the settings change

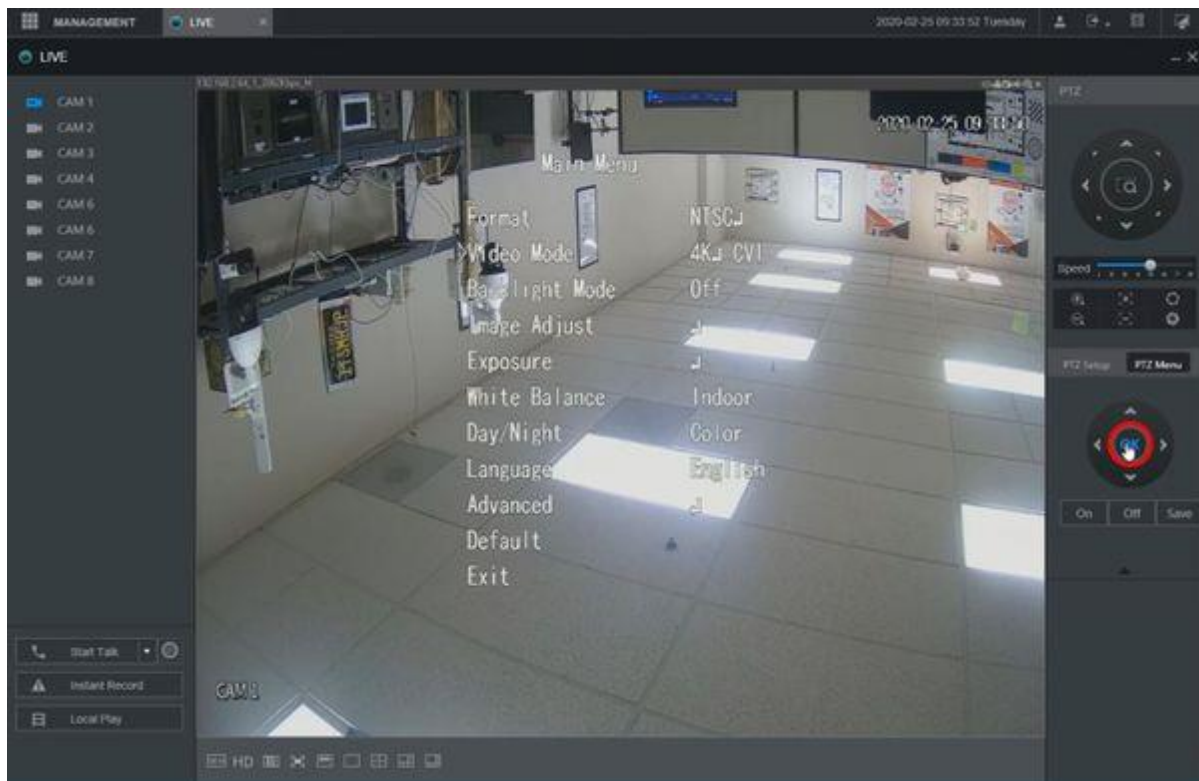

A prompt will appear to confirm, click the center button to confirm

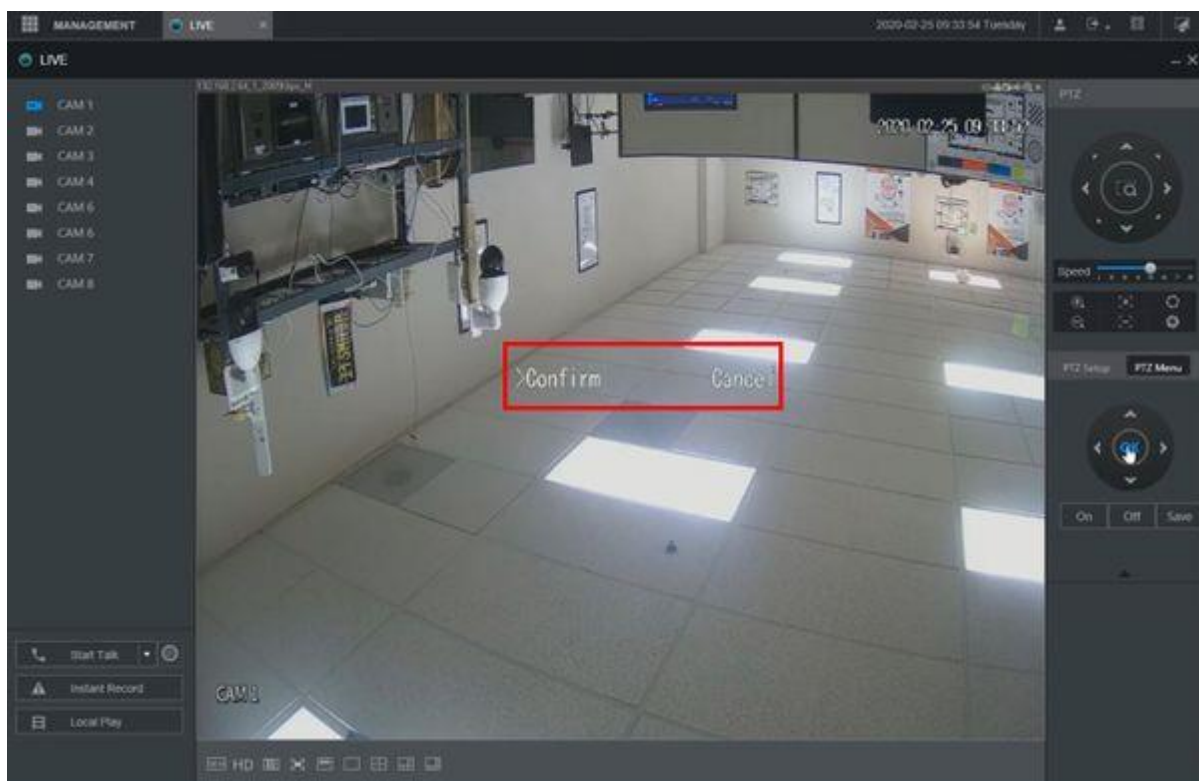

The camera will briefly reboot and then come back in the desired video mode

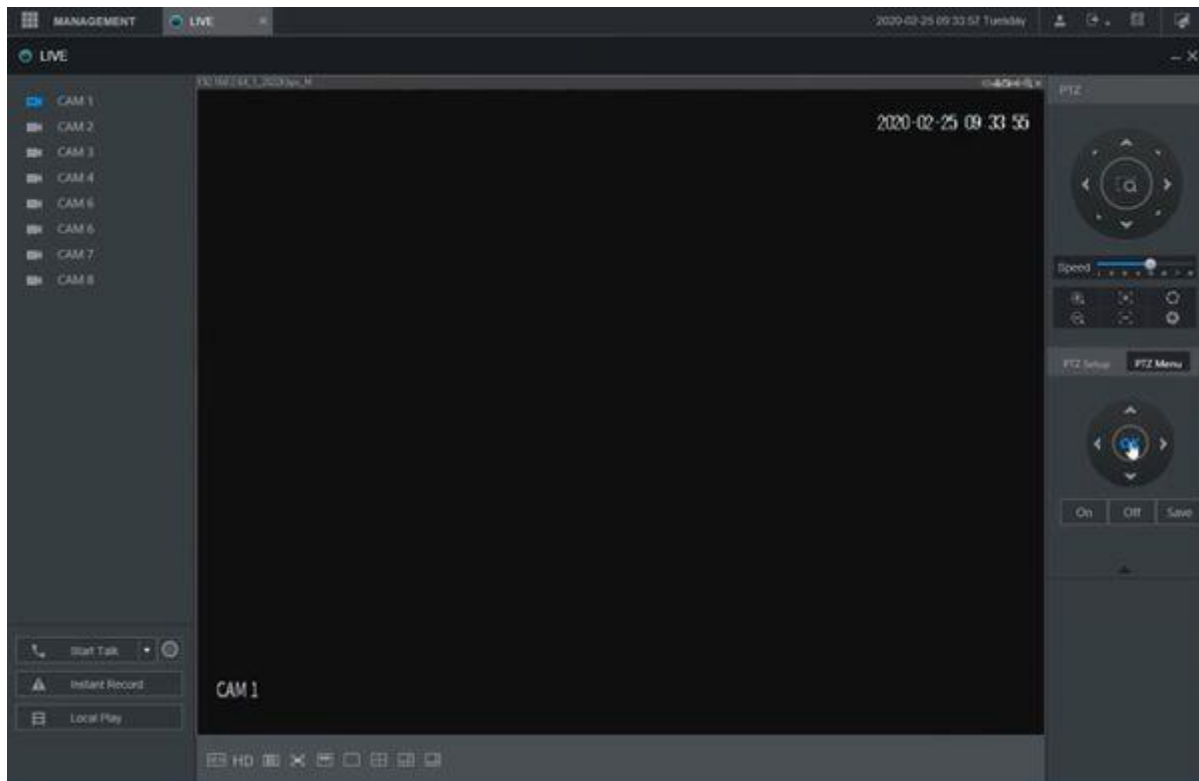

Navigate to exit in the menu to exit the camera's OSD menu

